



Diehl Service Modules GmbH
Vierenkamp 1, 22453 Hamburg, Germany
Phone: +49 40 528722 0
FSCM: C4970

GALLEY G30

PART NUMBER(S):

106113

106113A

COMPONENT MAINTENANCE MANUAL WITH ILLUSTRATED PARTS LIST

COMPONENT MAINTENANCE MANUAL

RECORD OF REVISIONS

REVISION NUMBER	ISSUE DATE	INSERTED DATE	INSERTED BY
A	SEP15/97		
B	NOV05/99		
3	FEB23/04		
4	Mar09/12		

COMPONENT MAINTENANCE MANUAL

REVISION NUMBER	PAGE	DESCRIPTION	DATE	APPROVAL
A	TP	UPDATED TO REFLECT THIS REVISION	SEP15/97	
	ROR 1	LISTING OF REVISIONS		
	ROR 2	LISTING OF REVISED PAGES		
	LEP 1	UPDATED TO REFLECT THIS REVISION		
	LEP 2	UPDATED TO REFLECT THIS REVISION		
	LEP 3	UPDATED TO REFLECT THIS REVISION		
	703	ADDITIONAL ASSEMBLY		
	1036	UPDATED TO REFLECT THIS REVISION		
	1037	UPDATED TO REFLECT THIS REVISION		
	1038	UPDATED TO REFLECT THIS REVISION		
	1039	UPDATED TO REFLECT THIS REVISION		
	1040	UPDATED TO REFLECT THIS REVISION		
B	ALL	UPDATED IN ORDER TO ADD P/N 106113A INTO THE MANUAL	NOV05/99	
3	TP	UPDATED TO REFLECT THIS REVISION		
	ROR 1	LISTING OF REVISIONS		
	ROR 2	LISTING OF REVISED PAGES		
	ROR 3	LISTING OF REVISIONS		
	ROR 4	LISTING OF REVISED PAGES		
	LEP 1	UPDATED TO REFLECT THIS REVISION		
	LEP 2	UPDATED TO REFLECT THIS REVISION		
	LEP 3	UPDATED TO REFLECT THIS REVISION		
	LEP 4	UPDATED TO REFLECT THIS REVISION		
	LEP 5	UPDATED TO REFLECT THIS REVISION		
	LEP 6	UPDATED TO REFLECT THIS REVISION		
	1007-1025	CORRECTION OF P/N AND LAYOUT		
	1025.1-1025.14	CORRECTION OF P/N AND LAYOUT		
	1028-1032	CORRECTION OF P/N AND LAYOUT		
	1035	CORRECTION OF P/N AND LAYOUT		
	1037-1038	CORRECTION OF P/N AND LAYOUT		
	1041-1042	CORRECTION OF P/N AND LAYOUT		
	1045	CORRECTION OF P/N AND LAYOUT		
	1047	CORRECTION OF P/N AND LAYOUT		
	1049	CORRECTION OF P/N AND LAYOUT		
	1051	CORRECTION OF P/N AND LAYOUT		
	1053	CORRECTION OF P/N AND LAYOUT		

COMPONENT MAINTENANCE MANUAL

REVISION NUMBER	PAGE	DESCRIPTION	DATE	APPROVAL
3	1055	CORRECTION OF P/N AND LAYOUT	FEB23/04	
	1057	CORRECTION OF P/N AND LAYOUT		
	1059	CORRECTION OF P/N AND LAYOUT		
	1061	CORRECTION OF P/N AND LAYOUT		
	1063	CORRECTION OF P/N AND LAYOUT		
	1065	CORRECTION OF P/N AND LAYOUT		
	1067	CORRECTION OF P/N AND LAYOUT		
	1069	CORRECTION OF P/N AND LAYOUT		
	1071	CORRECTION OF P/N AND LAYOUT		
	1073	CORRECTION OF P/N AND LAYOUT		
	1075	CORRECTION OF P/N AND LAYOUT		
	1077	CORRECTION OF P/N AND LAYOUT		
	1079	CORRECTION OF P/N AND LAYOUT		
	1081	CORRECTION OF P/N AND LAYOUT		
	1083	CORRECTION OF P/N AND LAYOUT		
	1085	CORRECTION OF P/N AND LAYOUT		
	1087	CORRECTION OF P/N AND LAYOUT		
	1089	CORRECTION OF P/N AND LAYOUT		
	1091	CORRECTION OF P/N AND LAYOUT		
	1093	CORRECTION OF P/N AND LAYOUT		
	1095-1096	CORRECTION OF P/N AND LAYOUT		
	1099-1101	CORRECTION OF P/N AND LAYOUT		
	1103-1105	CORRECTION OF P/N AND LAYOUT		
	1107-1111	CORRECTION OF P/N AND LAYOUT		
	1113-1116	CORRECTION OF P/N AND LAYOUT		
	1119-1121	CORRECTION OF P/N AND LAYOUT		
	1123-1126	CORRECTION OF P/N AND LAYOUT		
4	TP	UPDATED TO REFLECT THIS REVISION	Mar 09/12	
	ROR 1 – ROR 4	LISTING OF REVISIONS		
	LEP 1 – LEP 6	UPDATED TO REFLECT THIS REVISION		
	INTRO 1 – INTRO 2	UPDATED TO REFLECT THIS REVISION		
	401 - 404	UPDATED TO REFLECT THIS REVISION		
	601 - 612	UPDATED TO REFLECT THIS REVISION		
	1001	UPDATED TO REFLECT THIS REVISION		
	1007 – 1032	UPDATED TO REFLECT THIS REVISION		
	1056 - 1061	CORRECTION OF P/N AND LAYOUT		

COMPONENT MAINTENANCE MANUAL

INTENTIONALLY LEFT BLANK

COMPONENT MAINTENANCE MANUAL

LIST OF EFFECTIVE PAGES

SUBJECT	PAGE	DATE
Title Page	TP	Mar 09/12
Record of Revisions	ROR 1	Mar 09/12
	ROR 2	Mar 09/12
	ROR 3	Mar 09/12
	ROR 4	Mar 09/12
List of Effective Pages	LEP 1	Mar 09/12
	LEP 2	Mar 09/12
	LEP 3	Mar 09/12
	LEP 4	Mar 09/12
	LEP 5	Mar 09/12
	LEP 6	Mar 09/12
Table of Content	TC 1	NOV05/99
	TC2	Blank
Introduction	INTRO 1	Mar 09/12
	INTRO 2	Mar 09/12
Description and Operation	1	NOV05/99
	2	Blank
Testing and Fault Isolation	101	NOV05/99
	102	NOV05/99
	103	NOV05/99
	104	NOV05/99
	105	NOV05/99
	106	NOV05/99
	107	NOV05/99
	108	NOV05/99
	109	NOV05/99
	110	Blank
	111	NOV05/99
	112	NOV05/99
Disassembly	301	NOV05/99
	302	Blank

COMPONENT MAINTENANCE MANUAL

LIST OF EFFECTIVE PAGES

SUBJECT	PAGE	DATE
Cleaning	401	Mar 09/12
	402	Mar 09/12
	403	Mar 09/12
	404	Blank
Check	501	NOV05/99
	502	NOV05/99
	503	NOV05/99
	504	Blank
Repair	601	Mar 09/12
	602	Mar 09/12
	603	Mar 09/12
	604	Mar 09/12
	605	Mar 09/12
	606	Mar 09/12
	607	Mar 09/12
	608	Mar 09/12
	609	Mar 09/12
	610	Mar 09/12
	611	Mar 09/12
	612	Blank
Assembly	701	NOV05/99
	702	NOV05/99
	703	NOV05/99
	704	Blank
Fits and Clearances	801	NOV05/99
	802	Blank
Special Tools, Fixtures and Equipment	901	NOV05/99
	902	Blank
Illustrated Parts List	1001	Mar 09/12
	1002	NOV05/99
	1003	NOV05/99
	1004	NOV05/99

COMPONENT MAINTENANCE MANUAL

LIST OF EFFECTIVE PAGES

SUBJECT	PAGE	DATE
	1005	NOV05/99
	1006	NOV05/99
	1007	Mar 09/12
	1008	Mar 09/12
	1009	Mar 09/12
	1010	Mar 09/12
	1011	Mar 09/12
	1012	Mar 09/12
	1013	Mar 09/12
	1014	Mar 09/12
	1015	Mar 09/12
	1016	Mar 09/12
	1017	Mar 09/12
	1018	Mar 09/12
	1019	Mar 09/12
	1020	Mar 09/12
	1021	Mar 09/12
	1022	Mar 09/12
	1023	Mar 09/12
	1024	Mar 09/12
	1025	Mar 09/12
	1025.1	Mar 09/12
	1025.2	Mar 09/12
	1025.3	Mar 09/12
	1025.4	Mar 09/12
	1025.5	Mar 09/12
	1025.6	Mar 09/12
	1025.7	Mar 09/12
	1025.8	Mar 09/12
	1025.9	Mar 09/12
	1025.10	Mar 09/12
	1025.11	Mar 09/12
	1025.12	Mar 09/12
	1025.13	Mar 09/12
	1026	Mar 09/12
	1027	Mar 09/12
	1028	Mar 09/12
	1029	Mar 09/12
	1030	Mar 09/12

COMPONENT MAINTENANCE MANUAL

LIST OF EFFECTIVE PAGES

SUBJECT	PAGE	DATE
	1031	Mar 09/12
	1032	Mar 09/12
	1033	Blank
	1034	NOV05/99
	1035	FEB23/04
	1036	NOV05/99
	1037	FEB23/04
	1038	FEB23/04
	1039	Blank
	1040	NOV05/99
	1041	FEB23/04
	1042	FEB23/04
	1043	Blank
	1044	NOV05/99
	1045	FEB23/04
	1046	NOV05/99
	1047	FEB23/04
	1048	NOV05/99
	1049	FEB23/04
	1050	NOV05/99
	1051	FEB23/04
	1052	NOV05/99
	1053	FEB23/04
	1054	NOV05/99
	1055	FEB23/04
	1056	Mar 09/12
	1057	Mar 09/12
	1058	Mar 09/12
	1059	Mar 09/12
	1060	Mar 09/12
	1061	Mar 09/12
	1062	NOV05/99
	1063	FEB23/04
	1064	NOV05/99
	1065	FEB23/04
	1066	NOV05/99
	1067	FEB23/04
	1068	NOV05/99
	1069	FEB23/04

COMPONENT MAINTENANCE MANUAL

LIST OF EFFECTIVE PAGES		
SUBJECT	PAGE	DATE
	1070	NOV05/99
	1071	FEB23/04
	1072	NOV05/99
	1073	FEB23/04
	1074	NOV05/99
	1075	FEB23/04
	1076	NOV05/99
	1077	FEB23/04
	1078	NOV05/99
	1079	FEB23/04
	1080	NOV05/99
	1081	FEB23/04
	1082	NOV05/99
	1083	FEB23/04
	1084	NOV05/99
	1085	FEB23/04
	1086	NOV05/99
	1087	FEB23/04
	1088	NOV05/99
	1089	FEB23/04
	1090	NOV05/99
	1091	FEB23/04
	1092	NOV05/99
	1093	FEB23/04
	1094	NOV05/99
	1095	FEB23/04
	1096	FEB23/04
	1097	NOV05/99
	1098	NOV05/99
	1099	FEB23/04
	1100	FEB23/04
	1101	FEB23/04
	1102	NOV05/99
	1103	FEB23/04
	1104	FEB23/04
	1105	FEB23/04
	1106	NOV05/99
	1107	FEB23/04
	1108	FEB23/04

COMPONENT MAINTENANCE MANUAL

LIST OF EFFECTIVE PAGES

SUBJECT	PAGE	DATE
	1109	FEB23/04
	1110	FEB23/04
	1111	FEB23/04
	1112	NOV05/99
	1113	FEB23/04
	1114	FEB23/04
	1115	FEB23/04
	1116	FEB23/04
	1117	Blank
	1118	NOV05/99
	1119	FEB23/04
	1120	FEB23/04
	1121	FEB23/04
	1122	NOV05/99
	1123	FEB23/04
	1124	FEB23/04
	1125	FEB23/04
	1126	Blank



COMPONENT MAINTENANCE MANUAL 106113 / 106113A

TABLE OF CONTENTS

	PAGE
INTRODUCTION	INTRO 1
DESCRIPTION AND OPERATION	1
TESTING AND FAULT ISOLATION	101
DISASSEMBLY	301
CLEANING	401
CHECK	501
REPAIR	601
ASSEMBLY (INCLUDING STORAGE)	701
FITS AND CLEARANCES	801
SPECIAL TOOLS, FIXTURES AND EQUIPMENT	901
ILLUSTRATED PARTS LIST	1001

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

INTRODUCTION

1. General

This manual has been compiled in accordance with the requirements set out in ATA specification 100. It includes the maintenance and repair instructions of the unit.

2. Manufacturing

This unit is manufactured by:

Diehl Service Modules GmbH
(formerly known as Mühlenberg Interiors GmbH & Co. KG)
Vierenkamp 1
22453 Hamburg
Germany
FSCM: C4970

phone: +49 (0) 40 528722 0
fax: +49 (0) 40 528722 11

e-mail: tech.doc@diehl-service-modules.com
www.diehl-service-modules.com

3. Layout of manual

This manual contains a general description and operation followed by data for maintenance, repair, disassembly and assembly of the unit. This is followed by an Illustrated Parts List which gives detailed information.

4. Revision Service

This manual will be updated as required by revisions. Service Bulletins may be issued separately. Their effect on the manual will, however, be evident by reissue of the Service Bulletin as appropriate.

5. Shop Verification

These sections within this manual have been verified at the manufacturers the disassembly, assembly and testing instructions by actually performing the functions covered in their respective sections.

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

6. List of Abbreviations:

A	- ampere
ac	- aircraft
AC	- alternating current
acc	- according
Amend.	- Amendment
approx.	- approximately
AR	- as required
ASSY	- assembly
CG	- center of gravity
cm	- centimeter
DC	- direct current
DET	- detail
EFF	- effective
FIG	- Figure
h	- hour
IDENT	- Identification
in	- inch
inbd	- inboard
INT	- intentionally
INTRO	- Introduction
IPL	- Illustrated parts list
kg	- kilogramm
l	- liter
lbs	- pounds
LH	- left hand
LHR	- low heat release
m	- meter
MEK	- methyl-ethyl-ketone
MGW	- maximum gross weight
MISCL	- miscellaneous
mm	- millimeter
NHA	- next higher assembly
NP	- not procurable
outbd	- outboard
PN	- partnumber
PVC	- poly vinyl chloride
RF	- reference
REQ	- required
RH	- right hand
TTL	- total
V	- voltage

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DESCRIPTION AND OPERATION

1. Description

A. Technical Data

Height	2086	mm	82.13	in
Width	2965	mm	116.73	in
Depth	1105	mm	43.50	in

Note: Upper attachments and other equipment are not included in the height dimensions.

B. Structure

The basic structure of the unit consists of Nomex-Honeycomb-Panel and aluminium sections screwed into self locking threaded inserts.

2. Operation

A. Doors

Doors can be opened when the latch handle is operated. After storage or removal of items, the doors are locked in the stowed position by pushing until latch bolt engages into strike.

Caution: Do not use side-hinged doors as a brace or handhold. Do not close doors by kicking.

Note: Do not attempt to place more weight in any compartment than it's allowed, shown by the safety placard within the compartment.

B. Trolleys

All trolleys of other equipment are equipped with revolving catches to secure the equipment in its compartments.

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

TESTING AND FAULT ISOLATION

1. General

A. Authorized Workshops

Defective items must be repaired by authorized workshops or be changed for serviceable items. Care should be taken only original parts are used.

B. Visual check

Check all cables and electric units for proper fit. Remove dirt, dust or any residue if necessary.

C. Test Equipment

Use only calibrated equipment as described below.

<u>Equipment</u>	<u>Description</u>
Resistance measuring device	0-100 kOhms
Voltage measuring device	0-250 V AC, 400 Hz
Insulation resistance measuring device	Megaohm bridge or hand crank generator, 0-500 Megaohms at 500 V DC
Dielectric measuring device	1000-1500 V AC, 50-60 Hz, max. current 2mA

Note: All equipment is commercially available.

D. Test setup

Test unit with all lamps and electrical components installed.

2. Dielectric Test

A. General

Dielectric test must be performed at the end of each overhaul. After completion of dielectric test the insulation resistance test must be performed.



COMPONENT MAINTENANCE MANUAL

106113 / 106113A

Caution: Dielectric check criteria vary for individual components. To avoid component damage, carefully follow check procedures and prescribed voltage when performing these checks on general wiring or individual components.

B. Test procedure for dielectric test at 1500 V AC, 50 Hz

Dielectric test is performed with each wire in each cable bundle against all other wires in the bundle and against the box structure.
Maximum fault current allowed must not exceed 2.0 mA.

Caution: Pay attention to general safety rules.

C. Test procedure for dielectric test at 1500 V AC, 60 Hz

Dielectric test is performed with each wire in each cable bundle against all other wires in the bundle and against the box structure.
Maximum fault current allowed must not exceed 2.0 mA.

Caution: Pay attention to general safety rules.

3. Insulation resistance test

A. General

Insulation resistance test must be performed after completion of dielectric test.

Caution: Insulation resistance check criteria vary for individual components. To avoid component damage, carefully follow check procedures and prescribed voltage when performing these checks on general wiring or individual components.

B. Test procedure for insulation resistance test

Insulation resistance is measured between each wire in the cable bundle against all other wires in the bundle and against the box structure.
The insulation resistance must be a minimum of 200 Megaohms for each wire.

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

4. Code of insulated pidge ring tongue terminals and solder connection

A. Nylon terminals used for BMS13-31T1C1S-type wire

Code	Stud size	Wire size	Colour	Partnumber
	2	22-18	red	MS25036-159-N
	4	22-18	red	MS25036-148-N
		16-14	blue	MS25036-152-N
	6	22-18	red	MS25036-101-N
		16-14	blue	MS25036-106-N
		12-10	yellow	MS25036-111-N
	8	22-18	red	MS25036-149-N
		16-14	blue	MS25036-153-N
		12-10	yellow	MS25036-156-N
	10	22-18	red	MS25036-103-N
		16-14	blue	MS25036-108-N
		12-10	yellow	MS25036-112-N
		8	red	MS25036-115-N
		6	blue	MS25036-119-N
	1/4	22-18	red	MS25036-150-N
		16-14	blue	MS25036-154-N
		12-10	yellow	MS25036-157-N
		8	red	MS25036-116-N
		6	blue	MS25036-120-N
		4	yellow	MS25036-123-N
	5/16	22-18	red	MS25036-104-N
		16-14	blue	MS25036-109-N
		12-10	yellow	MS25036-113-N
		8	red	MS25036-117-N
		6	blue	MS25036-121-N
		4	yellow	MS25036-124-N
	3/8	22-18	red	MS25036-105-N
		16-14	blue	MS25036-110-N
		12-10	yellow	MS25036-114-N
		8	red	MS25036-118-N
		6	blue	MS25036-122-N
		4	yellow	MS25036-125-N
	Solder Connection			

Terminal Lug List
Table 101

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

B. Teflon terminals used for BMS13-31T1C1S-type wire

Code	Stud size	Wire size	Colour	Partnumber
⊕	4	22-20	green	AMP50831
		18-16	orange	AMP50834
⊖	6	22-20	green	AMP50831-1
		18-16	orange	AMP50835
		14	white	AMP50839-1
		12-10	black	AMP50845
⊙	8	22-20	green	AMP50832
		18-16	orange	AMP50836
		14	white	AMP50840
		12-10	black	AMP50845-1
		8	red	AMP132330-1
○	10	22-20	green	AMP50832-1
		18-16	orange	AMP50836-1
		14	white	AMP50840-1
		12-10	black	AMP50845-2
		8	red	AMP132330-1
⊗	1/4	14	white	AMP50841
		12-10	black	AMP50846
		8	red	AMP131149-1
●	Solder Connection			

Terminal Lug List
Table 102

5. Work light test (Fluorescent light)


A. Circuit function and test preparation

- (1) Power is supplied from the airplane to the unit by means of a connector of the unit. Work light circuitry is protected by a 1 A 1 Phase AC/115 V circuit breaker installed in the switch panel.
- (2) Set circuit breaker to „ON“ position.
- (3) Push or set switch of work light to „ON/DIM/BRIGHT“ position

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

B. Test procedure

Follow the test procedure as described below.

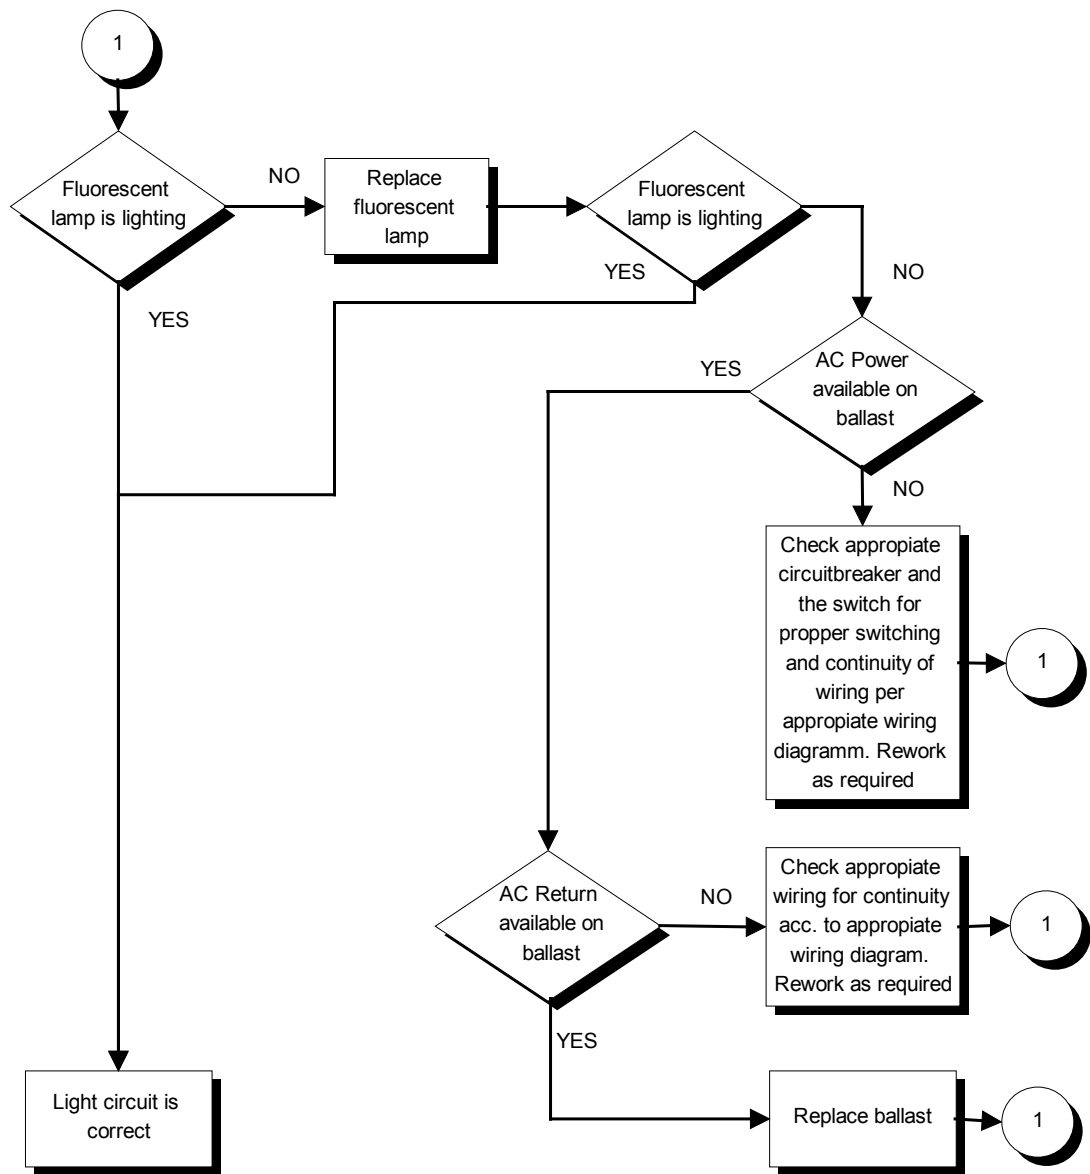

Test procedure work light
Figure 101

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

6. Oven test


A. Circuit function and test preparation

(1) Power is supplied from the airplane to the unit by means for a connector of the unit. The oven is protected by a 15 A 3 Phase AC circuit breaker all installed in the switch panel.

(2) Set circuit breakers to „ON“ position.

B. Test procedure

Follow the test procedure as described below.

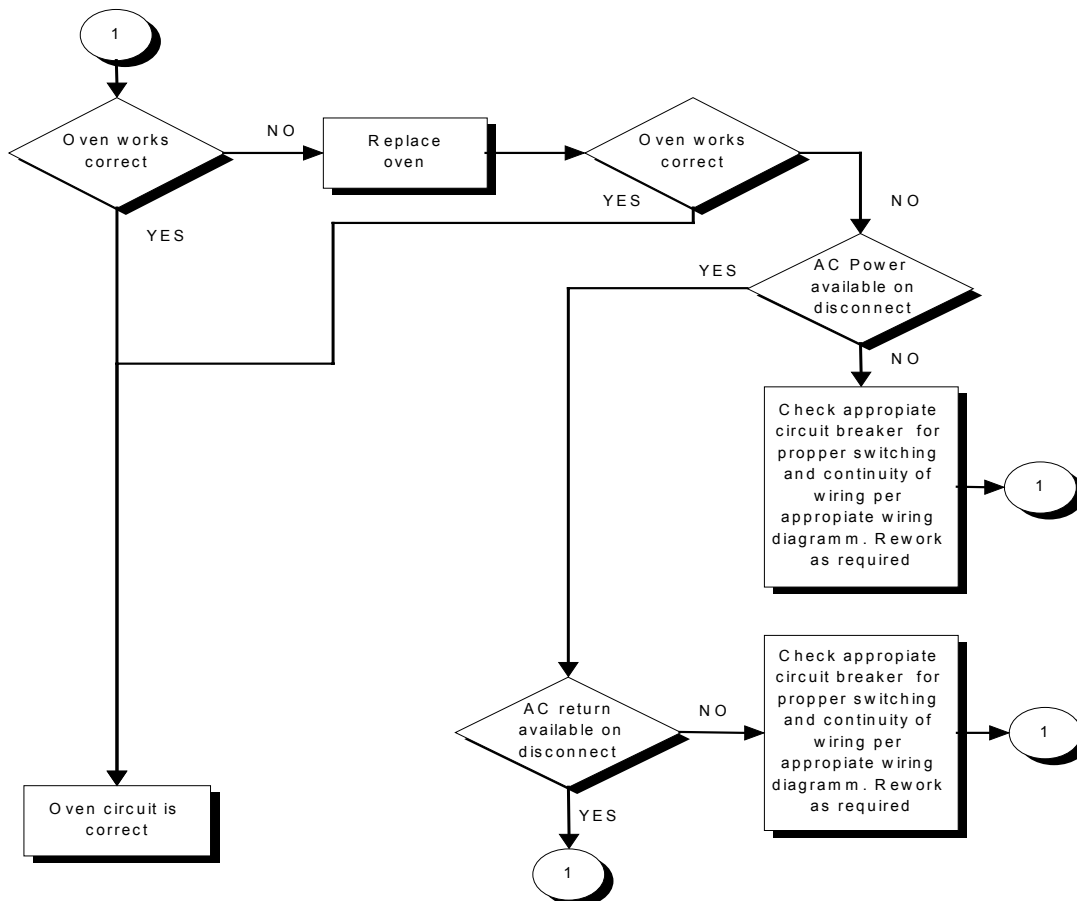

Test procedure oven
Figure 102

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

7. Coffeemaker test


A. Circuit function and test preparation

(1) Power is supplied from the airplane to the unit by means for a connector of the unit. The coffemaker is protected by a 15 A 3 Phase AC circuit breaker installed in the switch panel.

(2) Set circuit breaker to „ON“ position.

B. Test procedure

Follow the test procedure as described below.

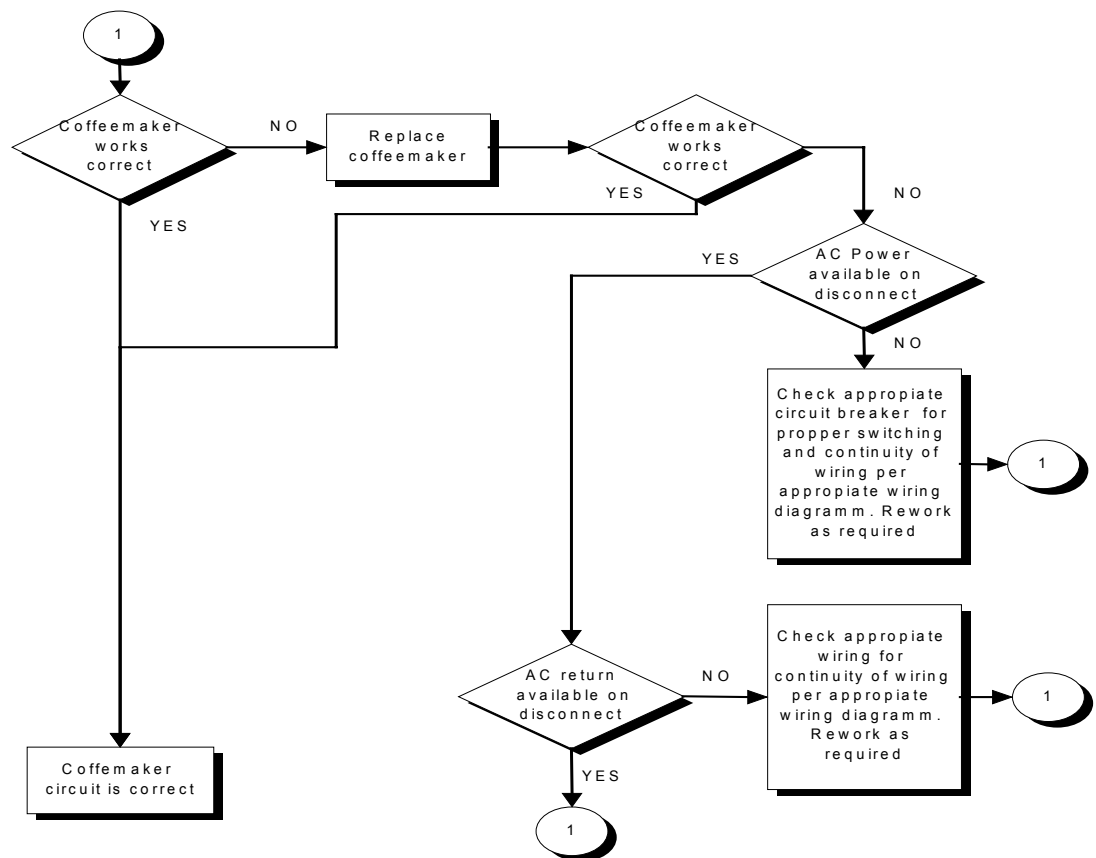

Test procedure coffeemaker
Figure 103

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

8. Compartment light test

A. Circuit function and test preparation


(1) Power is supplied from the airplane to the unit by means of a connector of the unit. Work light circuitry is protected by a 1 A 1 Phase AC/115 V circuit breaker installed in the switch panel.

(2) Set circuit breaker to „ON“ position.

(3) For compartment light test open compartment door.

B. Test procedure

Follow the test procedure as described below.

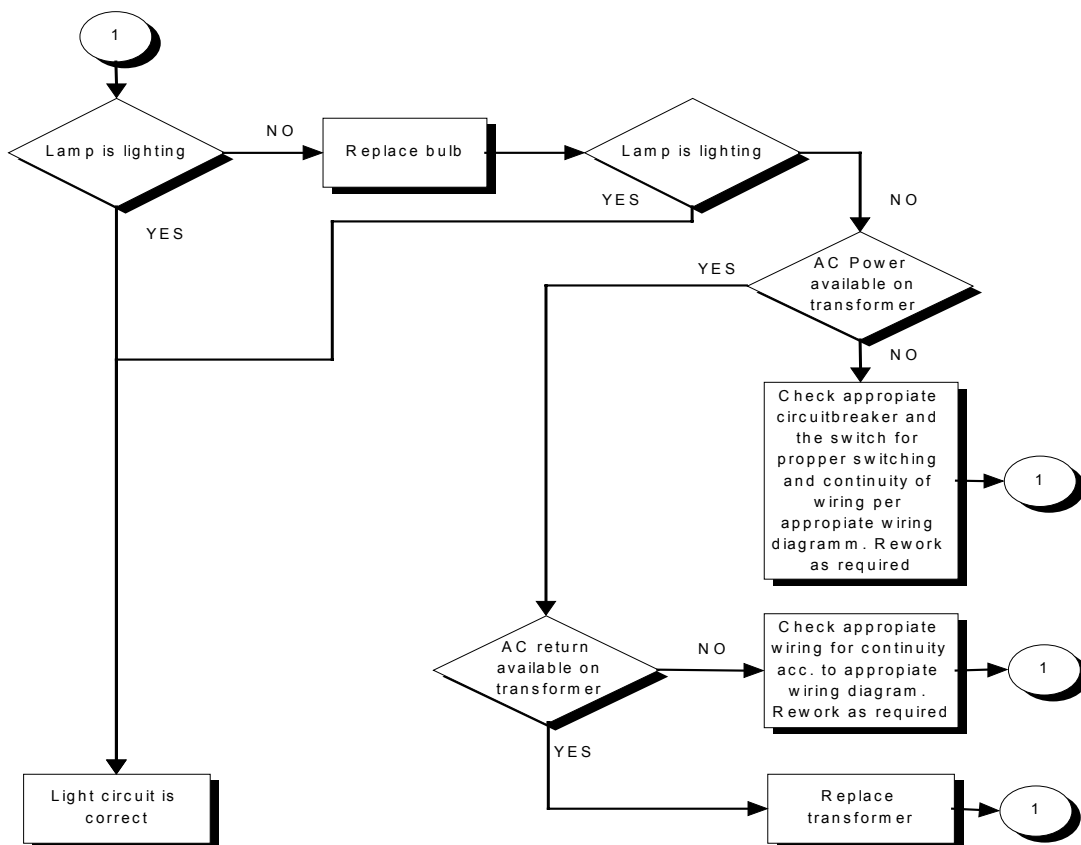

Test procedure lamp
Figure 104

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

9. Outlet test

A. Circuit function and test preparation


(1) Power is supplied from the airplane to the unit by means of a connector of the unit. Outlet circuitry is protected by a 10 A 1 Phase AC/115 V circuit breaker installed in the switch panel.

(2) Set circuit breaker to „ON" position.

(3) Connect designated electrical device with outlet disconnect.

B. Test procedure

Follow the test procedure as described below

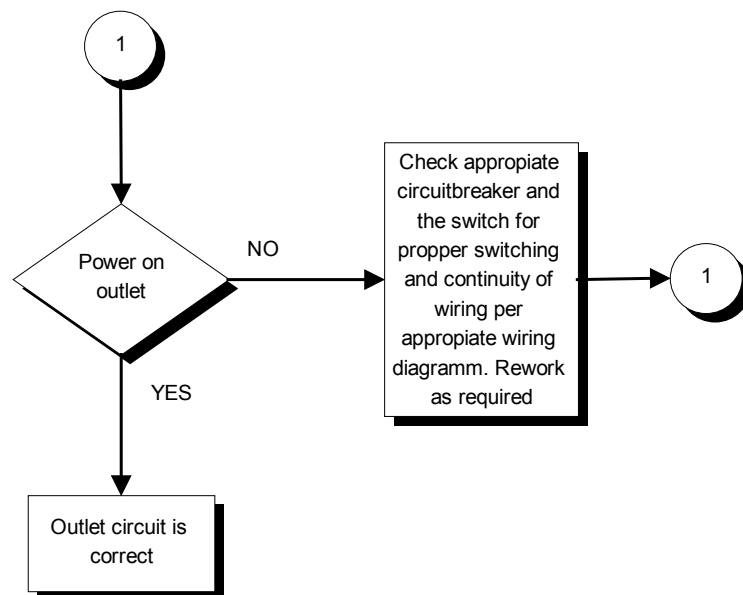


Test procedure outlet
Figure 106



COMPONENT MAINTENANCE MANUAL
106113 / 106113A

INTENTIONALLY LEFT BLANK

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

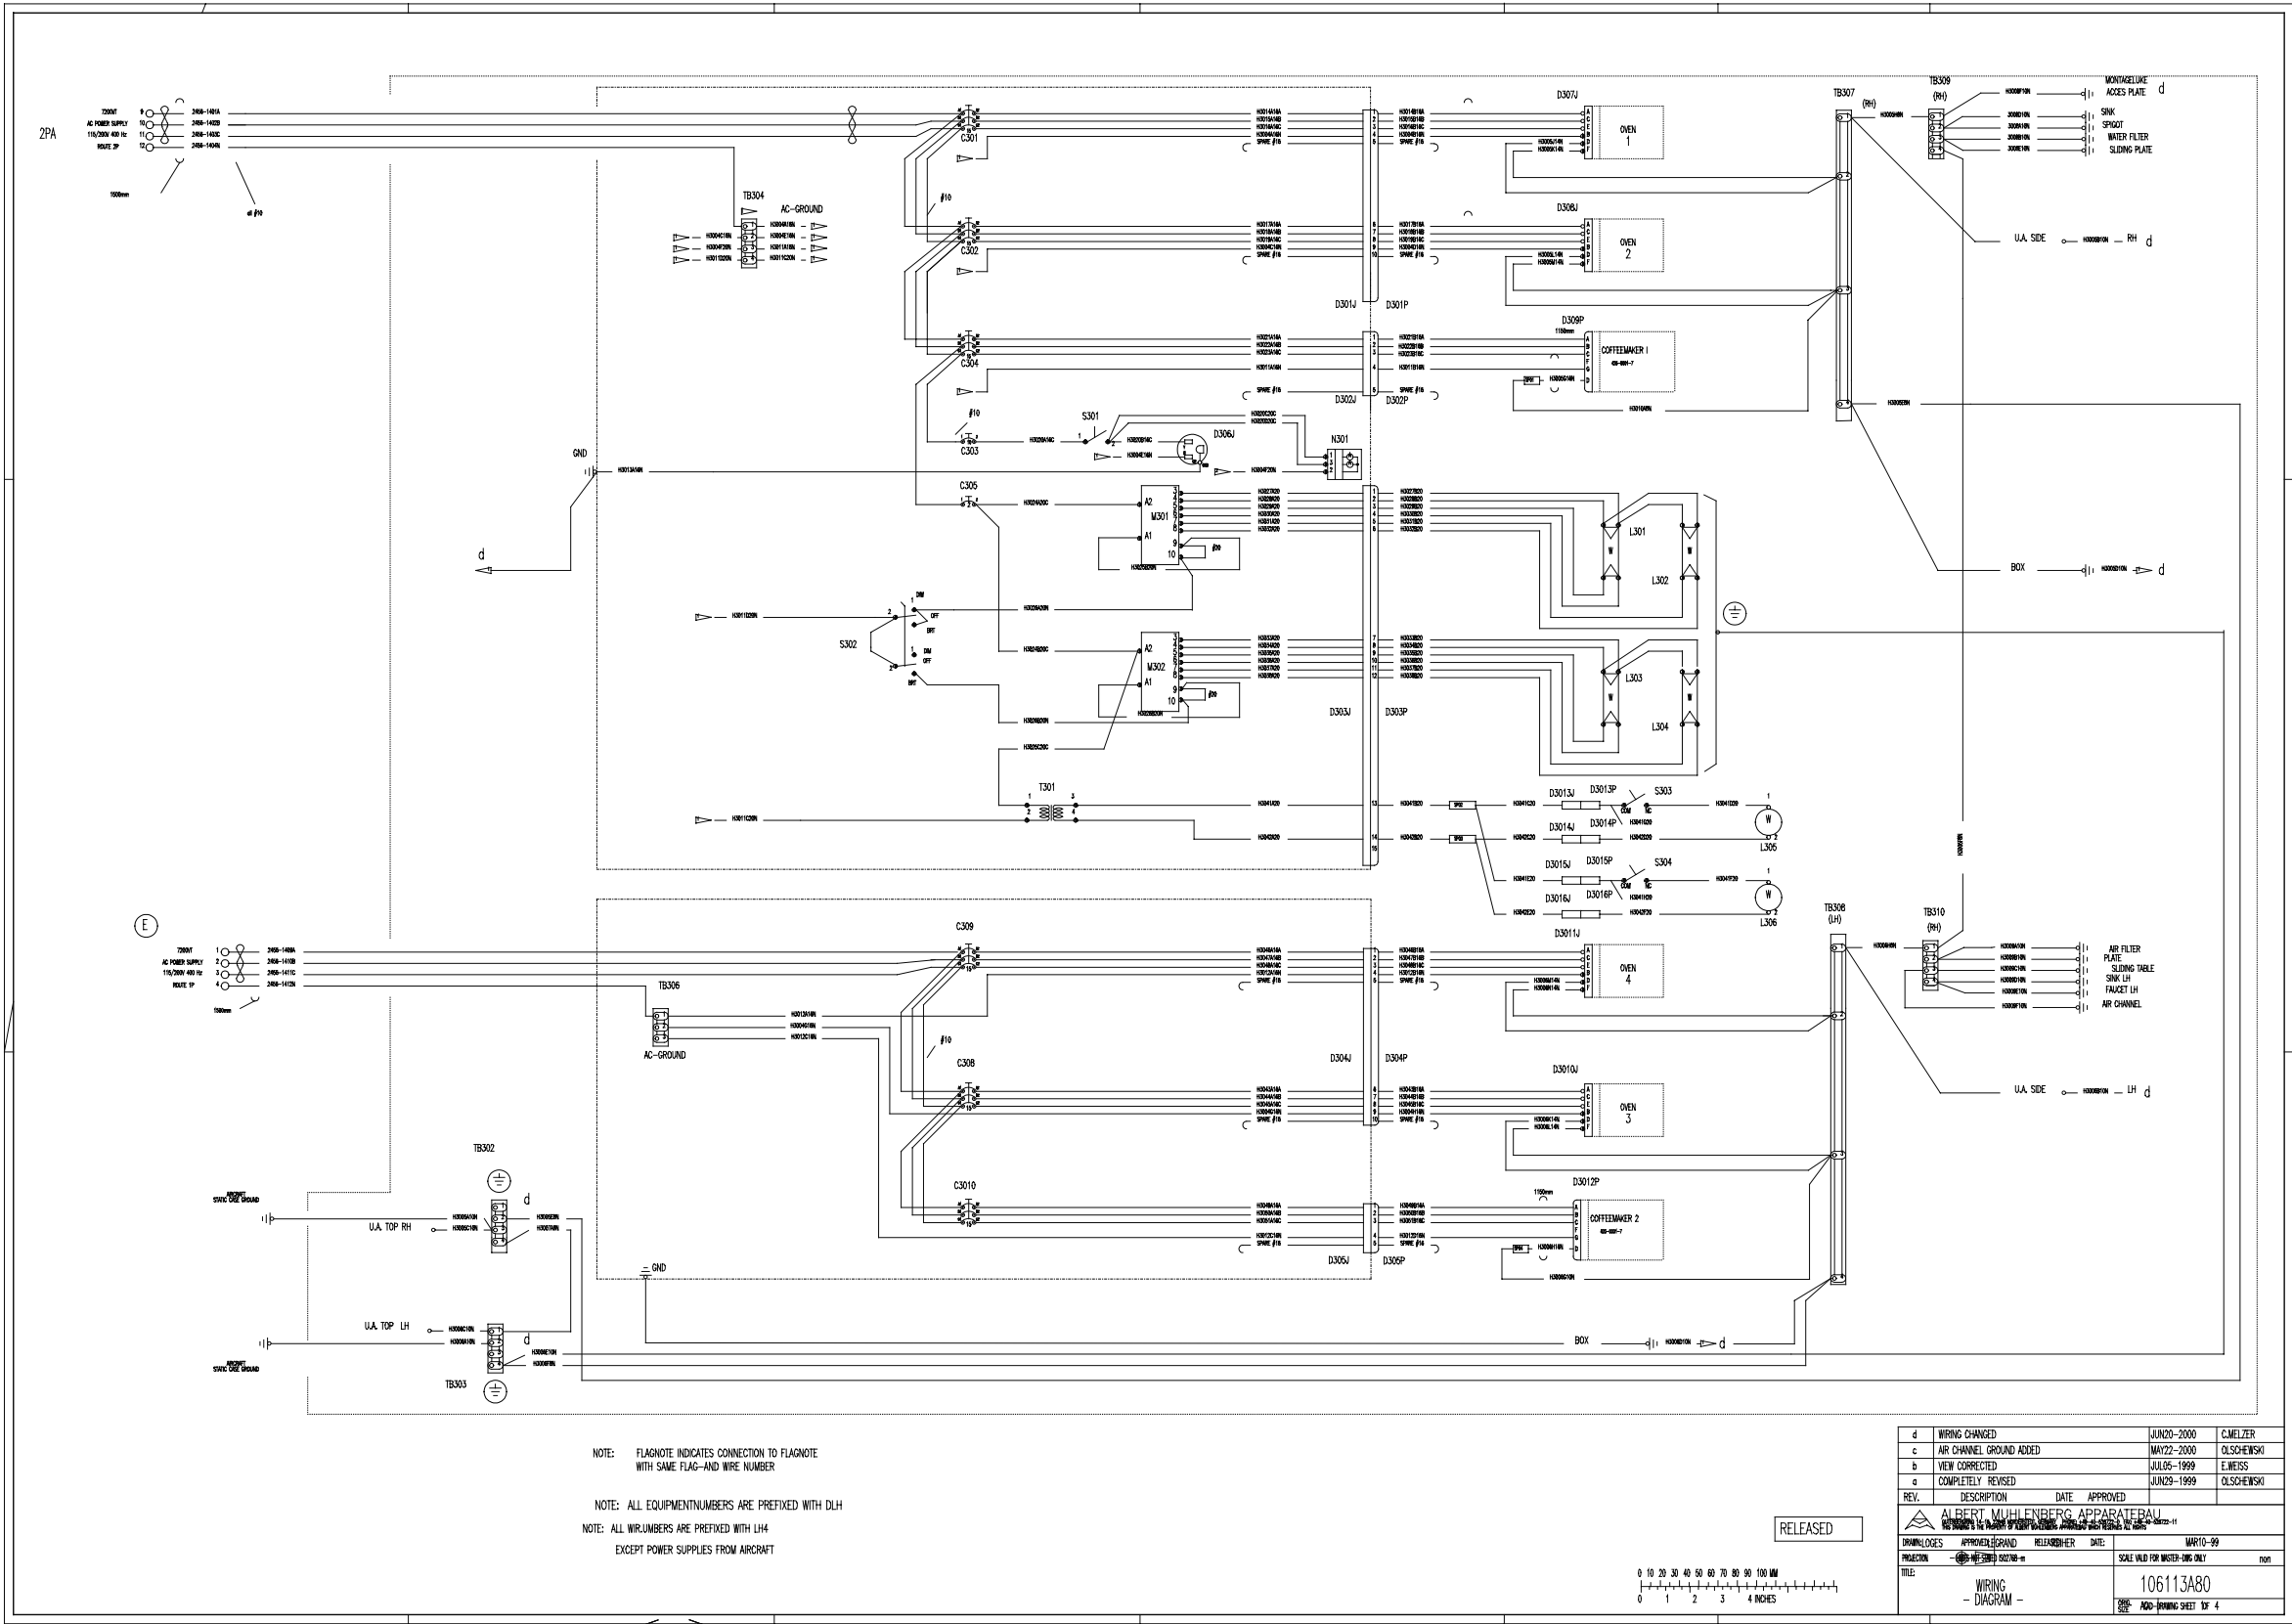



25-30-44



COMPONENT MAINTENANCE MANUAL 106113 / 106113A

DISASSEMBLY

1. General

The disassembly of the units is necessary to exchange a part, to carry out repairs, or to overhaul the units. Use the description of ASSEMBLY in the reverse direction for DISASSEMBLY.

Note: The degree of disassembly carried out shall be not more than necessary.

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

CLEANING

1. General

A. Maintenance

Clean especially all recessed parts of the galley and stowage units. Deposits of food, spilled liquids, etc., are quite likely to be missed in nooks and crevices and thus allowed to build up and act as cultures for bacteria and mold spores. Therefore, thorough cleaning and sterilisation is also extremely important during maintenance to prevent possible food contamination.

B. Overhaul

Cleaning is also an extremely important overhaul function for alclad parts that are exposed to repeated wear, minor nicks, scratches and acids in the form of liquid or vapors. Fruit juices, certain spices and many food products prepared in the galley will attack and corrode alclad once the outer layer of aluminium has been penetrated.

CAUTION: These liquids or vapors can seep into nicks and scratches and corrode the material between the outer layers of aluminium, and thus not be readily detectable during the early stages of corrosion. Therefore, thorough cleaning and neutralizing of these acids is necessary to stop corrosion and prevent structural failure.

C. Recommended agents

The following table lists recommended agents for cleaning the galley and stowage units after use.

Note: Equivalent substitutes may be used for listed items. Substitutes should have the following characteristics:

- harmless
- no residual odor
- no irritating fumes or vapors
- nonabrasive

2. List of Material

Note: Equivalent substitutes may be used for listed items.

DIEHL

Service Modules

COMPONENT MAINTENANCE MANUAL

106113 / 106113A

ITEM	IDENTIFICATION	SOURCE
Aliphatic Naphta	Federal Specification TT-N-95	Any Government app. source
Liquid Soap	for decorative material painted aluminium surfaces	Commercially available
Corrosion removing compound	Military Specification MIL-C38334	Any Government app. source
Liquid disinfect	Lysol	Commercially available
Desinfecteded Spray	Lysol Spray	Commercially available
Methyl-Ethyl-Ketone (MEK)	Federal Specification TT-M-261	Any Government app. source

Cleaning Materials Table 401

Warning:

Use Methyl-Ethyl-Ketone (MEK) in a well ventilated area. Avoid prolonged inhalation of fumes and contact with skin. Keep MEK away from open flame.

3. Procedure

A. Outer surface

Wash outer surface of all parts with Ideal flüssig or equivalent. (Refer to table 401).

B. Structure assemblies

Caution: Many parts of the assembly are anodized aluminium; be very careful not to scratch finish when scraping.

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

(1) Remove any crusted and stubborn deposits by scraping off. After most of the deposit has been removed, wash away the remaining residue as specified in paragraph 3.A.

WARNING: Use Methyl-Ethyl-Ketone (MEK) in a well ventilated area. Avoid prolonged inhalation of fumes and contact with skin. Keep MEK away from open flame.

(2) Remove grease or oil deposits by washing with a cloth saturated in MEK.

(3) Disinfect all areas by spraying with disinfectant spray.

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

INTENTIONALLY LEFT BLANK

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

CHECK

1. General

Visually check all parts, minor assemblies and unit structure for dents, bends, cracks or other physical damage, using a strong light and preferable some means of magnification. Use an inspection mirror when inspecting for damage or corrosion within the assembly structure so that all exposed surfaces can be examined. Check all parts for cleanliness.

2. Structure assemblies

A. Riveted Connections

Where major structural riveted or screwed parts are suspected of metal fatigue or cracks, the dye penetrant method in accordance with Military-Specification MIL-I-6866 must be employed. In the case of riveted assemblies, suspected of damage, such as elongated rivet holes, not visible to the naked eye, the radiographic method, in accordance with Military Standard MIL-STD 453, must be applied.

B. Damaged Component Parts

All parts should be examined for nicks, cracks, detached skin, cuts, distortion, corrosion, crossed or stripped threads, chafing, scoring, excessive wear and defects that could impair efficient function and appearance of the equipment.

Note: Limitation for cracks: Holes up to 40 mm (1.58 in) Ø and cracks up to 200 mm length (8.0 in) and up to 4 spots per m² (10.8 sq.ft.).

C. Coated Surfaces

Check all attached fittings and similar structure devices for corrosion. Mark such areas for later treatment specified in repair.

Note: Limitation for detached skin: up to 200 mm (7.9 in) and a maximum of 2 areas per m² (11 sq.ft.).

D. Attachments

Check attachment point areas for corrosion and physical damage.

COMPONENT MAINTENANCE MANUAL

106113 / 106113A

E. Latches

(1) Check operation of latches.

Latch bolts must engage into the strike by a minimum of 2,5 mm (0,1 in).

(2) Check that latch flaps are flush with surface of latch casing when closed.

Check condition and operation of latch bolt. If required lubricate bolt with Vaseline oil or grease. Check latch strike for attachment, wear, cleanliness or deterioration.

F. Bumper and Sliding Strips

Check bumpers for presence and security of attachment.

G. Placards

Check all placards for presence, legibility and security of attachment.

Replace all illegible placards.

3. Check intervalls

	Maximum flight hours	Maximum period	Check symbol	Galley installed
Minor maintenance	250	50 days	A	yes
Maintenance	800	5 months	B	yes
Major maintenance	2500	18 months	C	yes
Interval Lay-over	12000	36 months	D	no
Overhaul	24000	72 months	E	no

Check Intervalls
Table 501

4. Check procedures

Performe all checks intervals according to table 501.

A.	Check all parts, minor assemblies and unit structure for dents, bends, cracks or other physical damage	A	B	C	D	E
B.	Check for damaged or loose decorative material	B	C	D	E	



COMPONENT MAINTENANCE MANUAL

106113 / 106113A

	and damaged coating and for possible surface damages					
C.	Check all compartments, milled and metal components for corrosion	A	B	C	D	E
D.	Check trims, protective strips, edge profiles and kick strips for attachment	A	B	C	D	E
E.	Check areas that are not easily accessible for cleanliness to prevent corrosion.	A	B	C	D	E
	Caution: Objectionable components must be replaced					
F.	Check lower and upper attachment of unit for fit and security. If necessary, replace deamaged components and use torque values. Make sure there are no vibration markings at lower attaching parts		B	C	D	E
G.	Check all attachment components for surface corrosion		B	C	D	E
H.	Inspect carefully condition of sealing	A	B	C	D	E
I.	Check tie rods of upper attachment for easy movement		B	C	D	E
K.	Check operation of catches, latches and retainers	A	B	C	D	E
L.	Checkk all placards for presence and legibility				D	E

Check procedures

Table 502

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

REPAIR

1. General

A. Limits

Except for permissible repairs outlined in the following paragraphs, repair of detail parts and components is not considered practicable nor reliable. Parts which do not meet check requirements shall be replaced.

B. Replacement Parts

All screws, washers, nuts, bushings, etc. if removed during the disassembly procedure, shall be routinely replaced at each overhaul, regardless of apparent.

2. List of Materials

ITEM	IDENTIFICATION	SOURCE
Corrosion preventative petrolatum	Military Specification MIL-C-10382	Any Government approved source
Acid, Resistant	Federal Specification TT-L-54	Any Government approved source
Glue	Ureol 1356A, Ureol 1356B	Ciba-Geigy, Oeflinger S., D79664 Wehr/Baden
Parting wax	S10	Th. Goldschmidt, Postfach 17, D-34127 Essen
LHR-Edge Filler	Alexit 49514, Alexit 49114	Mankiewicz Gebr. & Co. GmbH, Postfach 93, 21107 Hamburg

DIEHL

Service Modules

COMPONENT MAINTENANCE MANUAL

106113 / 106113A

Decorative material, Bonding	1:1 Mixture of	
	- Pattex Contact Kraftkleber Liquid Classic	Henkel AF & Co.KGaA Hohenzollernring 127 - 129 D-22763 Hamburg
	- HREIN004 WBC202 Universalverduennung	Biesterfeld AG Ferdinandstrasse 41 D-20095 Hamburg
Primer and Silicone Sealer Silicone Remover	G 718, Elastosil E43, VP1007	Wacker-Chemie GmbH Prinzregentenstr. 22, 80538 München
LHR-Filler	Alexit 414-12, Alexit 459, Alexit 68	Mankiewicz Gebr. & Co. GmbH, Georg-Wilhelm-Str., 21107 Hamburg
Tape		Commerciabile available
LHR-Paint	Alexit 404-12, Alexit 400, Alexit 68	Mankiewicz Gebr. & Co. GmbH, Georg-Wilhelm-Str. 21107 Hamburg
Injector	20cm ³ /1mm	Commercially available
Degreasing fluid		Commercially available
Insert		Shur Lok Intern. S. A. Petit Rechain/Belg.
Dowel Pipe	AM111013-Series	Diehl Service Modules GmbH, Vierenkamp 1 D-22453 Hamburg
Pressure Sensitive Tape	SCOTCH9473 (size as required)	Werbepack Handels GmbH 22844 Norderstedt

Repair Materials Table 601

Note: Equivalent substitutes may be used for listed items.

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

3. Structure

A. General:

Decide individually, whether repair as described or replacement of the damaged part should be carried out.

B. Removed protective coating

If protective coating has been removed for any reason touch up with 2 coats of primer (Refer to table 601).

C. Removed decorative material

If decorative material has been pulled away from structure, rebond using Scotch Grip 1357 (Refer to table 601).

Warning: Use Methyl-Ethyl-Ketone (MEK) in a well ventilated area. Avoid prolonged inhalation of fumes and contact with skin. Keep MEK away from open flame.

D. Removal of excess bonding

Remove any excess bonding compound by wiping with a cloth dampened in MEK (Refer to Table 601).

4. Sandwich Structure

A. General

This subject describes repair of the sandwich constructed parts consisting of phenolic resin bound of aramide honeycomb core with phenolic resin, bound in woven glass fiber (Prepreg) skin, bonded on both sides of the sandwich part.


All damage exceeding the stated limitations must be repaired by the manufacturer.

B. Procedure of repair of detached skin from core (refer to FIG 601)

Limitations: Up to 200 mm (7.9 in) and a maximum of 2 areas per m² (11 square feet)

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

- (1) Clean the area to be repaired and have the panel laid so that the surface with the detached skin is on top. (Refer to FIG 601).

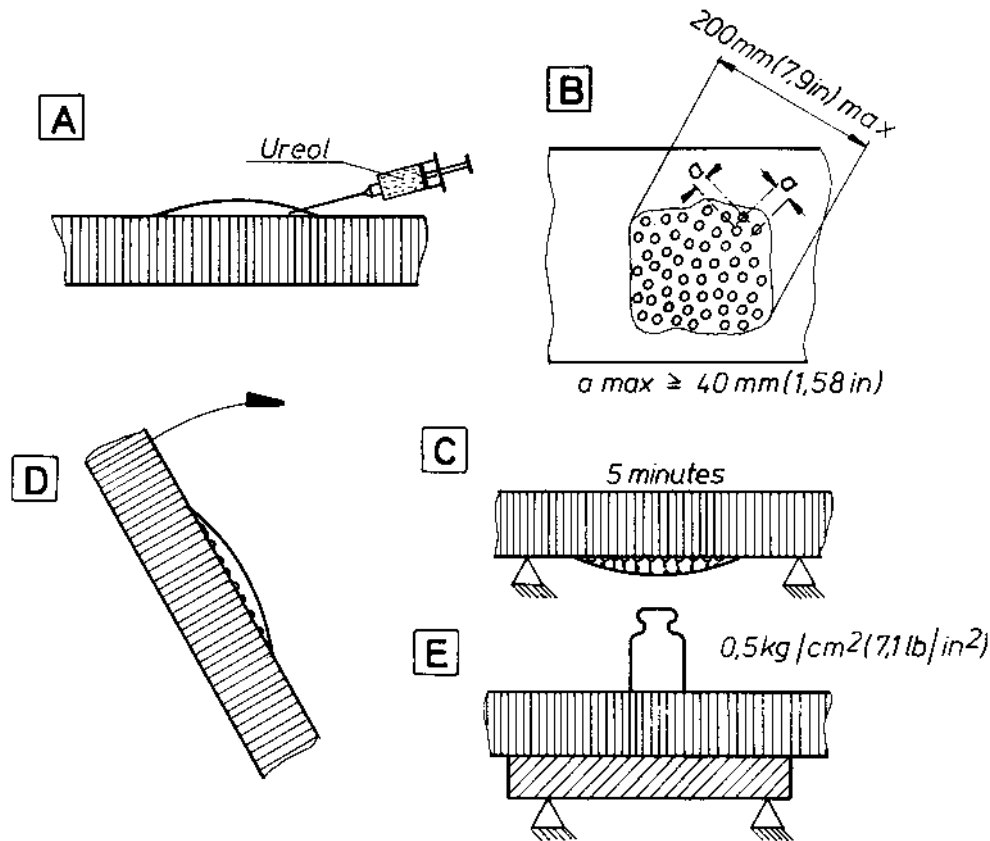

Repair of detached skin from core
Figure 601

- (2) Put the support for the pressing procedure in position and cover with parting wax.
- (3) Have weights 0,5 kg/cm² (7.1 lb/in²) available.
- (4) Prepare the components:
20 parts by weight Ureol 1356A, 100 parts by weight Ureol 1356B, Parting wax S10, Degreasing fluid
- (5) Weight and mix the glue components using clean and dry pot out of glass, porcelain or paper cup not treated with paraffin. Mix glue components thoroughly (3-5 minutes hard stirring just before use).
- (6) Fill the injector with glue

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

(7) Inject the glue at a shallow angle (15 degree) between skin and core, each 40 mm (1,58 in) about 5cm³ (0,3 in³) (Refer to FIG 601 view A and B).

(8) Seal the injection holes with tape. Turn the repaired part through 180 degree, so that the glued side faces downward (Refer to FIG 601 view D).

(9) Leave the panel in this position for 5 minutes (Refer to FIG 601, view C). During this time the glue will spread over the inside of the detached skin.

(10) Remove tape.

(11) Press panel on the prepared support (see b above) with a weight of 0,5 kg/cm² (7.1 lb/in²) glued surface. Pressing time: 12 h. (Refer to FIG 601, view E).

(12) Clean the glued area with a wooden spatula and degreasing fluid.

C. Procedure of repair of holes or cracks (refer to FIG 602)

Limitations: Holes up to 40 mm (1.58 in.) and cracks up to 200 mm length (8.0 in) and up to 4 spots per m² (10.8 square feet).


(1) Remove skin and core particles from area to be repaired (Refer to FIG 602, view A and D).

(2) Mix the components:
2 parts by weight of Alexit 49512, 1 part by weight of Alexit 49112 (Refer to Table 601).

(3) Apply to damaged area with a spatula, exerting pressure (Refer to FIG 602, view B and E). Before application the Filler must be mixed homogeneously for approx. 2 minutes and must be applied within 5 minutes. Due to different colours of resin and hardener proper mixing can be checked visually.

(4) Mould Filling compound higher than surrounding area. The compound will cure within 5h up to 50% of its final strength at 20 degree celsius.

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

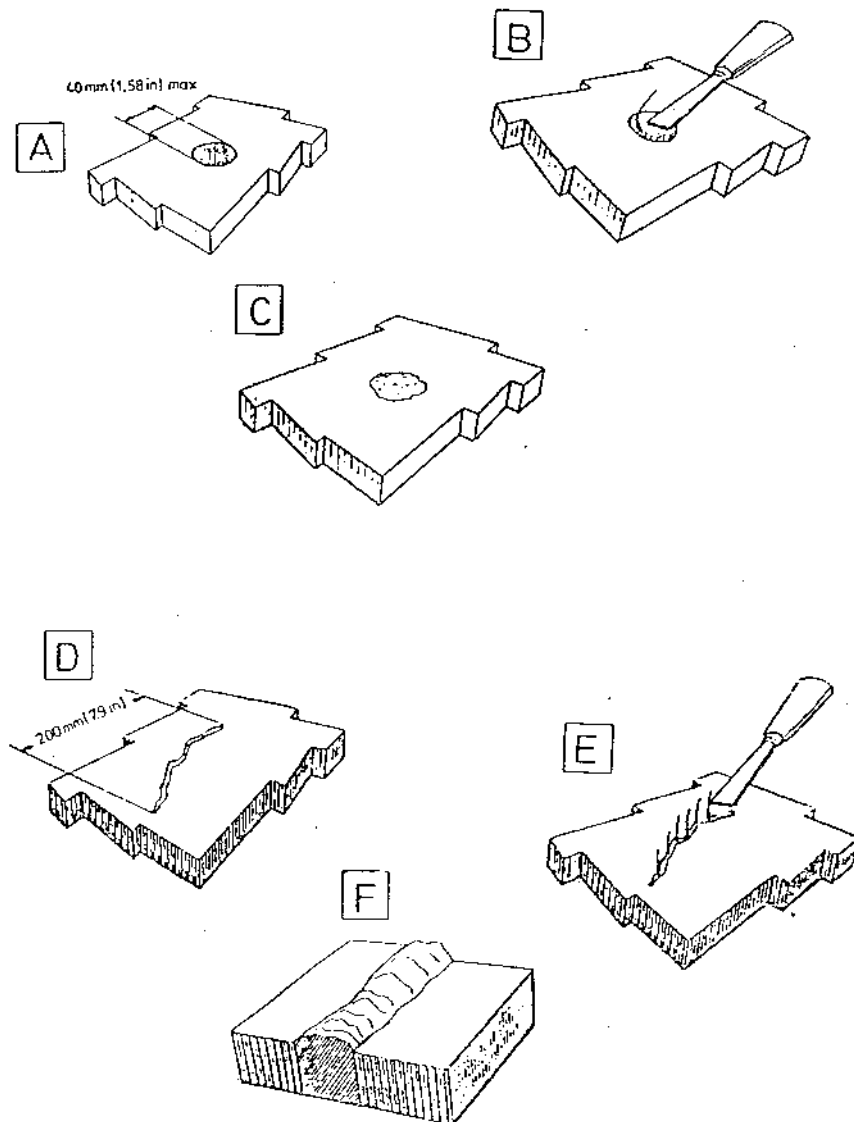

Repair of holes or cracks
Figure 602

After an additional 7 days curing cyclus will be completed. (Refer to FIG 602, view C and E). After curing time of 5 hours remove excess compound with the wood working tools.


C. Procedure of repair of holes from torn-out inserts (Refer to FIG 603)

- (1) Determine position of insert using a core hole bridge.
- (2) Remove particles of skin and honeycomb from hole for insert. (Refer to

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

FIG 603, view A and B).

- (3) Fix and insert with core hole bridge. (Refer to FIG 603, view C).
- (4) Prepare the components:
20 parts by weight Ureol 1356A, 100 parts by weight Ureol 1356B
- (5) Weight and mix the components using clean and dry pot out of glass, porcelain or paper cup not treated with paraffin. Mix glue components thoroughly (3-5 minutes hard stirring just before use).
- (6) Cast insert with mixed Ureol.
- (7) Fill up casting after 1 h.
- (8) Remove core hole bridge after 4 h and remove excess compound with wool working tools.

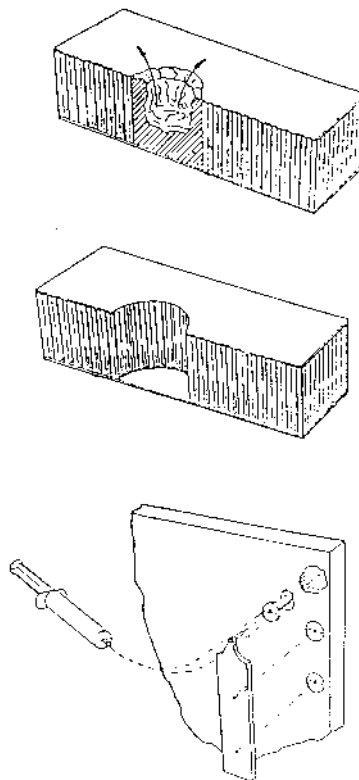


Repair of holes from turn-out inserts
Figure 603

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

D. Procedure of repair of detached joints (Refer to FIG 604).


- (1) Remove the core particles from detached joint with a piece of thin sheet metal. Blow the dust out with oil-free compressed air with max 2 bar (28PSI)
- (2) Ensure clamping blocks and screwlamps are available.
- (3) Prepare the components:
20 g (44.1 lb) Ureol 1356A, 100 g (220.5 lb) Ureol 1356B
- (4) Weigh and mix the glue components (Ureol) using clean and dry pot out of glass, porcelain or paper cup not treated with paraffin. Mix glue components thoroughly (3-5 minutes hard stirring just before use).
- (5) Fill the injector with glue.
- (6) Inject the glue into the joint (Refer to FIG 604, view B).
- (7) Clamp the glued joint together. Maintain pressure for 12 h (Refer to FIG 604, view C). Limitations: up to 1 quarter of the total length and 1 detachment per joint.
- (8) Remove the screwlamps and auxiliary parts after approx. 12 h.
- (9) Drill a hole of 10 mm (0,4 in) dia.and 100 mm (4 in) depth 40-60 mm (1.6-2.4 in) away from the glued joint (Refer to FIG 604, view D).
- (10) Insert a Dowel pipe AM1111013 (Refer to FIG 604, view E).
- (11) Insert the PVC hose into the Dowel Pipe, (Refer to FIG 604, view G and H) and press the casting resin slowly into the drilled hole until it is completely filled.
- (12) Refill the hole with resin after 33h when level has sunk.
- (13) Clean the joint and dowel with wooden spatula and sanding paper.

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

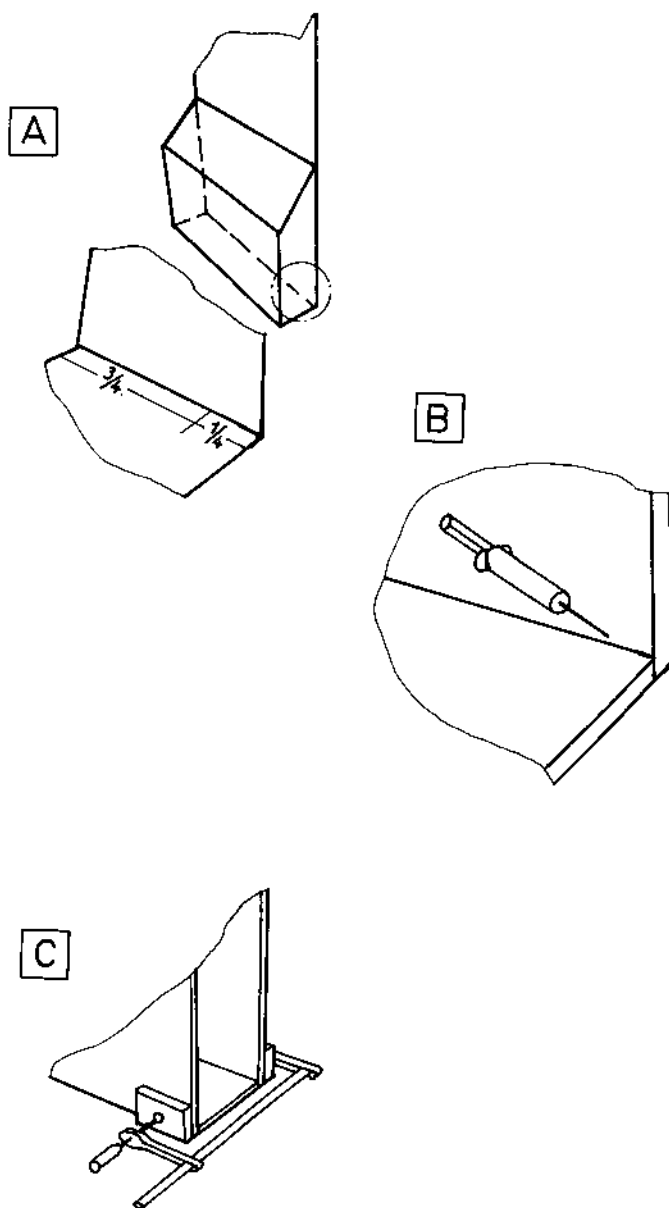

Repair of detached joints
Figure 604 (sheet 1 of 2)

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

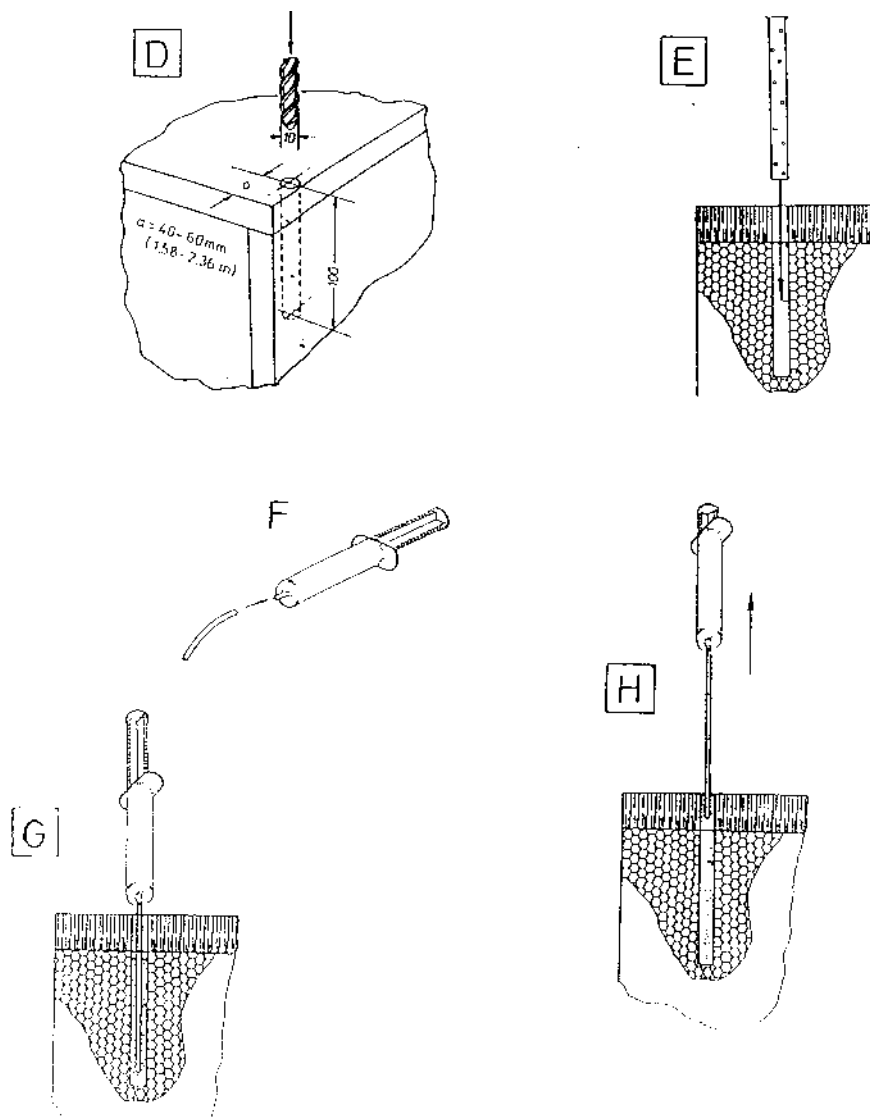

Repair of detached joints
Figure 604 (sheet 2 of 2)

E. Procedure of repair of detached bumpers and profiles

- (1) Remove the coarse particles from detached connection with a piece of thin sheet metal.
- (2) Ensure screwclamps are available.
- (3) Apply the pressure sensitive tape (refer to table 601) on the surface of detached bumper or profile.

DIEHL
Service Modules
COMPONENT MAINTENANCE MANUAL
106113 / 106113A

- (4) Bond and clamp the applicable parts together. Maintain pressure for 1 h.
- (5) Remove the screw lamps and auxiliary parts after approx. 1 h.

5. Metal Structure

A. Replacement or repair

Decide individually, whether repair as described or replacement of the damaged part should be carried out.

B. Aluminium Parts

- (1) Remove scratched edge burrs using burnishing tools.
- (2) Blend the repaired area with adjacent surface using 320 grit or finer abrasive cloth with oil.
- (3) Wipe clean all oil residue from the aluminium surface.

6. Painting

Caution: The unit is designed acc. to FAR25.853a Amend. 66 low heat release values 65/65. Repaint is only allowed on minor items. For major items is the authorisation of Diehl Service Modules GmbH imperative.

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

ASSEMBLY

1. General

Assembly as well as the installation of the unit into the airplane must be accomplished by experienced personnel. All installation work should be done very carefully, to avoid any damage to the surfaces of the unit assemblies.

2. Storage Instructions

- A. Tag units with overhaul data.
- B. Check that units are thoroughly clean.
- C. Enclose entire units in a strong, durable plastic vapor barrier covering.
- D. Seal plastic with heating iron.
- E. Store each unit at an ambient temperature between 4.4 degree celsius to 26.7 degree celsius (40 degree fahrenheit to 80 degree fahrenheit).

3. Installation Instructions

- A. Assembly of Lower Body Assy (Ref. IPL, Fig. 2)
 - (1) Attach plate (20) using bolt (30).
 - (2) Attach plates (40), plate (45) using screw (50).
 - (3) Attach I-profile (60) using screw (70).
 - (4) Attach profile (80) using screw (90).
 - (5) Attach catches (100) end cap (110) using screw (120).
 - (6) Attach edge profile (130) by tape and screw (150,160) and install profile insert (170).
 - (7) Attach sliding strips (180,190) and bumper (200) using screw (210).
- B. Assembly of Middle Body Assy (Ref. IPL, Fig. 3)
 - (1) Installation of profiles and miscellaneous items.
 - (a) Attach profile (280), bumper (290) using screw (300).
 - (b) Attach spacer (310), I-profile (320) using screw (330).



COMPONENT MAINTENANCE MANUAL

106113 / 106113A

- (c) Attach catch (340) using screw (140).
- (d) Attach edge profile (350) using tape and screw (370) and profile insert (380).
- (e) Attach bumper (230), sliding strip (240) using screw (250)
- (f) Attach coat hook (260) using screw (270).
- (g) Attach bumper (390) using screw (400).

(2) Installation of Plate Assy

- (a) Install plates (60, 70, 80) using screws (110,120)
- (b) Install plates (100) using screws (110, 140)
- (c) Install plates (90) using screws (140)
- (d) Install plates (150) using screw (140)
- (e) Install strike (160) using screw (140)
- (f) Install plates (190,200) using screw (140).

(3) Installation of Pull out Table Assy (Ref. Fig. 28)

- (a) Put block (120) in position, using screw (130), clamping sleeve (160) and spring (160) and block (190) using screw (200)
- (b) Install vail (70) using screw (80).
- (c) Install u-profiles (10,20) with latches (90,100) using screws (60,100)
- (d) Fix the table (170) on the rails (70) using the snap assy (210), which is attached to the table using screw (230).

(4) Installation of working Plate (Ref. IPL, Fig. 3)

- (a) Install working plate (210) using screw (220)

C. Assembly of Upper Body Assy (Ref. IPL Fig. 4)

(1) Installation of Panel Assy

- (a) Attach panel (30, 160, 170) using screws (50, 60, 110)
- (b) Attach plate assy (20, 40) using screws (50, 60, 110)
- (c) attach panel assy (120, 130) using screw (140).

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

- (2) Installation of miscellaneous items
 - (a) Attach L-profile (180) using screw (190) and bumper (200) using screw (210)
 - (b) Attach t-profile (220) using screw (110)
 - (c) Attach sliding strip (230) using screw (190)
 - (d) Attach support (240) using screw (250)
 - (e) Attach I-profile (260,270) using screw (210)
 - (f) Attach profile (320) using screw (250)
 - (g) Attach edge-profile (330, 360) using tape and screw (350) and put the profile insert (380)

D. Assembly of Stowage Body Assy (Ref. IPL, Fig. 5)

- (1) Attach Support (20, 30) at the stowage bodies (10A, 10B) using screw (40).
- (2) Attach plate (60), handle (50) using screw (70).
- (3) Attach strike (80), I-profile (90) using screw (100)
- (4) Attach bumper (110), washer (120) using screw (130)
- (5) Attach plate (140) using screw (150).
- (6) Attach profile (160), edge profile (170) using screw (180).

E. Assembly of Door Assy (Ref IPL, Fig. 6-9)

- (1) Attach hinge (Fig. 6/20, Fig 9) using screw (Fig. 6/40; Fig. 9/30)
- (2) Attach plate (Fig 9; Fig 6/60) on latch (Fig. 9/40,50; Fig. 6/50)
- (3) Attach angle (Fig. 6/30) using screw (Fig. 6/40)
- (4) Attach profile (Fig. 7/90,60) support (50) using screw (70).
- (5) Attach plate (Fig 7/30) on latch Fig 7/20) using screw (Fig7/40)
- (6) Attach profile (Fig. 8/70)
- (7) Attach latch (Fig. 8/20) plate (Fig. 8/30) using screw (Fig. 8/40) at supports (Fig. 8/50,60) using screw (Fig. 8/80)



COMPONENT MAINTENANCE MANUAL
106113 / 106113A

FITS AND CLEARANCES

Not Applicable



COMPONENT MAINTENANCE MANUAL
106113 / 106113A

SPECIAL TOOLS, FIXTURES AND EQUIPMENT

Not Applicable

COMPONENT MAINTENANCE MANUAL

ILLUSTRATED PARTS LIST

GALLEY G30

PARTNUMBER:

|

106113, 106113A

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

INTRODUCTION

1. General

The purpose of the illustrated parts list (IPL) is to facilitate the identification, procurement and storage of component parts of the unit. The IPL is part subject to maintenance and overhaul. These parts are, as far as possible, listed and illustrated.

2. Numerical Index

This section contains a listing of part numbers of all items listed in the detailed parts list in alpha-numerical sequence with cross reference to respective Fig./Item numbers as well as units per assy.

3. How to use the parts list

A. The part number is known

- (1) Find the part number in the numerical index. Note figure and item number.
- (2) Turn to the figure detailed parts list of the figure.
- (3) Locate the part on illustration and in the parts list by item number.

B. The part number is unknown

- (1) Refer to Figure 1 and look for the title of figure in which the part should be shown.
- (2) Note the figure number.
- (3) Turn the detailed figure illustration and find the part.
- (4) Refer to corresponding item number in the parts list.

C. Abbreviations

Abbreviations are used as follows:

- | | |
|----|-----------------------|
| A | - ampere |
| ac | - aircraft |
| AC | - alternating current |



COMPONENT MAINTENANCE MANUAL 106113 / 106113A

acc	- according
Amend.	- Amendment
approx.	- approximately
AR	- as required
ASSY	- assembly
CG	- center of gravity
cm	- centimeter
DC	- direct current
DET	- detail
EFF	- effective
FIG	- Figure
h	- hour
IDENT	- Identification
in	- inch
inbd	- inboard
INT	- intentionally
INTRO	- Introduction
IPL	- Illustrated parts list
kg	- kilogramm
l	- liter
lbs	- pounds
LH	- left hand
LHR	- low heat release
m	- meter
MEK	- methyl-ethyl-ketone
MGW	- maximum gross weight
MISCL	- miscellaneous
mm	- millimeter
NHA	- next higher assembly
NP	- not procurable
outbd	- outboard
PN	- partnumber
PVC	- poly vinyl chloride
RF	- reference
REQ	- required
RH	- right hand
TTL	- total
V	- voltage

D. Nomenclature



COMPONENT MAINTENANCE MANUAL

106113 / 106113A

The indendure system shows the relationship of parts and assemblies to the next higher assemblies or installations according to ATA100 specification.

E. Attaching parts

Attaching parts are captioned „ATTACHING PARTS“ and are listed immediately following the assemblies attached to. The ---x--- symbol follows the last item of an attaching group.

F. Numerical Index

This index is an alpha-numerical list of all part numbers listed in the Detailed Parts List.

G. Prefix „-“

Figure items marked with a prefix - are not illustrated

H. List of Vendors

V001E0	ETA GmbH Ulzburger Str. 307 22846 Norderstedt
VC0202	Pall Luftfahrttechnik APME Philipp-Reis-Str. 6 D-63303 Dreieich
VC0488	OTTO Ganter & Co. KG Triberger Str. 3 D-78120 Furtwangen
VC1008	Deutsche Lufthansa AG Weg beim Jäger 193 22335 Hamburg
VC3207	Aqua Butzke-Werke AG Ritterstr. 21-27 D-10969 Berlin



COMPONENT MAINTENANCE MANUAL 106113 / 106113A

VD0680	Camloc GmbH Industriestr. 6 D-65779 Kelkheim
VD2249	Buderus Sell GmbH Hüttenweg D-35721 Herborn
VD2607	3M Deutschland GmbH Carl-Schurz-Str. 1 D-41453 Neuss
VD8095	Hella KG Hueck & Co. Rixbecker Str. 75 D-89557 Lippstadt
VD8220	Osram GmbH Hellabrunner Str. 11 81543 München
VD8512	AMP Deutschland GmbH Amperestr. 7-11 D-3225 Langen
VD8518	Daimler-Benz Aerospace Airbus GmbH Kreetslag 10 D-21129 Hamburg
VOD660	Hillmann & Ploog Ivo-Hauptmann-Ring 9 D-21159 Hamburg
VS3845	Control Products Ankerstr. 3 CH-8036 Zürich
V120C2	CWF-Chemie Frankfurt GmbH Eichenheege 18-20 D-63477 Maintal
V17023	Bruce Industries Inc. 3678 Gardena, CA, USA



COMPONENT MAINTENANCE MANUAL 106113 / 106113A

V178H2	Genelco Industries Inc. Ronkonkoma, NY 11779 USA
V4E152	Gather Industrie GmbH Auf dem Hüls 18 D-4088 Mettmann
V5N982	Burbank Aircraft Int. Sun Valley CA, 91352, USA
V52607	Actron Manufacturing Inc. 3800 East Miraloma Ave Anaheim, CA 92806-2108, USA
V61372	General Ecology Europe Ltd. St. Andr. House, 26 Bright, RD West Sussex RH10 6AA, England
V62701	Zevco. Inc. Laguna Hills, CA 92653 USA
V71771	Cory Components Inc. Elsegundo, CA 90245, USA
V80477	Adams Rite Sabre Intern. 540 West Chevy Chase Drive Glendale, CA 91209, USA
V81205	Boeing Commercial Airplanes Seattle, WA 98124-2207, USA
V82255	Day-Ray Products. Inc. South Pasadena, CA 91030, USA

COMPONENT MAINTENANCE MANUAL

NUMERICAL INDEX

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
A20001-3-13		9	40	2
A215703642000		30	350	2
ABS0306		34	-200	AR
		35	190	AR
ABS0692-01		16	50	4
ABS0696X2-210		16	60	4
AC21DRS		32	70	1
AMP132330-1		33	-49	2
		33	-112	2
		33	-334	2
		33	-374	2
AMP50831-1		33	-262	2
		34	-512	1
		34	-522	1
		34	-532	1
		34	-542	1
		34	-612	1
AMP50832		34	-483	1
AMP50832-1		34	420	1
AMP50835		33	-53	1
		33	-63	1
		33	-83	1
		33	-93	1
		34	-502	1
AMP50836		34	-443	1
		34	-453	1
		34	-463	1
		34	-473	1
		35	-403	1
		35	-413	1
		35	-423	1
AMP50836-1		33	-52	3
		33	-82	3
		33	-92	3
		34	410	3
		34	-439	1
		35	390	1
AMP50839-1		33	-54	2
		33	-62	3

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
AMP50839-1		33	-64	2
		33	-84	2
		33	-94	2
AMP50840		34	-472	1
		34	-482	1
AMP50840-1		33	660	4
		34	-442	1
		34	-452	1
		34	-462	1
		35	-402	1
		35	-412	1
		35	-422	1
		33	-27	12
		33	-48	11
AMP50845-2		33	-113	12
		33	-335	1
		33	-375	1
		33	650	8
		34	400	1
		34	-438	1
		35	380	1
		32	230	2
		32	320	1
		32	130	1
		30	310	9
		32	360	9
		33	-24	1
		33	-34	3
		33	-44	4
AN816-6J AN910-2J AN924-6J AN960-10L		33	-497	1
		34	290	1
		34	350	4
		34	-434	1
		35	270	1
		35	330	3
		34	90	2
		35	90	2
		34	80	AR
		35	80	AR
		33	-332	2
AN960-6L				
AN960C6L				
AN960D10L				

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
AN960D10L		33	-372	2
		33	-496	2
		34	280	2
		35	260	2
AN960D6L		34	70	2
		35	70	2
		6	50	2
AR138-5-2		7	20	2
		8	20	1
		9	50	2
		3	260	2
AR199		1	830	2
B825-40-05-11		9	110	AR
BACB30LU4-3		1	260	6
BACB30LU4-4		2	30	20
		3	30	24
		11	30	10
		12	30	10
BACB30LU4-5		13	30	8
		24	30	2
		27	30	12
		2	70	4
BACB30NE4-10		1	180	4
BACB30NE4-11		11	50	2
BACB30NE4-18		13	50	2
		1	80	2
BACB30NE4-20		1	70	82
BACB30NE4-4		1	210	20
BACB30NE4-5		2	50	24
BACB30NE4-7		12	60	7
		1	100	2
BACB30NE6-21		32	680	2
BACC10DK10		32	320	1
BACC10DK14		32	710	4
BACC10DK15		30	290	12
		32	700	2
BACC10DK18		32	720	1
		32	350	4
BACC10DK6		32	-370	8
BACC10DK8		32	690	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
BACC10DKXX BACN10JC04		34	120	2
		35	120	2
		33	710	AR
		33	-267	2
		33	-726	2
		34	190	16
BACN10JC06		35	170	12
		33	540	4
		34	150	3
		34	170	12
		35	150	3
BACN10JC08		15	110A	2
		15	110B	4
		33	240	4
		33	310	4
		34	100	4
		35	100	4
BACN10JC3		33	-35	3
		33	-45	4
		33	-333	1
		33	-373	1
		33	-493	1
		34	250	1
		34	360	4
		35	230	1
		35	340	3
		33	-14	AR
BMS13-31T1C1S		33	-16	AR
		34	-14	AR
		34	-16	AR
		35	-14	AR
		35	-16	AR
		33	-11	AR
BMS13T1C1S-10		34	-11	AR
		35	-11	AR
BMS13T1C1S-14		33	-12	AR
		34	-12	AR
BMS13T1C1S-20		35	-12	AR
		33	-15	AR
		34	-15	AR

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
		35	-15	AR
BV5-01258		33	450	4
BV5-01261		33	460	4
BV5-01441		33	440	8
C301		34	440	1
C302		34	450	1
C303		34	460	1
C304		34	470	1
C305		34	480	1
C308		35	400	1
C309		35	410	1
C310		35	420	1
CBC-6-33-1		33	-51	1
		33	-61	1
		33	-81	1
		33	-91	1
D3010J		33	80	1
D3011J		33	90	1
D3012P		33	100	1
D301J		34	550	1
D301P		34	560	1
D302J		34	570	1
D302P		34	580	1
D303J		34	590	1
D303P		34	600	1
D304J		35	430	1
D304P		35	440	1
D305J		35	450	1
D305P		35	460	1
D306J		34	610	1
D307J		33	50	1
D308J		33	60	1
D309P		33	70	1
DIN1481-1-5X8		28	260	1
DIN1481-2X14		28	160	1
DIN471-20X1-2		32	240	2
DLH351-0069		30	40	2
ELASTOSILE43		1	704	AR
FE3406D16S		33	-71	1
FE3406D16S-1S		33	-101	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
GN565-1		5	50	2
IF511-9495		31	660	1
IF511-9546		36	660	1
L301		33	190	4
L305		33	200	1
L306		33	270	1
M301		34	520	1
M302		34	530	1
MB3A		33	680	AR
MS17987C608		1	194	1
MS17987C608		1	204	1
MS17987C610		1	290	8
MS18029-22		33	-26	2
		33	-38	2
		34	390	2
		34	-437	2
		35	370	2
MS18029-2S-3		33	-32	1
		34	-432	1
		35	310	1
MS18029-2S-4		33	-22	1
		33	-42	1
		34	330	1
MS20341-10A		33	-25	4
		33	-36	3
		33	-46	4
		33	-494	1
		34	260	1
		34	370	4
		34	-435	3
		35	240	1
		35	350	3
MS20822-6J		32	40	2
MS21905J6		32	190	2
MS21916J8-6		32	20	1
MS25036-108		33	-491	1
		34	230	1
		35	210	1
MS25226-4-3		33	-33	1
		34	-433	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
MS25226-4-4		35	320	1
		33	-23	1
		33	-43	1
MS265226-4-4		34	340	1
MS27212-2-3		33	-31	1
MS27212-2-3		34	-431	1
		35	300	1
MS27212-2-4		33	-21	1
MS27212-2-4		33	-41	1
		34	320	1
MS27291-3		34	-582	1
		34	-602	1
		35	-442	1
MS27291-4		34	-562	1
		35	-462	1
MS27488-16		33	-72	2
		33	-102	2
MS35058-22		34	-501	1
MS35059-21		34	-511	1
MS35338-43		33	-495	1
		34	270	1
		35	250	1
MS35489-1		33	-498	AR
MS51862-15C		2	150	8
		3	410	8
		4	340	6
		11	170	5
		12	150	5
		13	170	5
		14	60	4
		15	160	4
		18	260	14
		19	260	14
		20	140	6
		21	70	9
		22	110	4
		24	60	1
		25	60	2
		26	60	4
		27	60	6

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
N301		34	490	1
NAS1096-3-5		33	140	6
		33	180	6
		33	360	6
		33	400	6
NAS1763J0606		32	100	1
NAS42DD3-24		32	730	12
NAS42DD6-64		32	620	4
NAS43DD3-24		30	90	8
NAS514P1032-10P		4	100	20
NAS514P1032-14P		1	710	28
NAS514P1032-18P		1	410	18
NAS514P1032-20P		32	440	4
NAS514P1032-5P		1	310	4
NAS514P1032-6		18	160	6
		19	160	6
NAS514P1032-6P		1	-860	6
NAS514P1032-8		23	80	3
NAS514P440-4P		28	220	4
NAS514P440-8P		34	180	4
NAS514P632-24P		33	600	16
NAS514P632-4P		7	70	20
NAS514P632-5		11	180	1
		13	180	1
NAS514P632-5		30	220	8
NAS514P632-5P		17	30	20
NAS514P632-6P		1	130	4
		1	530	28
		1	540	14
		2	160	2
		3	180	8
		6	70	4
		7	40	4
		8	40	2
		10	40	3
		18	100	4
		19	100	4
		28	110	4
		32	160	2
		33	530	4

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
NAS514P632-8P		1	-486	6
		9	70	5
		34	160	12
		35	160	12
NAS514P832-10		2	120	2
NAS514P832-14P		28	130	2
NAS514P832-4P		8	80	10
NAS514P832-5P		29	60	12
NAS514P832-6P		1	400	36
		1	480	96
		1	550	14
		1	610	36
		3	140	10
		4	110	32
		5	100	18
		6	40	10
		9	30	18
		14	30	4
		15	70A	8
		15	70B	16
		18	60	16
		18	70	2
		19	60	16
		19	70	2
		20	70A	16
		20	70B	12
		21	40	12
		22	50	12
		25	30	2
		28	80	4
NAS514P832-8P		3	330	4
		23	50	48
		25	110	4
		28	60	4
NAS600-10P		33	-266	2
		33	-725	2
NAS600-8P		34	-210	12
		35	180	4
NAS601-10P		34	140	3
		35	140	3

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
NAS601-12P		5	40	2
		33	130	2
		33	170	2
NAS601-24P		3	220	14
NAS601-4P		33	470	16
		33	-724	2
NAS601-5P		1	193	1
NAS601-5P		1	203	1
NAS601-6P		1	-810	4
		3	270	4
		4	250	14
		5	180	4
		32	600	2
		34	60	2
		35	60	2
		4	300	2
NAS601-8P		18	200	1
		19	200	1
		23	130	2
		34	110	4
NAS602-10P		35	110	4
		1	670	8
NAS602-14P		15	100A	2
NAS602-18P		15	100B	4
		1	370	8
NAS602-20P		11	80	4
		13	80	4
		32	540	8
NAS602-26P		33	250	3
		33	-265	2
		33	320	3
		33	350	2
		33	390	2
		33	480	4
		18	180	6
NAS602-5P		19	180	6
		1	650	58
NAS602-6P		1	840	8
		2	210	22
		3	250	24

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
NAS602-6P		4	190	24
		5	150	20
		11	110	16
		12	90	16
		13	110	16
		16	30	4
		18	140	2
		19	140	2
		20	90	8
		21	100	2
		25	140	2
		26	30	8
		32	80	4
		32	300	10
		33	230	4
NAS602-8P		33	300	4
		33	630	2
		1	340	16
		2	90	2
		3	300	2
		4	210	16
		15	130A	4
		15	130B	8
		20	110	8
		25	160	2
		30	95	30
		30	150	24
		32	570	4
		28	200	2
		3	130	3
NAS603-10P NAS603-12P		4	140	4
		5	70	4
		32	760	1
		1	420	2
NAS603-13P NAS603-14P		30	320	4
		32	340	9
		32	740	7
		1	-940	4
NAS603-18P NAS603-20P		30	-330	3
		32	750	2

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
NAS603-22P		32	630	2
NAS603-24P		32	640	2
NAS603-4P		3	-365	1
		32	270	2
NAS603-6P		3	380	1
		5	130	2
		9	100	12
		18	120	2
		19	120	2
		22	80	2
NAS603-6P		24	100	1
		32	180	3
NAS603-8P		33	-492	1
		34	240	1
		35	220	1
NAS604-16P		3	50	14
		3	110	8
		4	50	13
NAS604-20P		3	120	12
		4	60	6
NAS604-24P		1	230	16
		4	90	6
NAS604-8P		21	120	2
NAS604-8P		1	-950	6
NSA5528-025		30	240	2
		32	660	1
NSA5528-070		30	20	2
NSA935131DG8		33	-13	AR
		34	-13	AR
		35	-13	AR
NSA935401-03		33	670	AR
NSA935805-12		33	640	AR
NSA935805-20		33	570	AR
NSA935805-32		33	700	AR
NSA935807-20		33	560	1
NSA935807-32		33	690	1
NSA937211-005		33	-73	AR
		33	-103	AR
		34	-563	1
		34	-583	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
PA6-40X30 QB0508 RD2-3D-1-4310		34	-603	1
		35	-443	1
		35	-463	1
		28	140	1
		30	30	1
		7	80	AR
		8	90	AR
		34	500	1
		34	510	1
		33	720	1
S301		33	260	1
S302		30	180	AR
S303		30	190	AR
S304		10	30	AR
SCOTCH3541		14	50	AR
SCOTCH3542		22	100	AR
SCOTCH9473-10		26	50	AR
SCOTCH9473-14		15	150	AR
		18	240	AR
		19	240	AR
		20	130	AR
		21	60	AR
		24	50	AR
		25	50	AR
		27	50	AR
		2	140	AR
		3	400	AR
SCOTCH9473-19		4	360	AR
		11	160	AR
		12	140	AR
		13	160	AR
		18	220	AR
		19	220	AR
		4	330	AR
		15	90	AR
		23	30	AR
		1	703	AR
SCOTCH9485-25		11	210	4
SPAX4X16		12	180	4
SPAX4X16		13	210	4

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
T301		34	540	1
TB301		33	20	1
TB302		33	30	1
TB303		33	40	1
TB304		34	310	1
TB305		34	430	1
TB306		35	290	1
TB307		33	110	1
TB308		33	150	1
TB309		33	330	1
TB310		33	370	1
ZCV173-3		32	400	1
OLN115-18K		34	-494	1
104057-01-016		5	120	2
		22	70	2
105135-10-002		28	250	1
106042-70-300		32	590	1
106042-70-400		32	610	1
106074-90-203		32	430	1
106080-80-203		34	50	1
		35	50	1
106090-80-105		34	130	1
		35	130	1
106090-88		28	120	1
106090-90-214		32	560	1
106091-02-017		4	310	4
106100-31-003		28	190	2
106108-80-102		33	120	1
		33	160	1
		33	340	1
		33	380	1
106108-90-201		32	450	1
106111-01-011		2	20	10
		3	20	12
		11	20	5
		12	20	5
		13	20	4
106113		1	-1A	RF
106113-00-013		3	210	1
106113-00-014		1	620	4

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
106113-00-019		1	640	2
106113-00-036		1	-790	4
106113-00-052		1	201	1
106113-00-053		1	191	1
106113-00-056		1	-685	2
106113-00-079		1	-495	2
106113-00-083		1	820	4
106113-00-104		1	680	2
106113-01		1	10	2
		2	-1	RF
106113-01-018		2	180	1
		3	240	2
106113-01-020		2	190	1
106113-01-025		2	60	2
106113-01-028		2	80	1
106113-01-100		2	10	1
106113-02		1	20	2
		3	-1	RF
106113-02-017		3	310	2
		25	100	2
106113-02-039		3	320	1
106113-02-100		3	10	1
106113-03		1	30	2
		4	-1	RF
106113-03-024		4	230	4
106113-03-039		4	280	4
106113-03-100		4	10	1
106113-04		1	380	2
		5	-1A	RF
106113-04-100		5	-10A	1
106113-05		1	390	2
		5	-1B	RF
106113-05-002		5	20	2
106113-05-004		5	60	2
106113-05-014		5	90	2
106113-05-018		5	140	10
106113-05-100		5	10B	1
106113-06		1	430	2
		6	-1A	RF
106113-06-100		6	10A	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
106113-07		1	440	2
		6	-1B	RF
106113-07-002		6	20	2
106113-07-007		6	30	2
106113-07-100		6	-10B	1
106113-08		1	450	2
		7	-1B	RF
106113-08-001		7	-10B	1
106113-09		1	460	2
		7	-1A	RF
106113-09-001		7	10A	1
106113-09-005		7	50	4
106113-10		1	470	2
		8	-1	1
106113-10-001		8	10	1
106113-10-005		8	50	1
106113-10-006		8	60	1
106113-10-009		7	60	4
		8	70	2
106113-10-011		7	90	4
		8	100	2
106113-11		1	560	2
		9	-1A	RF
106113-11-002		9	20	2
106113-11-009		9	90	2
106113-11-100		9	10A	1
106113-12		1	570	2
		9	-1B	RF
106113-12-100		9	-10B	1
106113-15		1	630	4
		10	-1	RF
106113-15-002		10	20	1
106113-15-100		10	10	1
106113-16		29	-1A	RF
106113-16-002		29	30	1
106113-16-003		29	40	1
		29	40	2
106113-16-004		29	20	1
106113-16-100		29	10A	1
106113-17		3	200	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
		29	-1B	RF
106113-17-003		29	50	2
106113-17-100		29	10B	1
106113-18		3	40	1
		23	-1	RF
106113-18-007		23	20	8
106113-18-010		23	70	1
106113-18-011		23	60	1
106113-18-100		23	10	1
106113-20		1	40	2
		11	-1	RF
106113-20-100		11	10	1
106113-21		1	50	2
		12	-1	RF
106113-21-003		12	50	1
106113-21-100		12	10	1
106113-22		1	60	2
		13	-1	RF
106113-22-002		11	40	1
		13	40	1
106113-22-004		11	60	1
		13	60	1
106113-22-006		11	70	1
		13	70	1
106113-22-007		11	90	2
		12	70	2
106113-22-007		13	90	2
106113-22-022		11	100	2
		12	80	2
		13	100	2
106113-22-100		13	10	1
106113-23		1	320	2
		17	-1B	RF
106113-23-001		17	10	2
106113-23-002		17	40	2
106113-23-003		17	50B	1
106113-23-004		17	60	2
106113-23-005		17	70	2
106113-23-006		17	80	2
106113-23-007		17	90B	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
106113-23-008		17	20	4
106113-24		1	330	2
		17	-1A	RF
106113-24-003		17	50A	1
106113-24-007		17	90A	1
106113-25		3	90	1
		24	-1	RF
106113-25-100		24	10	1
106113-26		3	100	1
		25	-1	1
106113-26-006		3	280	1
		4	180	2
		15	80A	2
		15	80B	4
		20	80	4
		25	130	1
106113-26-100		25	10	1
106113-27		3	150	1
		26	-1A	RF
106113-27-002		26	20	4
106113-27-100		26	10A	1
106113-28		3	160	1
		26	-1B	RF
106113-28-100		26	10B	
106113-29		3	60	1
		27	-1A	RF
106113-29-100		27	10A	1
106113-30		3	70	1
		27	-1B	RF
106113-30-100		27	-10B	1
106113-31		3	80	1
		27	-1C	RF
106113-31-100		27	-10C	1
106113-32		1	580	2
		14	-1	RF
106113-32-100		14	10	1
106113-33		1	590	2
		15	-1A	RF
106113-33-100		15	10A	1
106113-34		1	-600	2

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
106113-34-011		15	-1B	RF
		15	60B	1
		20	50	2
106113-34-100		15	10B	1
106113-35		4	160	1
		20	-1A	RF
106113-35-100		20	10A	1
106113-36		4	170	1
		20	-1B	RF
106113-36-003		20	40	1
		21	30	3
106113-36-100		20	10B	1
106113-37		4	20	1
		21	-1A	RF
106113-37-002		21	90	1
106113-37-100		21	10A	1
106113-38		4	40	1
106113-38		21	-1B	RF
106113-38-100		21	10B	1
106113-39		4	30	1
		21	-1C	RF
106113-39-100		21	10C	1
106113-40		4	70	1
		18	-1	RF
106113-40-012		18	90	1
		19	90	1
106113-40-100		18	10	1
106113-41		4	80	1
106113-41		19	-1	RF
106113-41-100		19	10	1
106113-51		1	220	4
106113-51-001		1	240	2
106113-51-002		1	250	2
106113-53		4	130	1
		22	-1B	RF
106113-53-100		22	-10B	1
106113-54		1	660	2
		16	-1	RF
106113-54-002		16	20	2
106113-54-004		16	40	2

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
106113-54-100		16	10	1
106113-55		4	120	1
		22	-1A	RF
106113-55-013		22	40	2
106113-55-100		22	10A	1
106113-58		1	690	2
106113-59		1	700	2
106113-59-001		1	701	1
106113-59-099		1	702	1
106113-60		1	-920	1
		31	-1	RF
106113-61		1	720	2
106113-62		1	730	2
106113-63		1	740	2
106113-64		1	750	2
106113-66		1	350	2
106113-67		1	360	2
106113-70		1	-870	2
		30	-1A	RF
106113-70-001		30	10	1
106113-70-006		30	110	1
106113-70-007		30	120	1
106113-70-010		30	100	1
106113-70-013		30	140	2
106113-70-014		30	130	2
106113-70-015		30	210	2
106113-70-023		30	160	2
106113-71		1	-880	2
		30	-1B	RF
106113-71-001		30	230	1
106113-71-003		30	250	1
106113-71-004		30	260	1
106113-74		1	490	2
		8	110A	1
106113-75		1	500	2
		8	110B	1
106113-76		1	510	2
		7	100B	1
106113-77		1	520	2
		7	-100A	1
106113-80		1	-910	2

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
106113-80		33	-1A	RF
		34	-1A	RF
		35	-1A	RF
106113-80-101		33	10	1
		34	10	1
		35	10	1
106113-80-102		33	220	1
106113-80-103		33	290	1
106113-80-200		34	20	1
106113-80-201		34	30	1
106113-80-202		34	40	1
106113-80-300		35	20	1
106113-80-301		35	30	1
106113-80-302		35	40	1
106113-90		1	-890	2
		32	-1	RF
106113-90-003		32	310	1
106113-90-004		32	110	1
106113-90-006		32	170	1
		32	220	2
106113-91-001		32	390	1
106113-91-003		32	470	1
106113-91-004		32	480	1
106113-91-005		32	460	1
106113-91-006		32	490	1
106113-91-007		32	500	2
106113-91-100		32	520	1
106113-91-200		32	530	1
106113A		1	-1B	RF
106113A60		1	-920A	1
106113A60		36	-1	RF
106113A80		1	-910A	2
		33	-1B	RF
		34	-1B	RF
		35	-1B	RF
10613-70-005		30	60	1
106245B15		1	200	2
106256A15		1	190	2
108065		3	170	2
		28	-1	RF
108065-00-005		28	10	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
108065-00-006		28	20	1
108065-00-007		28	30	2
108065-00-013		28	-40	2
108065-00-014		28	-50	4
108065-01		28	170	1
108065-01-001		28	180	1
108065-02		28	90	1
108065-03		28	70	2
108065-04		28	100	1
111008-00-225		24	20	1
		27	20	6
111010-01-004		28	150	1
111011-59-002		1	150	2
111011-59-003		1	140	2
111011-59-004		1	170	2
111011-85		1	90	18
111011-85-001		1	110	2
111011-85-002		1	120	2
111011-85-003		1	160	12
111011-85-009		12	40	1
111011-85-010		2	40	3
111011-85-023		2	45	4
111011-95		1	300	4
111012-03-043		6	60	2
		9	60	1
111012-03-138		7	30	2
		8	30	1
111012-07-004		33	510	1
111022-00-008		32	650	6
111022-05		33	550	1
111022-10		1	192	1
111022-10		1	202	1
111024-97-028		1	270	4
111024-98-003		1	280	4
111025-01		1	780	2
111025-02		1	770	2
111028-11-056		18	170	3
		19	170	3
		32	290	4
111029-00-077		4	290	2
		18	190	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
111029-00-077		19	190	1
		23	120	2
111042-04-034		5	80	4
		22	30	2
111042-04-040		3	340	1
111042-04-058		25	20	1
111042-04-066		18	130	1
		19	130	1
111043-04-082		2	110	2
111045-05-005		1	-800	4
		4	240	2
		5	30	2
111059-02-037		3	-360	1
111059-10-001		28	230	2
111060-01-001		21	110	1
111061-12		28	210	2
111061-12-001		28	240	1
111063-00-049		18	80	1
111063-00-049		19	80	1
111063-00-050		32	150	1
111063-00-055		32	260	1
111066-03-055		1	-485	16
111069-00-039		23	40	3
111069-00-040		4	220	2
		15	50B	1
		20	60	1
111070-00-110		14	20	1
		15	40A	4
		15	40B	4
		18	30	1
		19	30	1
		20	30A	4
		20	30B	3
		21	20	3
111070-00-110		22	20	2
		25	120	1
111070-00-111		18	20	3
		19	20	3
111070-00-159		25	90	1
111070-00-160		18	40	1
111070-00-161		18	150	2

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
111070-00-162		18	50	1
111070-00-163		19	150	2
111070-00-164		19	40	1
111070-00-165		19	50	1
111070-00-166		4	260	2
111070-00-167		4	-270	2
111071-10-016		30	-300	11
111071-10-016		32	330	9
11108-00-027		30	80	2
111090-09		23	90	7
111091-63		15	20A	2
		15	20B	4
		19	290	1
		20	20	8
		22	130	2
111091-64		18	290	1
		25	80	2
111091-66		23	100	7
111091-67		15	30A	1
		15	30B	2
		18	280	1
		19	280	1
111091-74		23	110	7
111091-88		2	100	2
		11	130	1
		12	110	1
		13	130	1
111091-89		11	140	1
		12	120	1
		13	140	1
111091-90		11	120	1
		12	100	1
		13	120	1
111091-96		3	350	2
111091-96		24	80	1
111094-01-026		30	370	2
		32	-380	4
		33	610	AR
111094-01-096		3	370	1
		5	110	2
		18	110	2

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
111094-01-096		19	110	2
		22	60	2
		24	90	1
111094-01-105		3	290	1
		4	200	2
		15	120A	2
		15	120B	4
		20	100	4
		2	150	1
		2	200	7
111094-01-107		3	230	7
		11	200	2
111094-01-136		12	170	2
		13	200	2
		32	580	1
111103-00-005		32	510	4
		30	280	5
111108-00-006		32	420	7
		32	670	2
111108-00-006		30	170	4
111108-00-010		30	70	3
111108-00-013		30	50	2
111108-00-014		30	200	6
111108-00-021		32	550	1
111111-00-022		33	-37	4
		33	-47	5
		33	-55	1
		33	-65	1
		33	-85	1
		33	-95	1
		33	-111	1
		33	-212	1
		33	-263	1
		33	-282	1
		33	-331	1
		33	-371	1
		33	-722	1
		34	380	5
		34	-436	4
111111-00-022		34	-444	1
		34	-454	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
111111-00-022		34	-464	1
		34	-474	1
		34	-484	1
		34	-492	1
		34	-503	1
		34	-513	1
		34	-523	1
		34	-533	1
		34	-543	1
		34	-552	1
		34	-572	1
		34	-592	1
		34	-613	1
		35	360	4
		35	-404	1
		35	-414	1
		35	-424	1
		35	-432	1
		35	-452	1
111111-00-027		33	490	1
		34	220	1
		35	200	1
111111-00-035		33	580	4
111111-00-043		33	410	2
111111-00-053		33	590	8
111111-00-086		33	620	1
111111-00-088		33	-264	1
111111-00-089		33	-723	1
111112-00-005		30	270	1
111112-03-049		32	50	1
111190-20-185		32	200	1
111190-22-039		32	210	1
111190-23-060		32	90	1
111190-23-205		32	30	1
111190-29-020		32	140	1
111190-29-160		32	60	1
111190-40-071		32	10	1
112007-16		33	420	1
112007-16-001		33	430	1
112007-16-002		33	500	1
114311-10-001		4	320	AR

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
114311-10-002		18	250	AR
		19	250	AR
114311-10-004		5	170	AR
		26	40	AR
114311-11-013		2	170	AR
		3	420	AR
		4	370	AR
		10	50	AR
		11	190	AR
		12	160	AR
		13	190	AR
		14	70	AR
		15	170	AR
		18	270	AR
		19	270	AR
		20	150	AR
		21	80	AR
		22	120	AR
		24	70	AR
114311-11-013		25	70	AR
		27	70	AR
114311-11-016		14	40	AR
		15	140	AR
114311-11-017		18	230	AR
		19	230	AR
		20	120	AR
		21	50	AR
		22	90	AR
		24	40	AR
		25	40	AR
		27	40	AR
114311-11-018		2	130	AR
		3	390	AR
		4	350	AR
		11	150	AR
		12	130	AR
		13	150	AR
114311-11-018		18	210	AR
		19	210	AR
114550-21		1	760	10
114550-22-001		5	160	AR

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
115072		31	290	1
115-106113		1	930	1
115-106113A		1	-930A	1
115500-00-001		31	700	1
		36	700	1
115500-00-002		31	710	1
		36	710	1
115500-00-003		31	720	1
		36	720	1
115500-00-004		31	730	1
		36	730	1
115500-00-009		31	770	1
		36	770	1
115500-00-011		31	680	1
		36	680	1
115500-00-012		31	690	1
		36	690	1
115500-00-013		31	780	1
115500-00-013		36	780	1
115500-00-014		31	790	3
		36	790	1
115500-00-023		31	740	5
		36	740	1
115500-00-039		31	670	10
		36	670	10
115500-00-111		31	760	6
		36	760	1
115500-00-139		36	750	1
115500-00-245		31	800	2
		36	800	2
115500-00980-		31	750	7
115501-00-020		31	640	2
		36	640	2
115501-00-040		31	600	2
		36	600	2
115501-00-100		31	620	4
		36	620	4
115501-00-150		31	630	2
		36	630	2
115501-00-200		31	610	14
		36	610	14

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
115501-01-200		31	650	7
		36	650	7
115504-00-001		36	290	1
115504-00-002		31	300	1
		36	300	1
115504-00-003		31	310	1
		36	310	1
115504-00-004		31	320	1
		36	320	1
115504-00-005		31	330	1
		36	330	1
115504-00-006		31	340	1
		36	340	1
115504-00-007		31	350	1
		36	350	1
115504-00-008		31	360	1
		36	360	1
115504-00-009		31	370	1
115504-00-009		36	370	1
115504-00-010		31	380	1
		36	380	1
115504-00-011		31	390	1
		36	390	1
115504-00-012		31	400	1
		36	400	1
115504-00-013		31	410	1
		36	410	1
115504-00-014		31	420	1
115504-00-015		31	430	1
115504-00-015		36	430	1
115504-00-016		31	440	1
		36	450	1
115504-00-017		31	450	1
		36	460	1
115504-00-018		31	460	1
		36	470	1
115504-00-019		31	470	1
115504-00-019		36	480	1
115504-00-020		31	480	1
		36	500	1
115504-00-021		31	490	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
115504-00-021		36	510	1
115504-00-022		31	500	1
		36	520	1
115504-00-023		31	510	1
		36	530	1
115504-00-024		31	520	1
		36	540	1
115504-00-025		31	530	1
		36	550	1
115504-00-026		31	540	1
		36	560	1
115504-00-027		31	550	1
		36	570	1
115504-00-028		31	560	1
		36	580	1
115504-00-029		31	570	1
		36	590	1
115504-00-030		31	580	1
115504-00-031		31	590	1
115504-00-233		36	420	1
115504-00-234		36	440	1
115504-00-235		36	490	1
115505-00-001		31	10	1
		36	10	1
115505-00-002		31	20	1
		36	20	1
115505-00-003		31	30	1
		36	30	1
115505-00-004		31	40	1
		36	40	1
115505-00-005		31	50	1
		36	50	1
115505-00-006		31	60	1
		36	60	1
115505-00-007		31	70	1
		36	70	1
115505-00-008		31	80	1
115505-00-008		36	80	1
115505-00-009		31	90	1
		36	90	1
115505-00-010		31	100	1

COMPONENT MAINTENANCE MANUAL


PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
115505-00-010		36	100	1
115505-00-011		31	110	1
		36	110	1
115505-00-012		31	120	1
		36	120	1
115505-00-013		31	130	1
		36	130	1
115505-00-014		31	140	1
115505-00-015		31	150	1
		36	150	1
115505-00-016		31	160	1
115505-00-019		36	170	1
115505-00-020		31	170	1
		36	190	1
115505-00-021		31	180	1
		36	200	1
115505-00-022		31	190	1
		36	210	1
115505-00-023		31	200	1
		36	220	1
115505-00-024		31	210	1
		36	230	1
115505-00-025		31	220	1
		36	240	1
115505-00-026		31	230	1
		36	250	1
115505-00-027		31	240	1
		36	260	1
115505-00-028		31	250	1
		36	270	1
115505-00-029		31	260	1
		36	280	1
115505-00-030		31	270	1
115505-00-031		31	280	1
115505-00-237		36	140	1
115505-00-238		36	160	1
115505-00-239		36	180	1
160113-16		3	190	1
1841-1-5620		33	-211	2
		33	-281	5
190120-50-001		32	410	1

COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE STOCK NO.	FIGURE	ITEM	TOTAL REQ.
2000-24		30	-360	2
27S3-4F		10	60	2
		33	520	8
28S11-4		34	300	3
		35	280	3
2966-01		30	340	2
2980082100100		32	120	1
2-KL-C		32	250	2
2LA002692-02		33	210	1
		33	280	1
2TC6-10		34	-451	1
2TC6-2		34	-481	1
3530-0018-03		32	280	1
414N3300-195B		9	80	4
48-10R14-15S		34	-591	1
48-10R14-7S		34	-571	1
		35	-431	1
48-10R16-10S		34	-551	1
48-10R16-10S		35	-451	1
48-16R14-15P		34	-601	1
48-16R14-7P		34	-581	1
		35	-441	1
48-16R16-10P		34	-561	1
		35	-461	1
5035-02-0064		1	-850	4
5258-1		34	-611	1
583-15A		34	-441	1
		34	-461	1
		34	-471	1
		35	-401	1
		35	-411	1
		35	-421	1
62-11		34	-521	1
		34	-531	1
704059		33	-261	1
		33	-721	1
81-30		34	-541	1
90K8A1D3G2L1N		34	-491	1
90KJ1-A		34	-493	1


COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
GALLEY G30
FIGURE 1; SHEET 1 OF 2

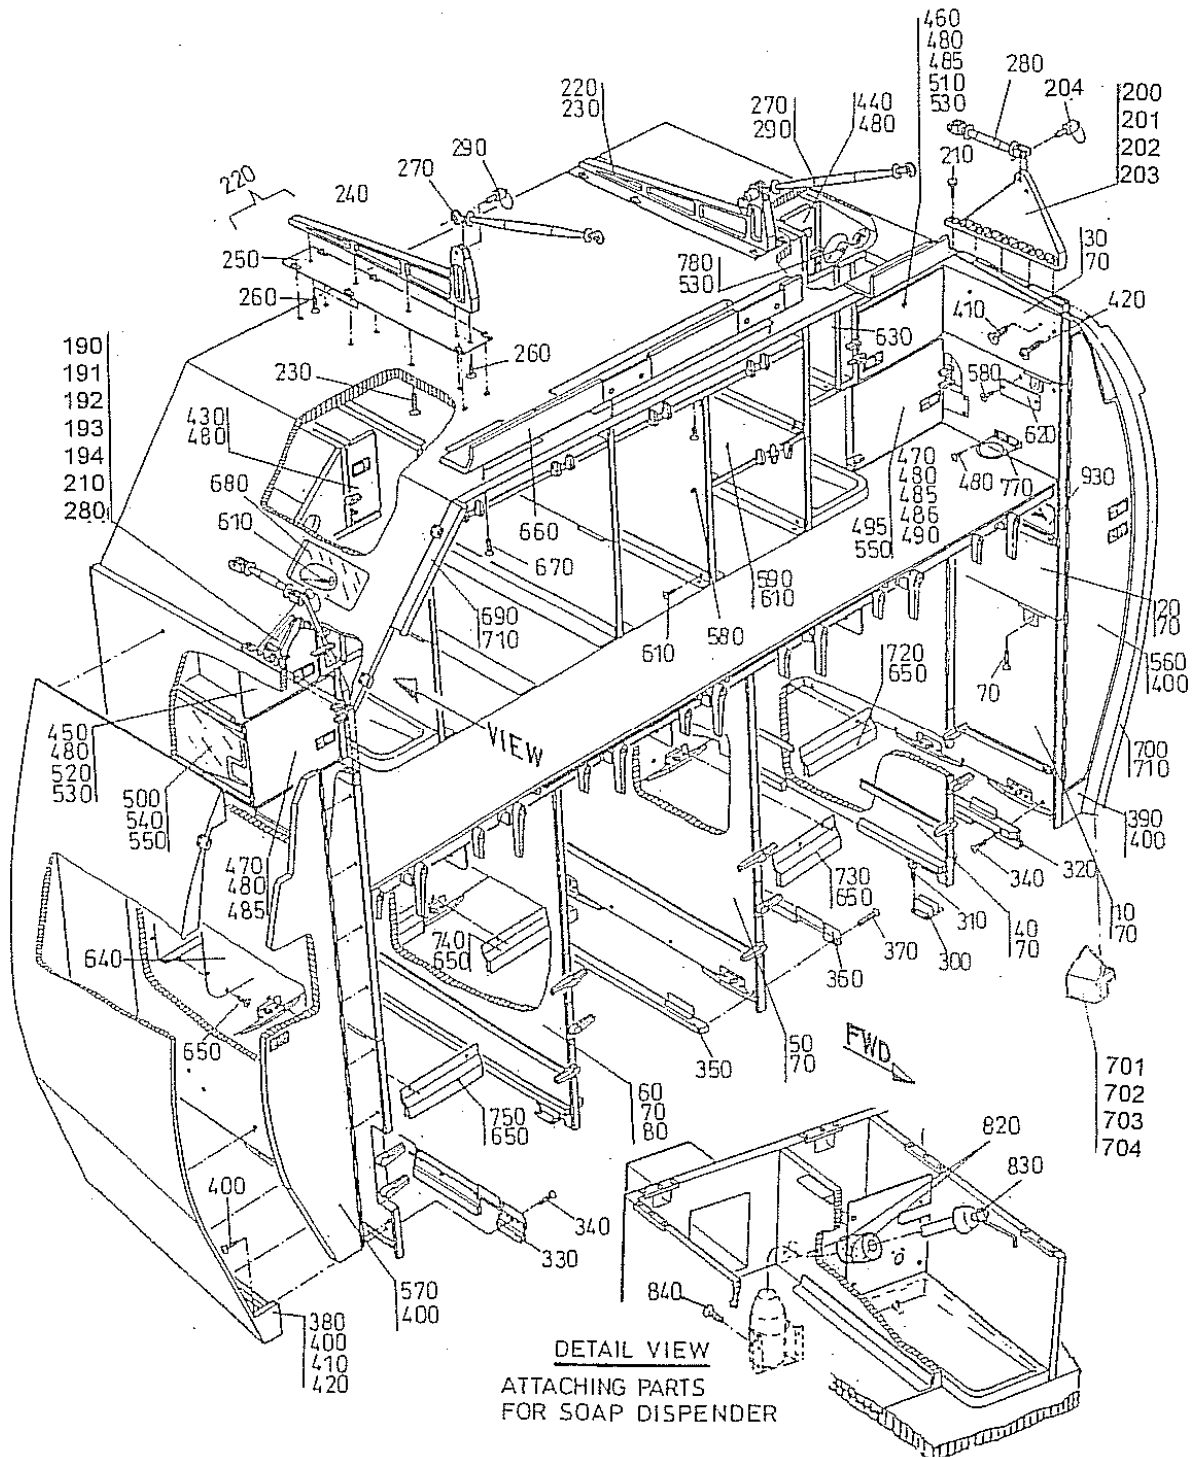

COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
GALLEY G30
FIGURE 1; SHEET 2 OF 2

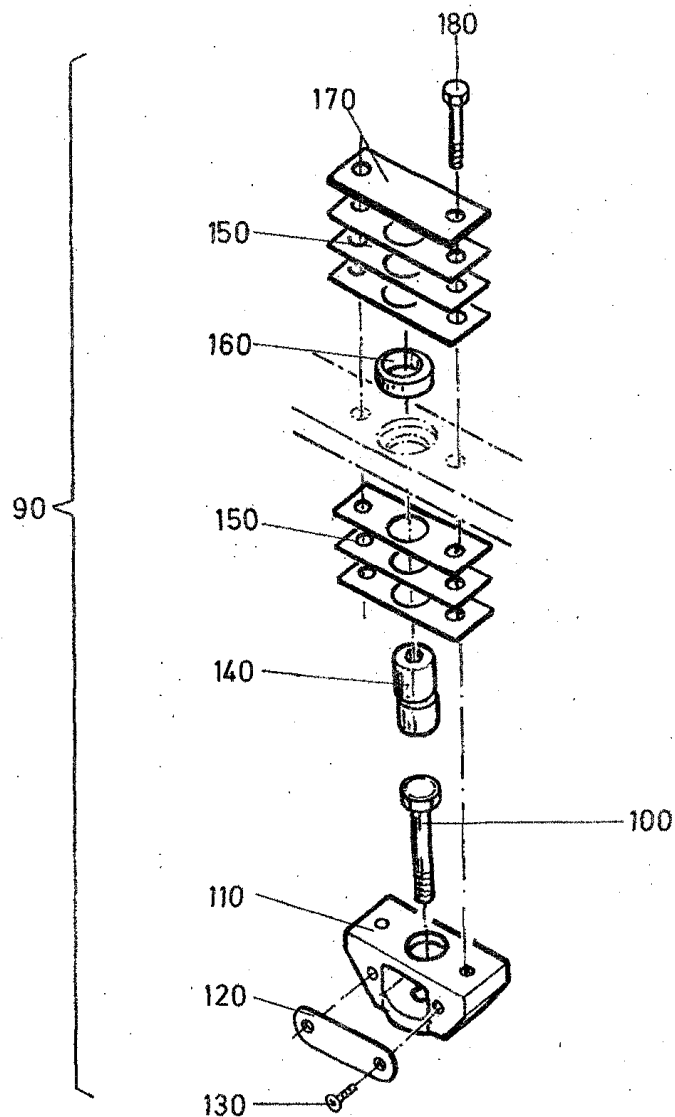

COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST GALLEY G30 FIGURE 1

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
1	-1A	106113		GALLEY G30	A	RF
	-1B	106113A		GALLEY G30	B	RF
	10	106113-01		.LOWER BODY ASSY (SEE FIG. 2 FOR DET.)		1
	20	106113-02		.MIDDLE BODY ASSY (SEE FIG. 3 FOR DET.)		1
	30	106113-03		.UPPER BODY ASSY (SEE FIG. 4 FOR DET.)		1
	40	106113-20		.PANEL ASSY (SEE FIG. 11 FOR DET.)		1
	50	106113-21		.PANEL ASSY (SEE FIG. 12 FOR DET.)		1
	60	106113-22		.PANEL ASSY (SEE FIG. 13 FOR DET.)		1
	70	BACB30NE4-4		ATTACHING PARTS .SCREW , RED SCREWHEAD		41
	80	BACB30NE4-20		.SCREW , RED SCREWHEAD ---x---		1
	90	111011-85		.ATTACHMENT ASSY (SEE SHEET 2 OF FIG.1)		9
	100	BACB30NE6-21		ATTACHING PARTS .SCREW ---x---		1
	110	111011-85-001		..BLOCK		1
	120	111011-85-002		..COVER		1
	130	NAS514P632-6P		..SCREW , RED SCREWHEAD		2
	140	111011-59-003		..ECCENTRIC PIN		1
	150	111011-59-002		..ECCENTRIC BUSHING		1
	160	111011-85-003		..SHIM		6
	170	111011-59-004		..PLATE		1
	180	BACB30NE4-11		..SCREW , RED SCREWHEAD		2
	190	106256A15		.ATTACHMENT, UPPER		1
	191	106113-00-053		..ATTACHMENT, UPPER		1
	192	111022-10		..LOOP ASSY		1
	193	NAS601-5P		..SCREW		1
	194	MS17987C608		.. PIN		1

COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
1	200	106241B15		.ATTACHMENT, UPPER ATTACHING PARTS		1
	201	106113-00-052		..ATTACHMENT, UPPER		1
	202	111022-10		..LOOP ASSY		1
	203	NAS601-5P		..SCREW		1
	204	MS17987C608		.. PIN		1
	210	BACB30NE4-5		.SCREW		10
				---X---		
	220	106113-51		.UPPER ATTACHMENT ASSY ATTACHING PARTS		2
	230	NAS604-24P		.SCREW		8
				---X---		
	240	106113-51-001		..ATTACHMENT		1
	250	106113-51-002		..PLATE		1
	260	BACB30LU4-3		..SCREW		3
	270	111024-97-028		.TIE ROD		2
	280	111024-98-003		.TIE ROD		2
	290	MS17987C610		.PIN		4
	300	111011-95		.FLUTTERPOINT ATTACHMENT		2
	310	NAS514P1032-5P		..SCREW		2
	320	106113-23		.WHEEL GUIDE ASSY (SEE FIG. 17 FOR DET.)		1
	330	106113-24		.WHEEL GUIDE ASSY (SEE FIG. 17 FOR DET.) ATTACHING PARTS		1
	340	NAS602-8P		.SCREW		8
				---X---		
	350	106113-66		.WHEEL GUIDE ASSY		1
	360	106113-67		.WHEEL GUIDE ASSY ATTACHING PARTS		1
	370	NAS602-20P		.SCREW		4
				---X---		
	380	106113-04		.STOWAGE BODY ASSY R/H (SEE FIG 5 FOR DET.)		1
	390	106113-05		.STOWAGE BODY ASSY L/H (SEE FIG 5 FOR DET.) ATTACHING PARTS		1
	400	NAS514P832-6P		.SCREW , RED SCREWHEAD		18
	410	NAS514P1032-18P		.SCREW , RED SCREWHEAD		9

COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
1	420	NAS603-14P		.SCREW , RED SCREWHEAD ---X---		1
	430	106113-06		.DOOR ASSY (SEE FIG. 6 FOR DET.)		1
	440	106113-07		.DOOR ASSY (SEE FIG 6 FOR DET.)		1
	450	106113-08		.DOOR ASSY (SEE FIG. 7 FOR DET.)		1
	460	106113-09		.DOOR ASSY (SEE FIG. 7 FOR DET)		1
	470	106113-10		.DOOR ASSY (SEE FIG. 8 FOR DET.) ATTACHING PARTS		1
	480	NAS514P832-6P		.SCREW , RED SCREWHEAD		48
	-485	111066-03-055		.SCREW		8
	-486	NAS514P632-8P		.SCREW		3
	490	106113-74		.COVER ASSY		1
	-495	106113-00-079		.PROFILE, L		1
	500	106113-75		.COVER ASSY		1
	510	106113-76		.COVER ASSY		1
	520	106113-77		.COVER ASSY ATTACHING PARTS		1
	530	NAS514P632-6P		.SCREW		14
	540	NAS514P632-6P		.SCREW , RED SCREWHEAD		7
	550	NAS514P832-6P		.SCREW , RED SCREWHEAD ---X---		7
	560	106113-11		.DOOR ASSY (SEE FIG. 9 FOR DET.)		1
	570	106113-12		.DOOR ASSY (SEE FIG 9 FOR DET.)		1
	580	106113-32		.PLATE ASSY (SEE FIG. 14. FOR DET.)		1
	590	106113-33		.PANEL ASSY (SEE FIG. 15 FOR DET.)		1
	-600	106113-34		.PANEL ASSY (SEE FIG 15 FOR DET.) ATTACHING PARTS		1
	610	NAS514P832-6P		.SCREW , RED SCREWHEAD ---X---		18
	620	106113-00-014		.PLATE		2

COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
1	630	106113-15		.PLATE ASSY (SEE FIG. 10 FOR DET.)		2
	640	106113-00-019		.PLATE		1
	650	NAS602-6P		.SCREW, RED HEAD		29
	660	106113-54		.PELMET ASSY (SEE FIG. 16 FOR DET.)		1
	670	NAS602-14P		ATTACHING PARTS .SCREW ---X---		4
	680	106113-00-104		.COVER		1
	-685	106113-00-056		.COVER		1
	690	106113-58		.COVER		1
	700	106113-59		.COVER ATTACHING PARTS		1
	701	106113-59-001		..PROFILE, L		1
	702	106113-59-099		..EDGE ASSY		1
	703	SCOTCH9485-25		..TAPE		AR
	704	ELASTOSILE43		..SILICONE		AR
	710	NAS514P1032-14P		.SCREW ---X---		14
	720	106113-61		.COVER ASSY		1
	730	106113-62		.COVER ASSY		1
	740	106113-63		.COVER ASSY		1
	750	106113-64		.COVER ASSY		1
	760	114550-21		.PROFILE, L		5
	770	111025-02		.HOLDER, CUP		1
	780	111025-01		.DISPENSER, CUP		1
	-790	106113-00-036		.TUBE		2
	-800	111045-05-005		.SUPPORT		2
	-810	NAS601-6P		.SCREW		2
	820	106113-00-083		.SPACER		2
	830	B825-40-05-11		.DISPENSER, SOAP (V120C2)		1
	840	NAS602-6P		.SCREW		4
	-850	5035-02-0064		.OPENER, BOTTLE (VD2249) ATTACHING PARTS		2
	-860	NAS514P1032-6P		.SCREW ---X---		3
	-870	106113-70		.EXHAUST AIR ASSY (SEE FIG. 30 FOR DET.)		1

COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
1	-880	106113-71		.INDIV. FRESH AIR ASSY (SEE FIG. 30 FOR DET.)		1
	-890	106113-90		.POTABLE WATER SYSTEM ASSY (SEE FIG. 32 FOR DET.)		1
	-900	106113-91		.WASTE WATER ASSY (SEE FIG. 32 FOR DET.)		1
	-910	106113-80		.WIRING ASSY (SEE FIG. 33 FOR DET.)		1
	-910A	106113A80		.WIRING ASSY (SEE FIG. 33 FOR DET.)		1
	-920	106113-60		.PLACARDING ASSY (SEE FIG. 31 FOR DET.)	A	1
	-920A	106113A60		.PLACARDING ASSY (SEE FIG. 31 FOR DET.)	B	1
	930	115-106113		.PLACARD, IDENT NP	A	1
	-930A	115-106113A		.PLACARD, IDENT NP	B	1
	-940	NAS603-18P		.SCREW FOR COFFEE MAKER INSTALLATION		4
	-950	NAS604-8P		.SCREW FOR OVEN INSTALLATION		6




COMPONENT MAINTENANCE MANUAL
106113 / 106113A

INTENTIONALLY LEFT BLANK

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
LOWER BODY ASSY
FIGURE 2

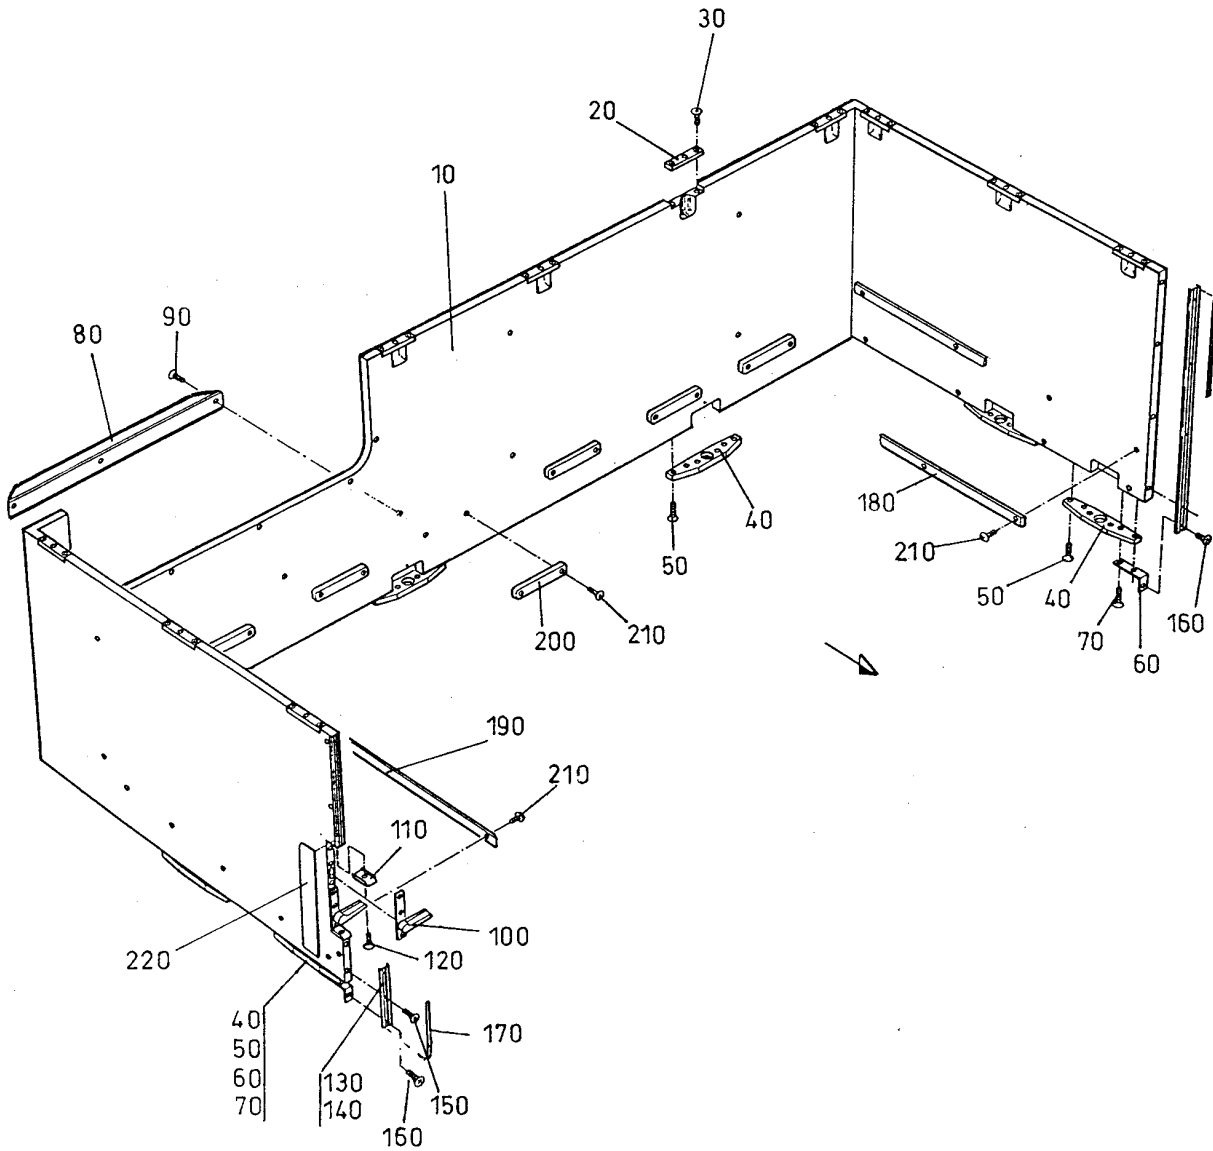


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
LOWER BODY ASSY
FIGURE 2

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
2	-1	106113-01		LOWER BODY ASSY (SEE FIG. 1 FOR NHA)		RF
	10	106113-01-100		.CARCASS, LOWER BODY		1
	20	106111-01-011		.PLATE		10
	30	BACB30LU4-4		.BOLT		20
	40	111011-85-010		.PLATE		3
	45	111011-85-023		.PLATE		4
	50	BACB30NE4-7		.SCREW		24
	60	106113-01-025		.PROFILE, L		2
	70	BACB30NE4-10		.SCREW		4
	80	106113-01-028		.PROFILE		1
	90	NAS602-8P		.SCREW		2
	100	111091-88		.CATCH ASSY		2
	110	111043-04-082		.PROFILE, END CAP		2
	120	NAS514P832-10		.SCREW		2
	130	114311-11-018		.PROFILE, EDGE		AR
	140	SCOTCH9473-19		.TAPE (VD2607)		AR
	150	MS51862-15C		.SCREW		8
	160	NAS514P632-6P		.SCREW		2
	170	114311-11-013		.INSERT, PROFILE		AR
	180	106113-01-018		.STRIP, SLIDING		1
	190	106113-01-020		.STRIP, SLIDING		1
	200	111094-01-107		.BUMPER		7
	210	NAS602-6P		.SCREW		22

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
MIDDLE BODY ASSY
FIGURE 3

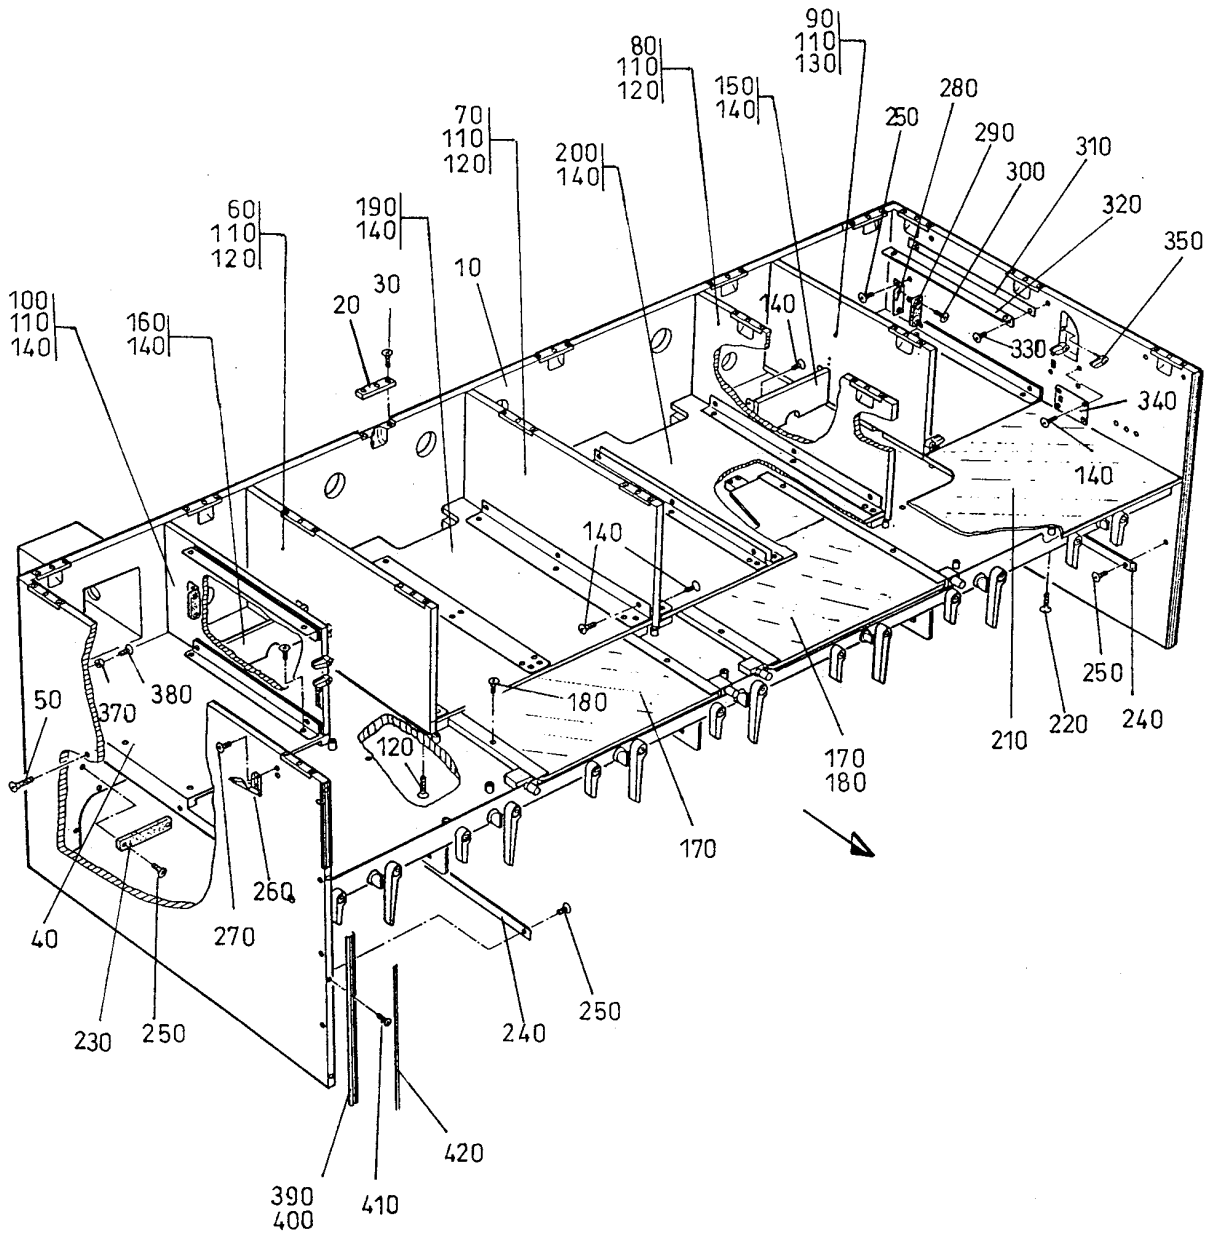

REV B

25-30-44

PAGE 1036
NOV05/99

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
MIDDLE BODY ASSY
FIGURE 3

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
3	-1	106113-02		MIDDLE BODY ASSY (SEE FIG. 1 FOR NHA)		RF
	10	106113-02-100		.CARCASS, MIDDLE BODY		1
	20	106111-01-011		.PLATE		12
	30	BACB30LU4-4		.BOLT		24
	40	106113-18		.WORKING PLATE ASSY (SEE FIG. 23 FOR DET.)		1
	50	NAS604-16P		ATTACHING PARTS .SCREW ---X---		14
	60	106113-29		.PLATE ASSY (SEE FIG. 27 FOR DET.)		1
	70	106113-30		.PLATE ASSY (SEE FIG. 27 FOR DET.)		1
	80	106113-31		.PLATE ASSY (SEE FIG. 27 FOR DET.)		1
	90	106113-25		.PLATE ASSY (SEE FIG. 24 FOR DET.)		1
	100	106113-26		.PLATE ASSY (SEE FIG. 25 FOR DET.)		1
	110	NAS604-16P		.SCREW		8
	120	NAS604-20P		.SCREW		12
	130	NAS603-12P		.SCREW		3
	140	NAS514P832-6P		.SCREW		10
	150	106113-27		.PLATE ASSY (SEE FIG. 26 FOR DET.)		1
	160	106113-28		.PLATE ASSY (SEE FIG. 26 FOR DET.)		1
	170	108065		.PULLOUT TABLE ASSY (SEE FIG. 28 FOR DET.)		2
	180	NAS514P632-6P		.SCREW		8
	190	160113-16		.PLATE ASSY (SEE FIG. 29 FOR DET.)		1
	200	106113-17		.PLATE ASSY (SEE FIG. 29 FOR DET.)		1



ALBERT MÜHLENBERG APPARATEBAU COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
3	210	106113-00-013		.PLATE, WORKING ATTACHING PARTS		1
	220	NAS601-24P		.SCREW ---X---		14
	230	111094-01-107		.BUMPER		7
	240	106113-01-018		.STRIP, SLIDING		2
	250	NAS602-6P		.SCREW		24
	260	AR199		.HOOK, COAT (V80477)		2
	270	NAS601-6P		.SCREW		4
	280	106113-26-006		.PROFILE, L		1
	290	111094-01-105		.BUMPER		1
	300	NAS602-8P		.SCREW		2
	310	106113-02-017		.SPACER		2
	320	106113-02-039		.PROFILE, L		1
	330	NAS514P832-8P		.SCREW		4
	390	114311-11-018		.PROFILE, EDGE		AR
	400	SCOTCH9473-19		.TAPE (VD2607)		AR
	410	MS51862-15C		.SCREW		8
	420	114311-11-013		.INSERT, PROFILE		AR
	370	111094-01-096		.BUMPER		1
	380	NAS603-6P		.SCREW		1
	340	111042-04-040		.STRIKE		1
	350	111091-96		.CATCH ASSY		2
	-360	111059-02-037		.SPRING		1
	-365	NAS603-4P		.SCREW		1




COMPONENT MAINTENANCE MANUAL
106113 / 106113A

INTENTIONALLY LEFT BLANK

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
UPPER BODY ASSY
FIGURE 4

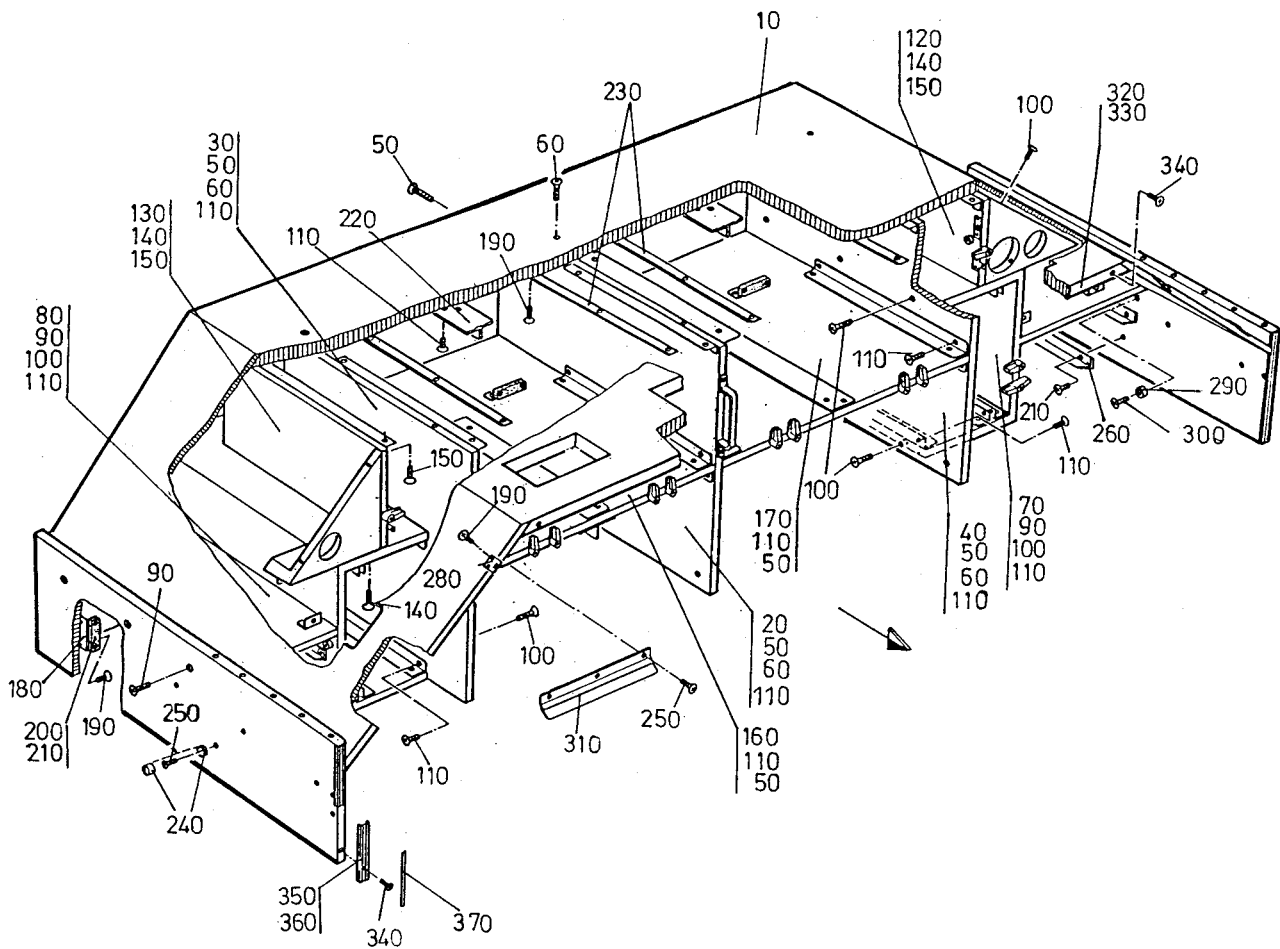

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
UPPER BODY ASSY
FIGURE 4

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
4	-1	106113-03		UPPER BODY ASSY (SEE FIG. 1 FOR NHA)		RF
	10	106113-03-100		.CARCASS, UPPER BODY		1
	20	106113-37		.PLATE ASSY (SEE FIG. 21 FOR DET.)		1
	30	106113-39		.PANEL ASSY (SEE FIG. 21 FOR DET.)		1
	40	106113-38		.PLATE ASSY (SEE FIG. 21 FOR DET.)		1
	50	NAS604-16P		ATTACHING PARTS .SCREW		13
	60	NAS604-20P		.SCREW		6
	70	106113-40		---X---		
	80	106113-41		.PANEL ASSY (SEE FIG. 18 FOR DET.)		1
	90	NAS604-24P		.PANEL ASSY (SEE FIG. 19 FOR DET.)		1
	100	NAS514P1032-10P		.SCREW		6
	110	NAS514P832-6P		.SCREW		20
	120	106113-55		.SCREW		32
	130	106113-53		.PANEL ASSY (SEE FIG. 22 FOR DET.)		1
	140	NAS603-12P		.PANEL ASSY (SEE FIG. 22 FOR DET.)		1
	160	106113-35		.SCREW		4
	170	106113-36		.PANEL ASSY (SEE FIG. 20 FOR DET.)		1
	180	106113-26-006		.PANEL ASSY (SEE FIG. 20 FOR DET.)		1
	190	NAS602-6P		.PROFILE, L		2
	200	111094-01-105		.SCREW		24
	210	NAS602-8P		.BUMPER		2
	220	111069-00-040		.SCREW		16
	230	106113-03-024		.PROFILE, T		2
	240	111045-05-005		.STRIP, SLIDING		4
				.SUPPORT		2



ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
4	250	NAS601-6P		.SCREW		14
	260	111070-00-166		.PROFILE, L		2
	-270	111070-00-167		.PROFILE, L		2
	280	106113-03-039		.PLATE		4
	290	111029-00-077		.WASHER		2
	300	NAS601-8P		.SCREW		2
	310	106091-02-017		.PROFILE		4
	320	114311-10-001		.PROFILE, EDGE		AR
	330	SCOTCH9473-26		.TAPE (VD2607)		AR
	340	MS51862-15C		.SCREW		6
	350	114311-11-018		.PROFILE, EDGE		AR
	360	SCOTCH9473-19		.TAPE (VD2607)		AR
	370	114311-11-013		.INSERT, PROFILE		AR




COMPONENT MAINTENANCE MANUAL
106113 / 106113A

INTENTIONALLY LEFT BLANK

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
STOWAGE BODY ASSY L/H AND R/H
FIGURE 5

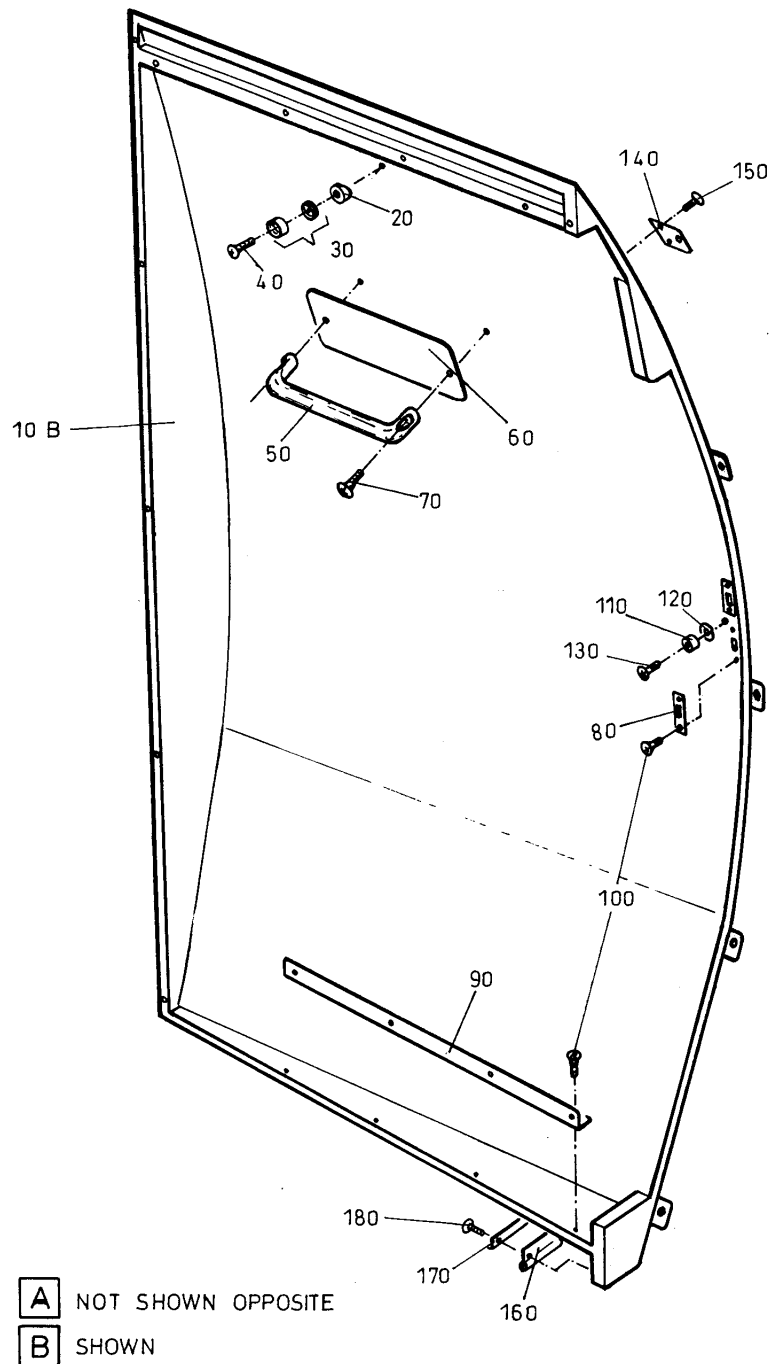

REV B

25-30-44

PAGE 1044
NOV05/99


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
STOWAGE BODY ASSY L/H AND R/H
FIGURE 5

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
5	-1A	106113-04		STOWAGE BODY ASSY R/H (SEE FIG. 1 FOR NHA)	A	RF
	-1B	106113-05		STOWAGE BODY ASSY L/H (SEE FIG. 1 FOR NHA)	B	RF
	-10A	106113-04-100		.CARCASS, STOWAGE BODY	A	1
	10B	106113-05-100		.CARCASS, STOWAGE BODY	B	1
	20	106113-05-002		.SUPPORT	A,B	1
	30	111045-05-005		.SUPPORT	A,B	1
	40	NAS601-12P		.SCREW	A,B	1
	50	GN565-1		.HANDLE (VC0488)	A,B	1
	60	106113-05-004		.PLATE	A,B	1
	70	NAS603-12P		.SCREW	A,B	2
	80	111042-04-034		.STRIKE	A,B	2
	90	106113-05-014		.PROFILE, L	A,B	1
	100	NAS514P832-6P		.SCREW	A,B	9
	110	111094-01-096		.BUMPER	A,B	1
	120	104057-01-016		.WASHER	A,B	1
	130	NAS603-6P		.SCREW	A,B	1
	140	106113-05-018		.PLATE	A,B	5
	150	NAS602-6P		.SCREW	A,B	10
	160	114550-22-001		.PROFILE, SILICONE	A,B	AR
	170	114311-10-004		.PROFILE, EDGE	A,B	AR
	180	NAS601-6P		.SCREW	A,B	2

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
DOOR ASSIES
FIGURE 6

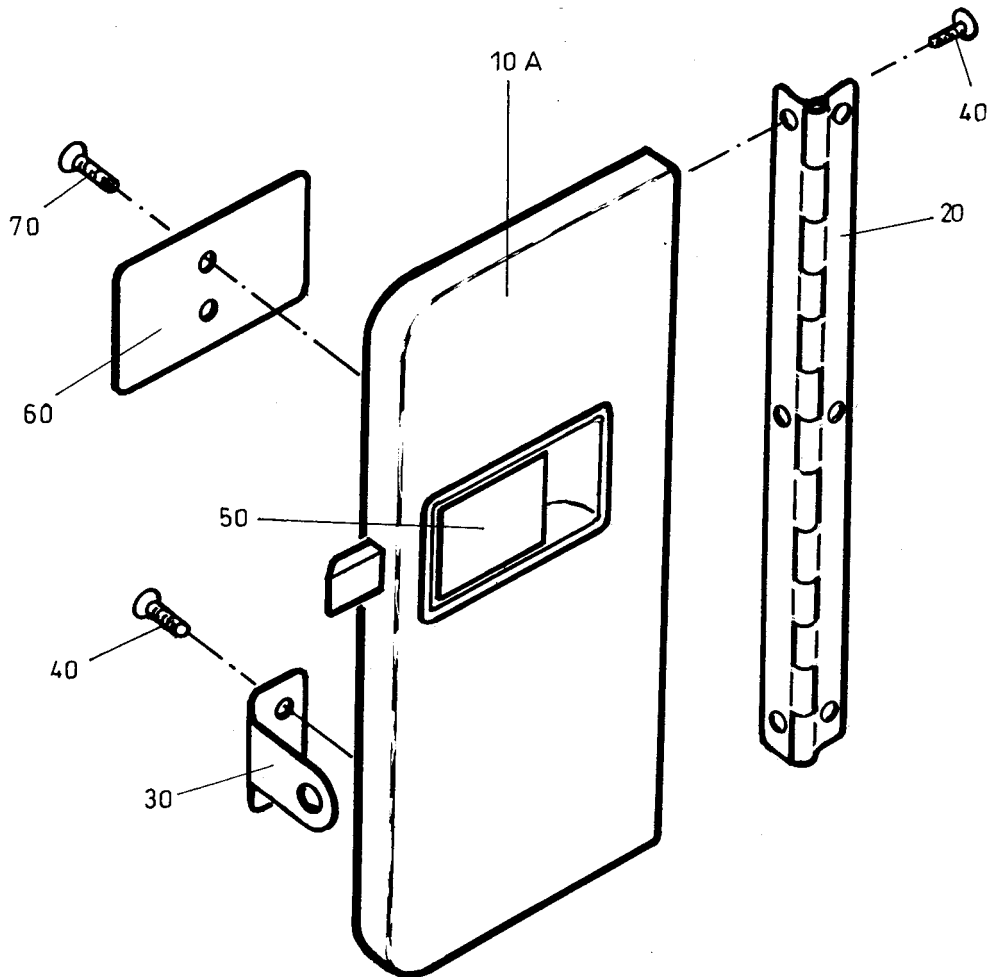

- A SHOWN
B NOT SHOWN OPPOSITE


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
DOOR ASSIES
FIGURE 6

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
6	-1A	106113-06		DOOR ASSY (SEE FIG 1 FOR NHA)	A	RF
	-1B	106113-07		DOOR ASSY (SEE FIG 1 FOR NHA)	B	RF
	10A	106113-06-100		.DOOR CARCASS	A	1
	-10B	106113-07-100		.DOOR CARCASS	B	1
	20	106113-07-002		.HINGE, BANDY	A,B	1
	30	106113-07-007		.ANGLE	A,B	1
	40	NAS514P832-6P		.SCREW	A,B	5
	50	AR138-5-2		.LATCH (V80477)	A,B	1
	60	111012-03-043		.PLATE	A,B	1
	70	NAS514P632-6P		.SCREW	A,B	2

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
DOOR ASSIES
FIGURE 7

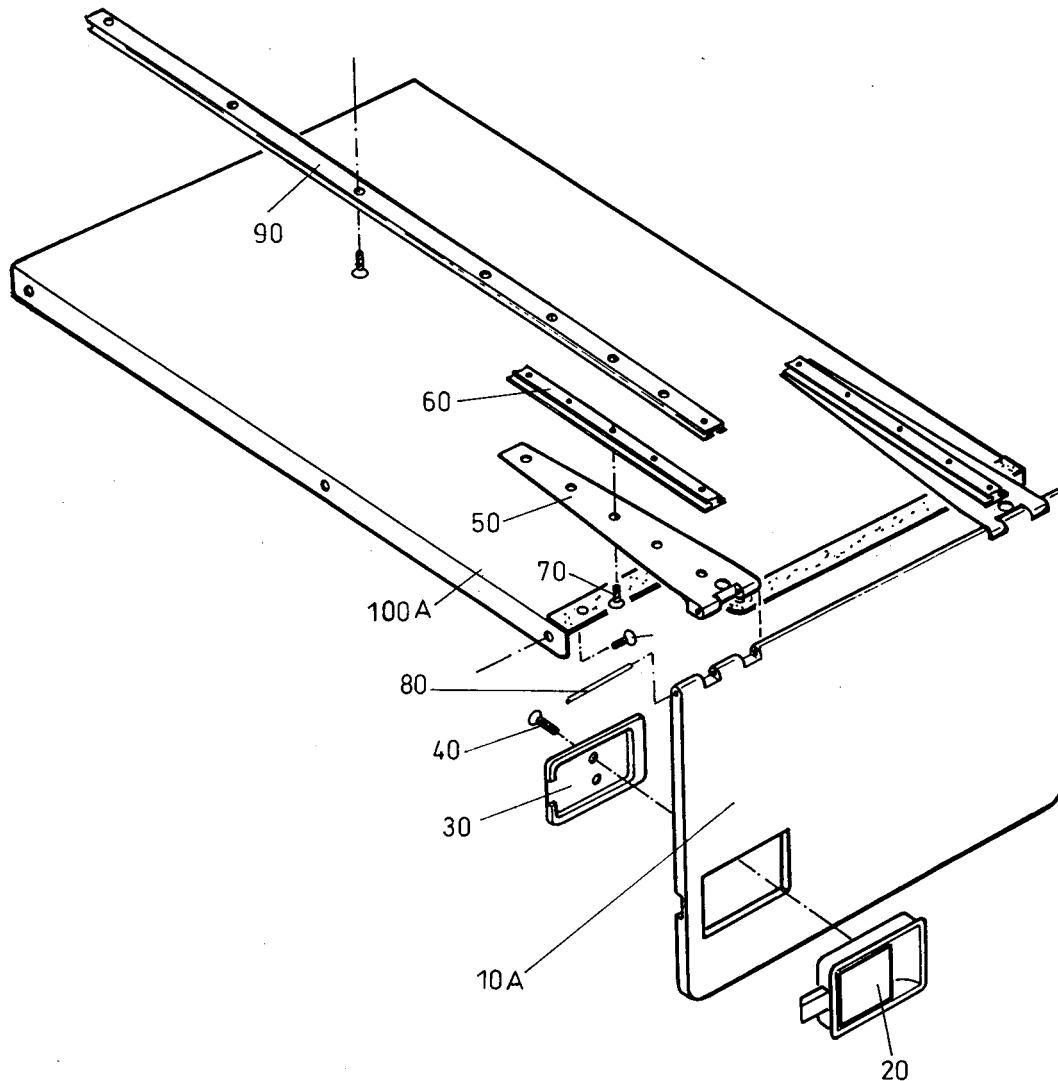

- A** SHOWN
B NOT SHOWN OPPOSITE

REV B

25-30-44

PAGE 1048
NOV05/99


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
DOOR ASSIES
FIGURE 7

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
7	-1A	106113-09		DOOR ASSY (SEE FIG. 1 FOR NHA)	A	RF
	-1B	106113-08		DOOR ASSY (SEE FIG. 1 FOR NHA)	B	RF
	10A	106113-09-001		.CARCASS, DOOR	A	1
	-10B	106113-08-001		.CARCASS, DOOR	B	1
	20	AR138-5-2		.LATCH (V80477)	A,B	1
	30	111012-03-138		.PLATE	A,B	1
	40	NAS514P632-6P		.SCREW	A,B	2
	50	106113-09-005		.SUPPORT	A,B	2
	60	106113-10-009		.PROFILE	A,B	2
	70	NAS514P632-4P		.SCREW	A,B	10
	80	RD2-3D-1-4310		.STEEL, STAINLESS	A,B	AR
	90	106113-10-011		.PROFILE	A,B	2
	-100A	106113-77		.COVER	A	1
	100B	106113-76		.COVER	B	1

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
DOOR ASSY
FIGURE 8

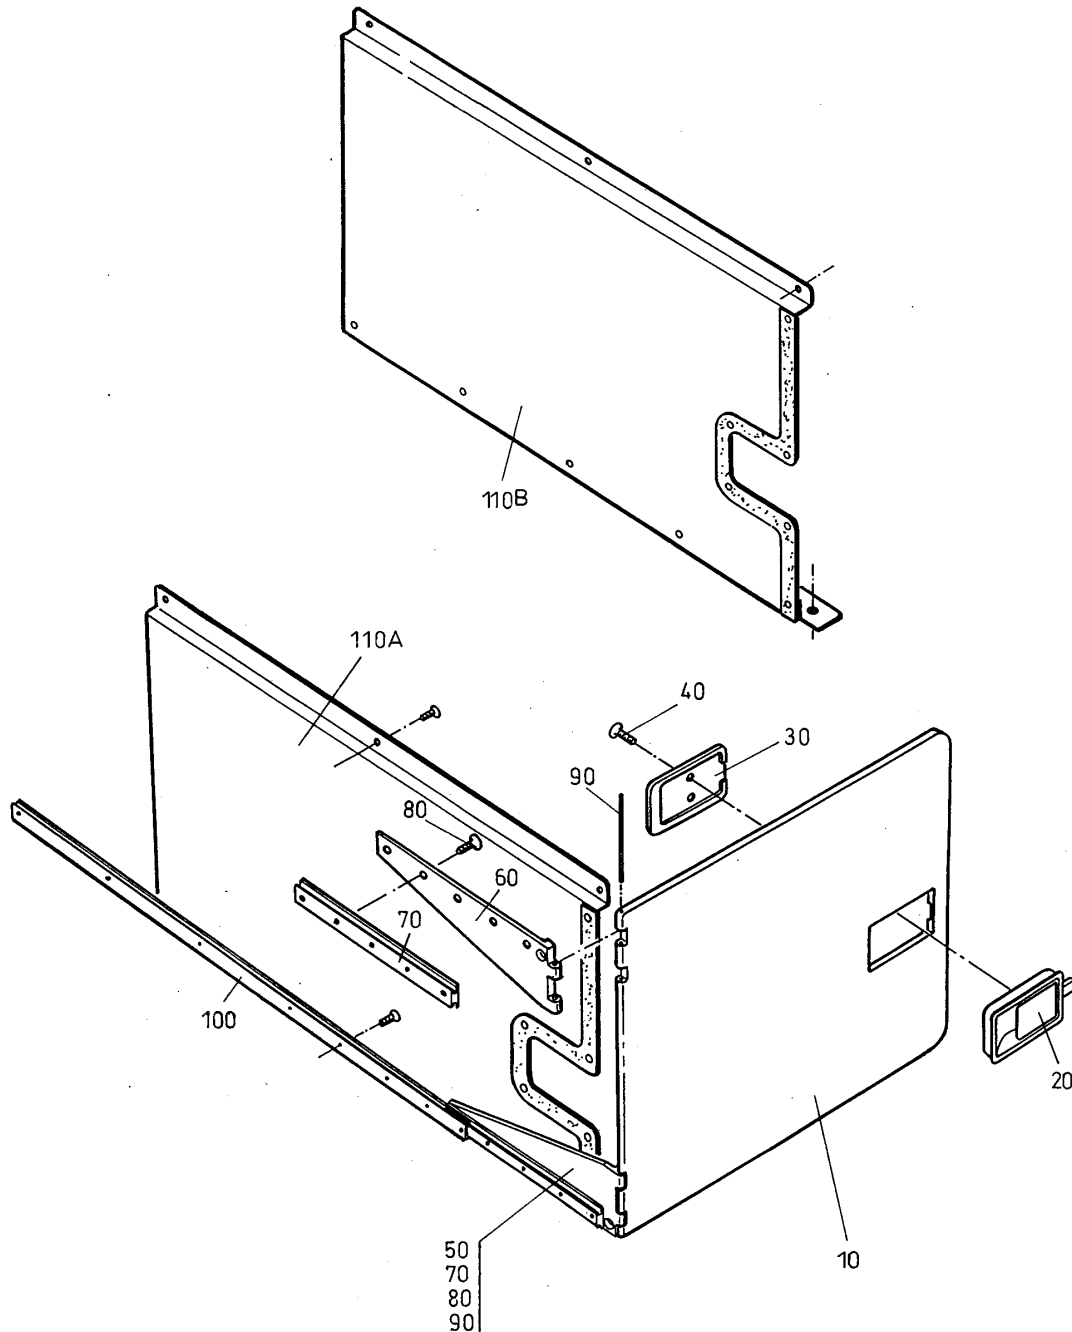

REV B

25-30-44

PAGE 1050
NOV05/99


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
DOOR ASSY
FIGURE 8

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
8	-1	106113-10		.DOOR ASSY (SEE FIG. 1 FOR NHA)		1
	10	106113-10-001		.CARCASS, DOOR		1
	20	AR138-5-2		.LATCH (V80477)		1
	30	111012-03-138		.PLATE		1
	40	NAS514P632-6P		.SCREW		2
	50	106113-10-005		.SUPPORT		1
	60	106113-10-006		.SUPPORT		1
	70	106113-10-009		.PROFILE		2
	80	NAS514P832-4P		.SCREW		10
	90	RD2-3D-1-4310		.STEEL, STAINLESS		AR
	100	106113-10-011		.PROFILE		2
	110A	106113-74		.COVER		1
	110B	106113-75		.COVER		1

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
DOOR ASSIES
FIGURE 9

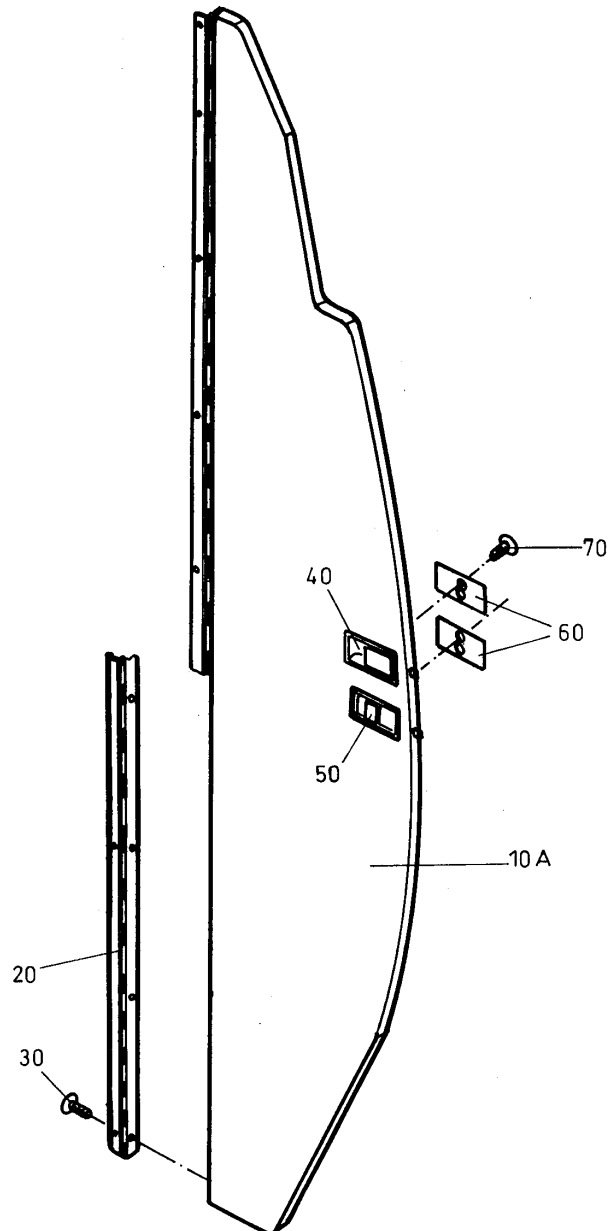

- A** SHOWN
B NOT SHOWN OPPOSITE

REV B

25-30-44

PAGE 1052
NOV05/99


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
DOOR ASSIES
FIGURE 9

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
9	-1A	106113-11		DOOR ASSY (SEE FIG. 1 FOR NHA)	A	RF
	-1B	106113-12		DOOR ASSY (SEE FIG. 1 FOR NHA)	B	RF
	10A	106113-11-100		.CARCASS, DOOR	A	1
	-10B	106113-12-100		.CARCASS, DOOR	B	1
	20	106113-11-002		.HINGE, BANDY	A,B	1
	30	NAS514P832-6P		.SCREW	A,B	9
	40	A20001-3-13		.LATCH (V52607)	A,B	1
	50	AR138-5-2		.LATCH (V80477)	A,B	1
	60	111012-03-043		.PLATE	A,B	2
	70	NAS514P632-8P		.SCREW	A,B	4
	80	414N3300-195B		.ENDCAP RUBSTRIP (V81205)	A,B	2
	90	106113-11-009		.RUB STRIP	A,B	1
	100	NAS603-6P		.SCREW	A,B	6
	110	BAC1522-382		.SHAPE (V81205)	A,B	AR

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PLATE ASSY
FIGURE 10

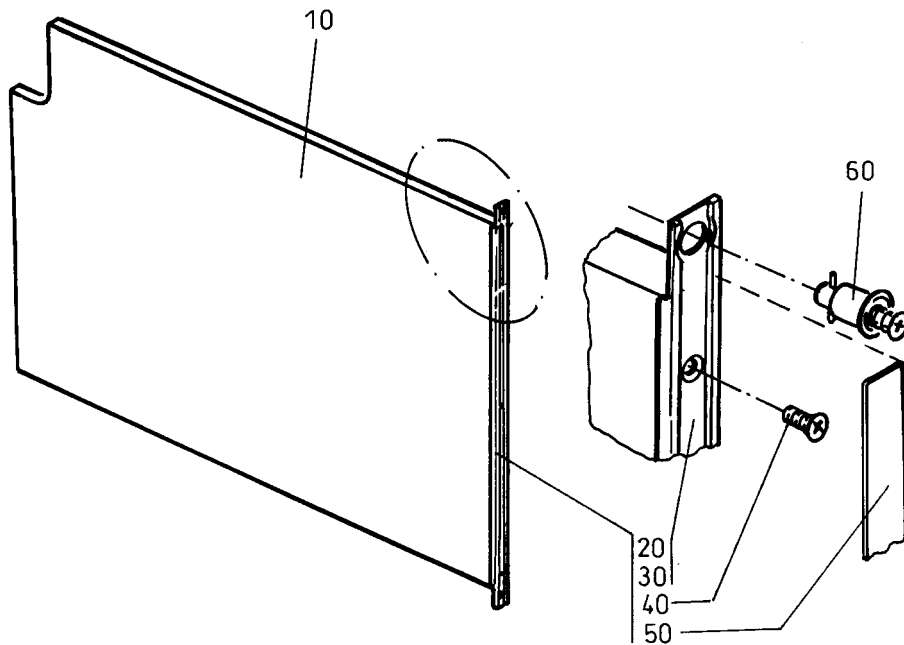

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PLATE ASSY
FIGURE 10

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
10	-1	106113-15		PLATE ASSY (SEE FIG. 1 FOR NHA)		RF
	10	106113-15-100		.PLATE CARCASS		1
	20	106113-15-002		.PROFILE, EDGE		1
	30	SCOTCH9473-10		.TAPE (VD2607)		AR
	40	NAS514P632-6P		.SCREW		3
	50	114311-11-013		.INSERT, PROFILE		AR
	60	27S3-4F		.FASTENER (VDO680)		2


COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PANEL ASSY
FIGURE 11

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
11	-1	106113-20		PANEL ASSY (SEE FIG. 1 FOR NHA)		RF
	10	106113-20-100		.CARCASS, PANEL		1
	20	106111-01-011		.PLATE		5
	30	BACB30LU4-4		.BOLT		10
	40	106113-22-002		.PLATE		1
	50	BACB30NE4-18		.SCREW		2
	60	106113-22-004		.GUIDE, WHEEL		1
	70	106113-22-006		.GUIDE, WHEEL		1
	80	NAS602-20P		.SCREW		4
	90	106113-22-007		.STRIP, SLIDING		2
	100	106113-22-022		.STRIP, SLIDING		2
	110	NAS602-6P		.SCREW		16
	120	111091-90		.CATCH ASSY		1
	130	111091-88		.CATCH ASSY		1
	140	111091-89		.CATCH ASSY		1
	150	114311-11-018		.PROFILE, EDGE		AR
	160	SCOTCH9473-19		.TAPE (VD2607)		AR
	170	MS51862-15C		.SCREW		5
	180	NAS514P632-5		.SCREW		1
	190	114311-11-013		.INSERT, PROFILE		AR
	200	111094-01-136		.BUMPER		2
	210	SPAX4X16		.SCREW		4

COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PANEL ASSY
FIGURE 12

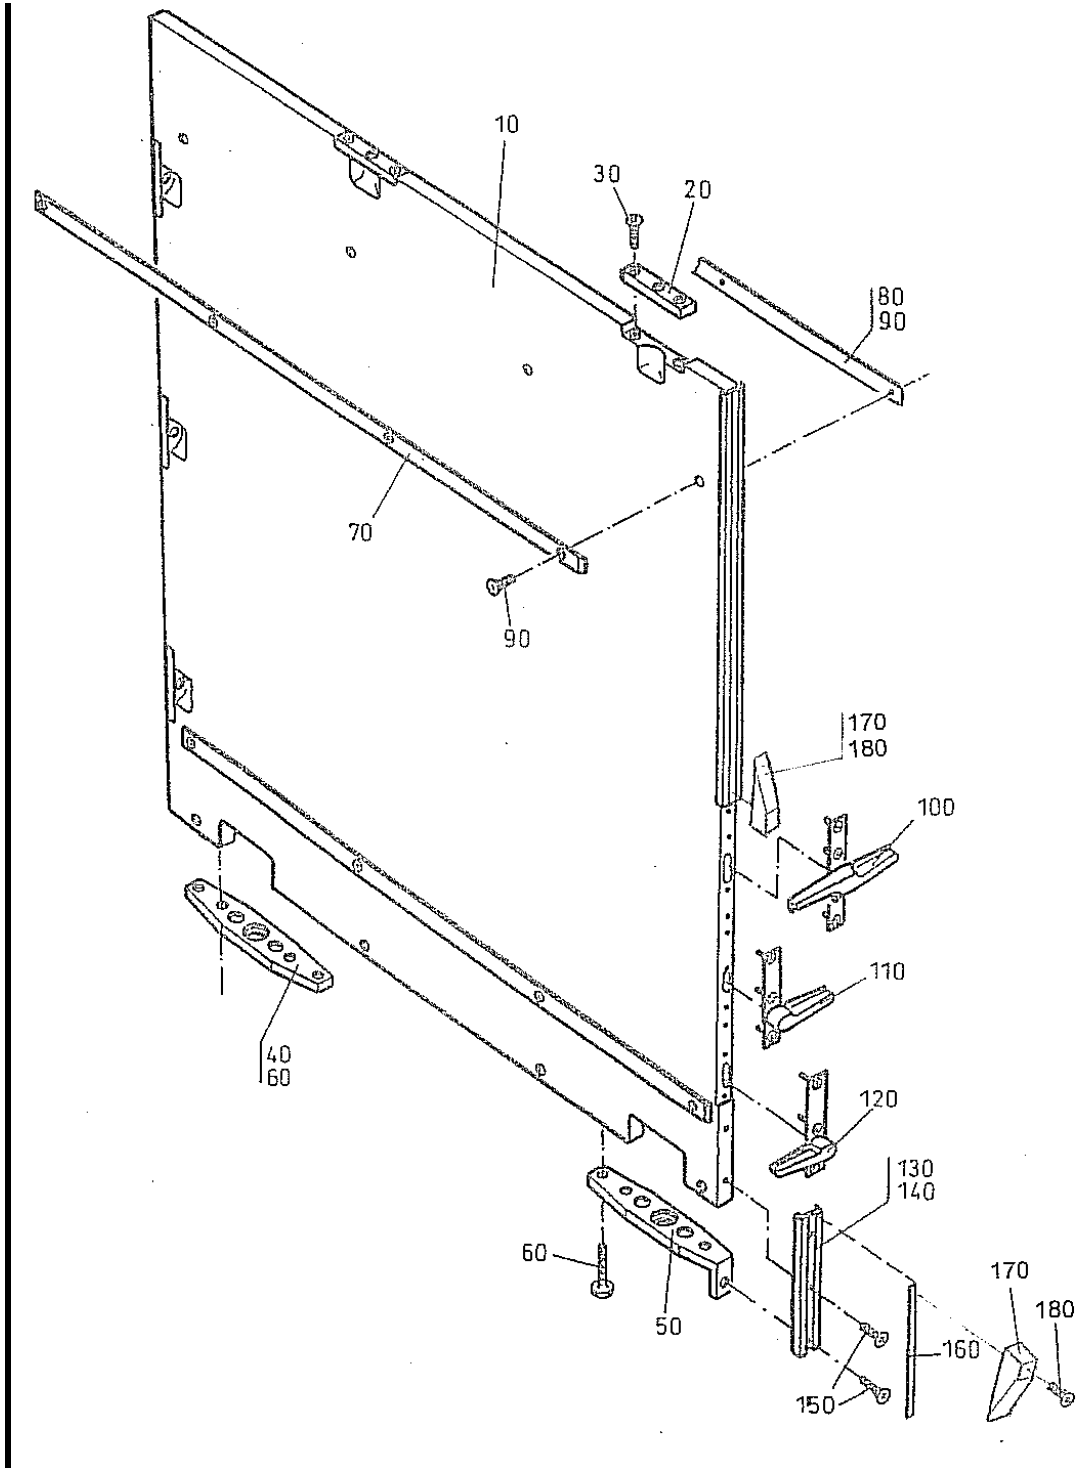


COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PANEL ASSY
FIGURE 12

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
12	-1	106113-21		PANEL ASSY (SEE FIG. 1 FOR NHA)		RF
	10	106113-21-100		.CARCASS, PANEL		1
	20	106111-01-011		.PLATE		5
	30	BACB30LU4-4		.BOLT		10
	40	111011-85-009		.PLATE		1
	50	106113-21-003		.SUPPORT		1
	60	BACB30NE4-7		.SCREW		7
	70	106113-22-007		.STRIP, SLIDING		2
	80	106113-22-022		.STRIP, SLIDING		2
	90	NAS602-6P		.SCREW		16
	100	111091-90		.CATCH ASSY		1
	110	111091-88		.CATCH ASSY		1
	120	111091-89		.CATCH ASSY		1
	130	114311-11-018		.PROFILE, EDGE		AR
	140	SCOTCH9473-19		.TAPE (VD2607)		AR
	150	MS51862-15C		.SCREW		5
	160	114311-11-013		.INSERT, PROFILE		AR
	170	111094-01-136		.BUMPER		2
	180	SPAX4X16		.SCREW		4

COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PANEL ASSY
FIGURE 13

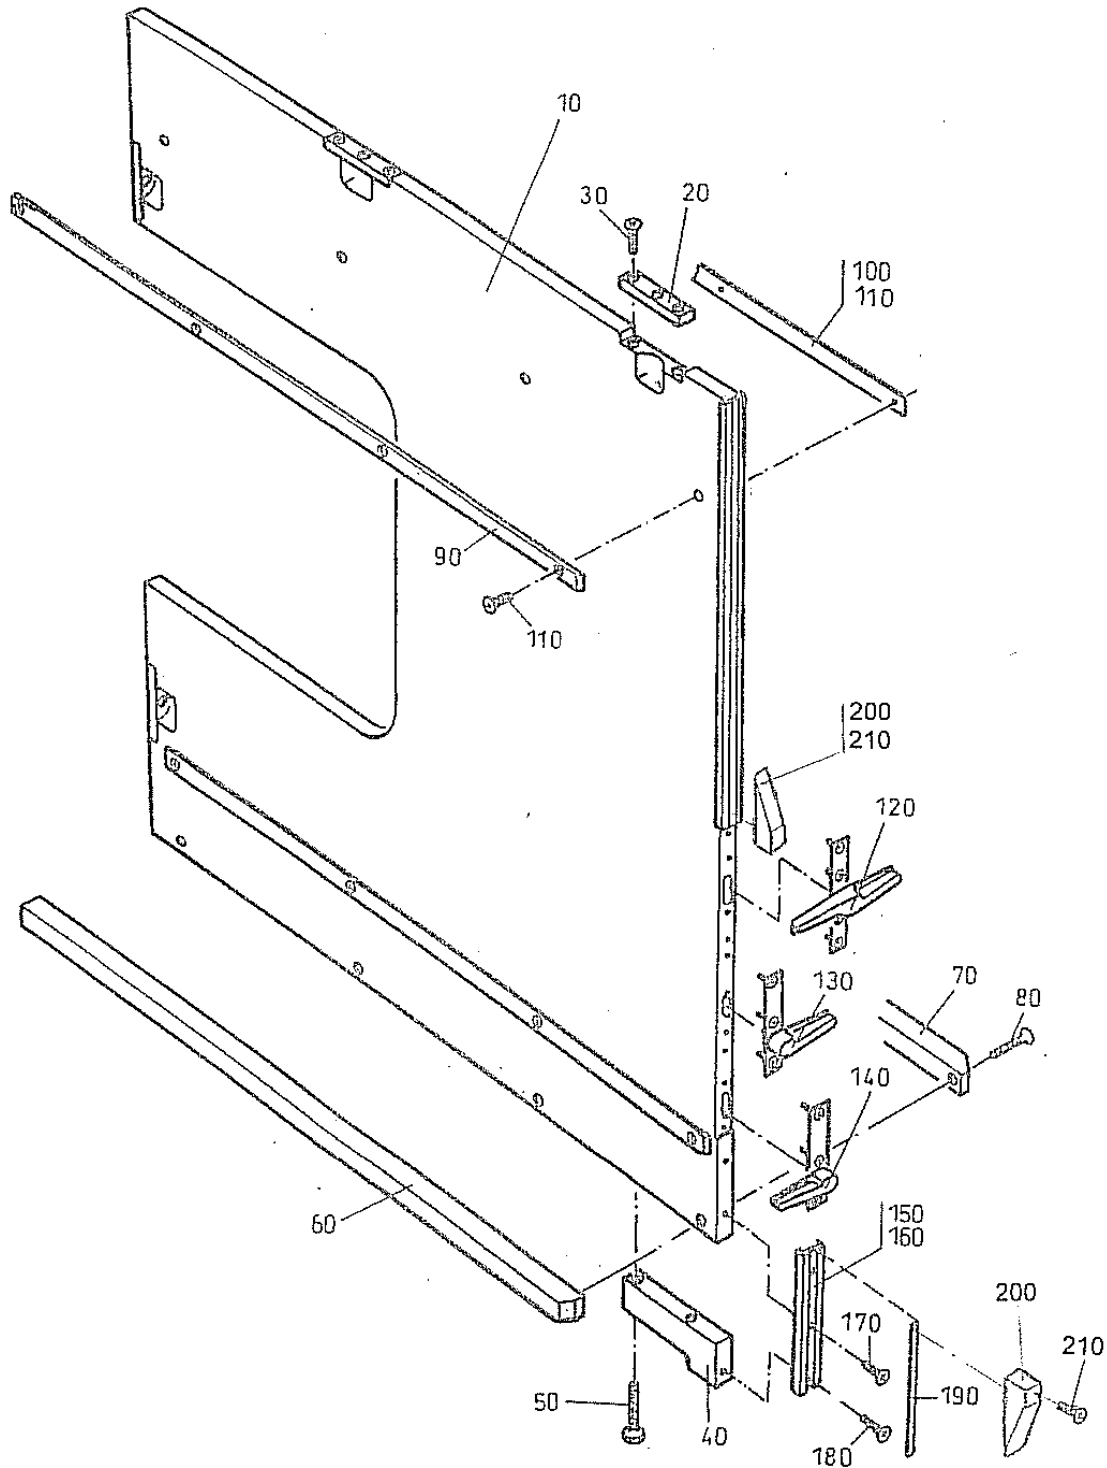


COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST PANEL ASSY FIGURE 13

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
13	-1	106113-22		PANEL ASSY (SEE FIG. 1 FOR NHA)		RF
	10	106113-22-100		.CARCASS, PANEL		1
	20	106111-01-011		.PLATE		4
	30	BACB30LU4-4		.BOLT		8
	40	106113-22-002		.PLATE		1
	50	BACB30NE4-18		.SCREW		2
	60	106113-22-004		.GUIDE, WHEEL		1
	70	106113-22-006		.GUIDE, WHEEL		1
	80	NAS602-20P		.SCREW		4
	90	106113-22-007		.STRIP, SLIDING		2
	100	106113-22-022		.STRIP, SLIDING		2
	110	NAS602-6P		.SCREW		16
	120	111091-90		.CATCH ASSY		1
	130	111091-88		.CATCH ASSY		1
	140	111091-89		.CATCH ASSY		1
	150	114311-11-018		.PROFILE, EDGE		AR
	160	SCOTCH9473-19		.TAPE (VD2607)		AR
	170	MS51862-15C		.SCREW		5
	180	NAS514P632-5		.SCREW		1
	190	114311-11-013		.INSERT, PROFILE		AR
	200	111094-01-136		.BUMPER		2
	210	SPAX4X16		.SCREW		4

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PLATE ASSY
FIGURE 14

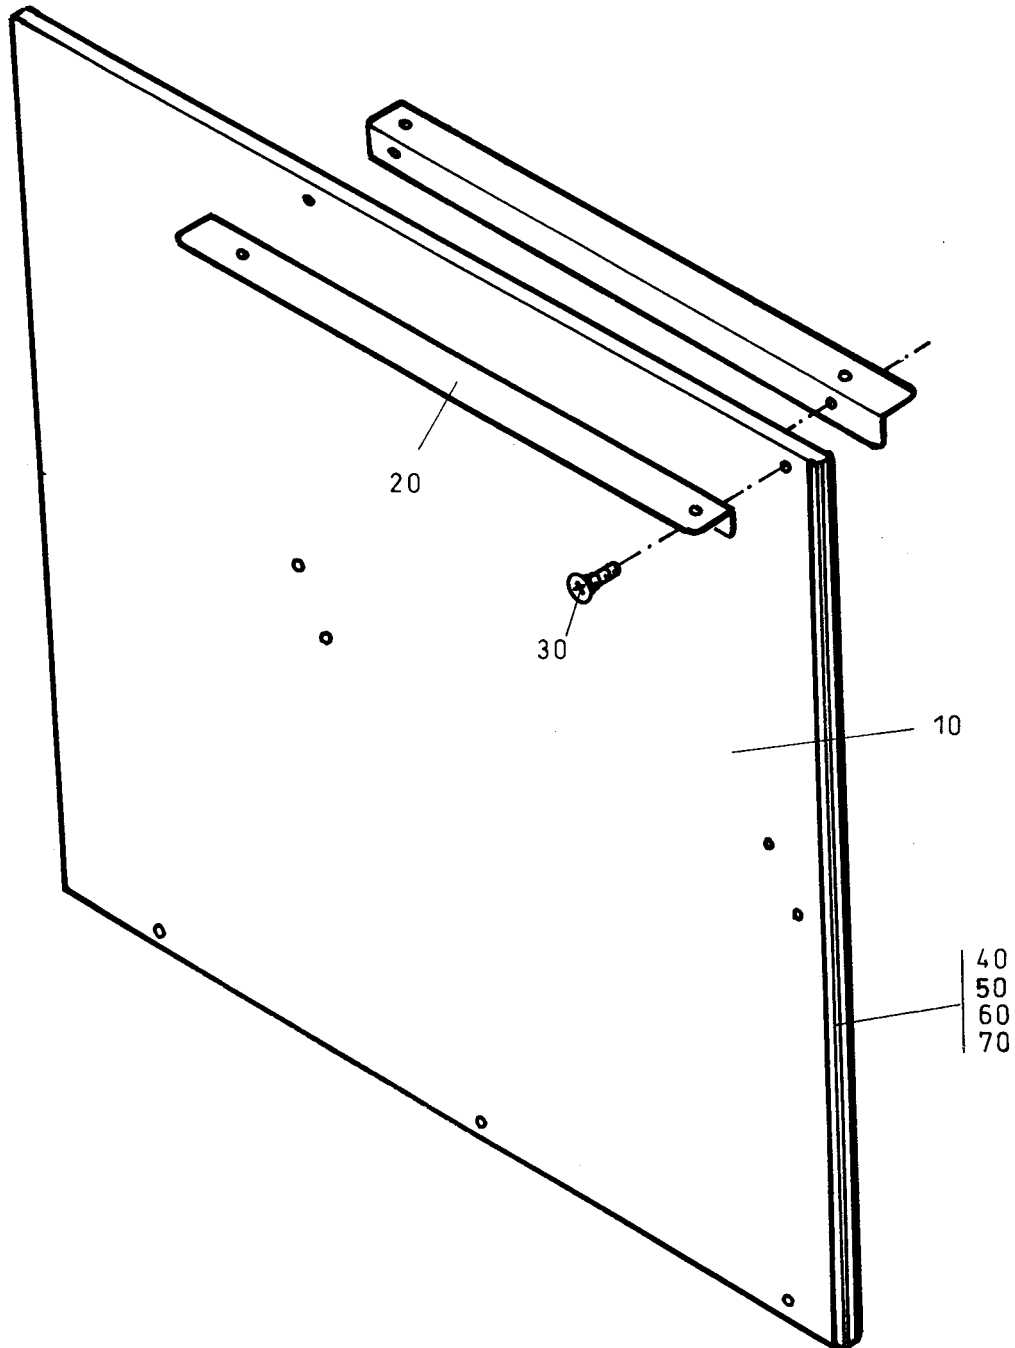

REV B

25-30-44

PAGE 1062
NOV05/99

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL


DETAILED PARTS LIST
PLATE ASSY
FIGURE 14

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
14	-1	106113-32		PLATE ASSY (SEE FIG. 1 FOR NHA)		RF
	10	106113-32-100		.CARCASS, PLATE		1
	20	111070-00-110		.PROFILE, L		1
	30	NAS514P832-6P		.SCREW		4
	40	114311-11-016		.PROFILE, EDGE		AR
	50	SCOTCH9473-10		.TAPE (VD2607)		AR
	60	MS51862-15C		.SCREW		4
	70	114311-11-013		.INSERT, PROFILE		AR

COMPONENT MAINTENANCE MANUAL

106113 / 106113A

DETAILED PARTS LIST
PANEL ASSIES
FIGURE 15

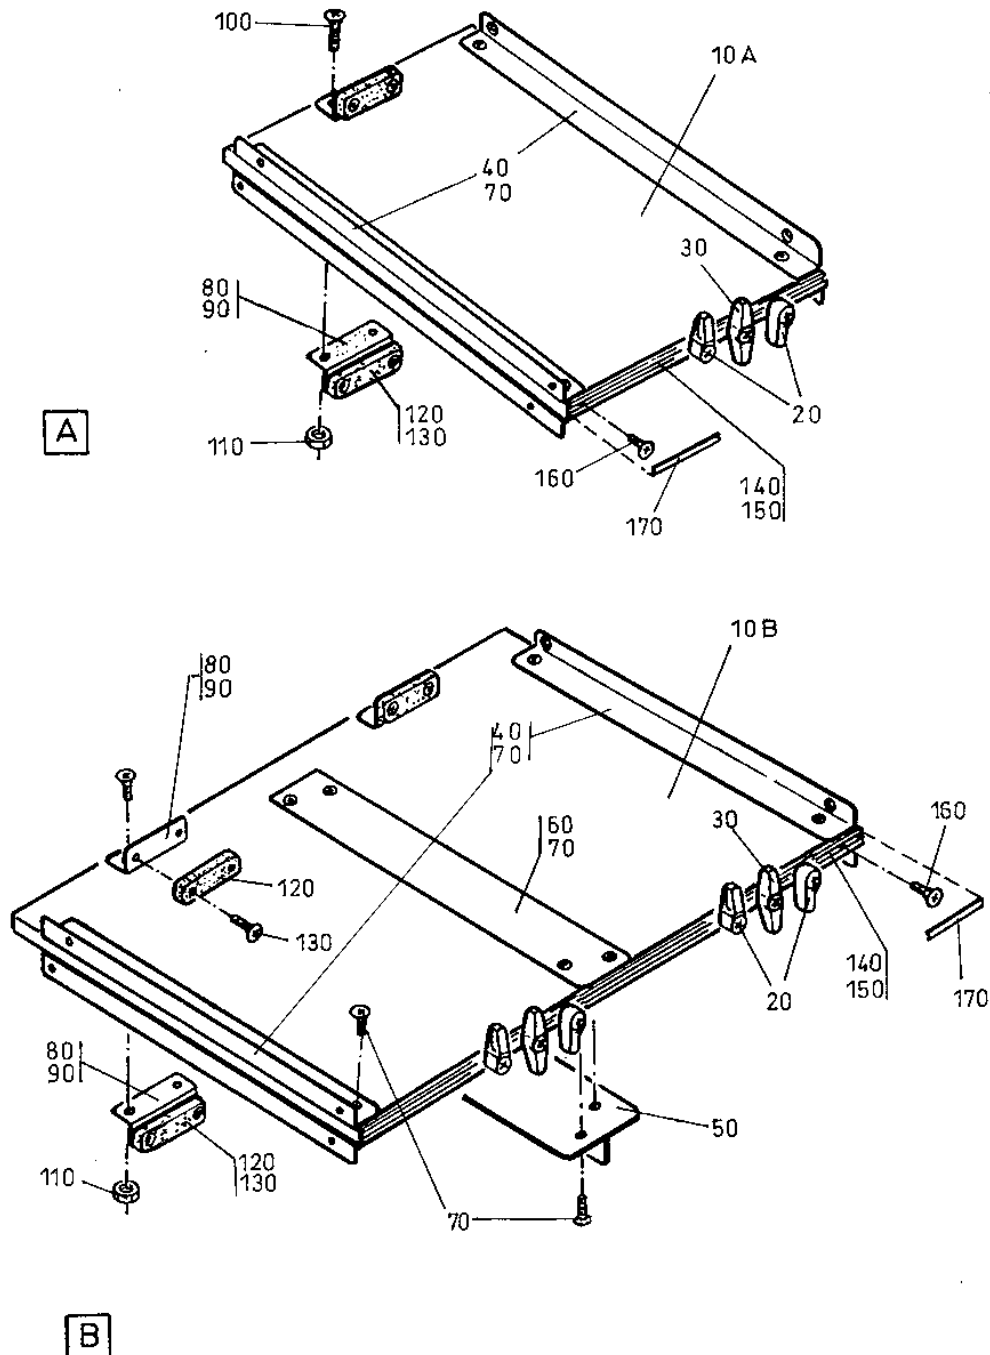

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL


DETAILED PARTS LIST
PANEL ASSIES
FIGURE 15

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
15	-1A	106113-33		PANEL ASSY (SEE FIG. 1 FOR NHA)	A	RF
	-1B	106113-34		PANEL ASSY (SEE FIG. 1 FOR NHA)	B	RF
	10A	106113-33-100		.CARCASS, PANEL	A	1
	10B	106113-34-100		.CARCASS, PANEL	B	1
	20A	111091-63		.CATCH ASSY	A	2
	20B				B	4
	30A	111091-67		.CATCH ASSY	A	1
	30B				B	2
	40A	111070-00-110		.PROFILE, L	A	4
	40B				B	4
	50B	111069-00-040		.PROFILE, T	B	1
	60B	106113-34-011		.PLATE	B	1
	70A	NAS514P832-6P		.SCREW	A	8
	70B				B	16
	80A	106113-26-006		.PROFILE, L	A	2
	80B				B	4
	90	SCOTCH9473-26		.TAPE (VD2607)	A,B	AR
	100A	NAS602-18P		.SCREW	A	2
	100B				B	4
	110A	BACN10JC08		.NUT	A	2
	110B				B	4
	120A	111094-01-105		.BUMPER	A	2
	120B				B	4
	130A	NAS602-8P		.SCREW	A	4
	130B				B	8
	140	114311-11-017		.PROFILE, EDGE	A,B	AR
	150	SCOTCH9473-14		.TAPE (VD2607)	A,B	AR
	160	MS51862-15C		.SCREW	A,B	2
	170	114311-11-013		.INSERT, PROFILE	A,B	AR



COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PELMET
FIGURE 16

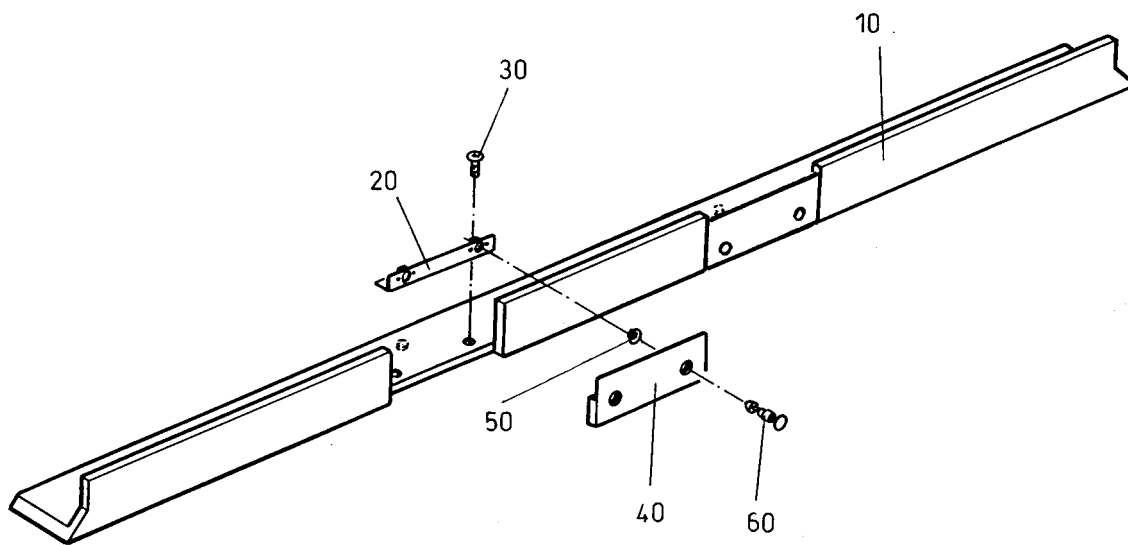


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PELMET
FIGURE 16

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
16	-1	106113-54		PELMET (SEE FIG. 1 FOR NHA)		RF
	10	106113-54-100		.CARCASS, PELMET		1
	20	106113-54-002		.PROFILE, L		2
	30	NAS602-6P		.SCREW		4
	40	106113-54-004		.COVER		2
	50	ABS0692-01		.WASHER (VD8518)		4
	60	ABS0696X2-210		.STUD (VD8518)		4

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
WHEEL GUIDE ASSIES
FIGURE 17

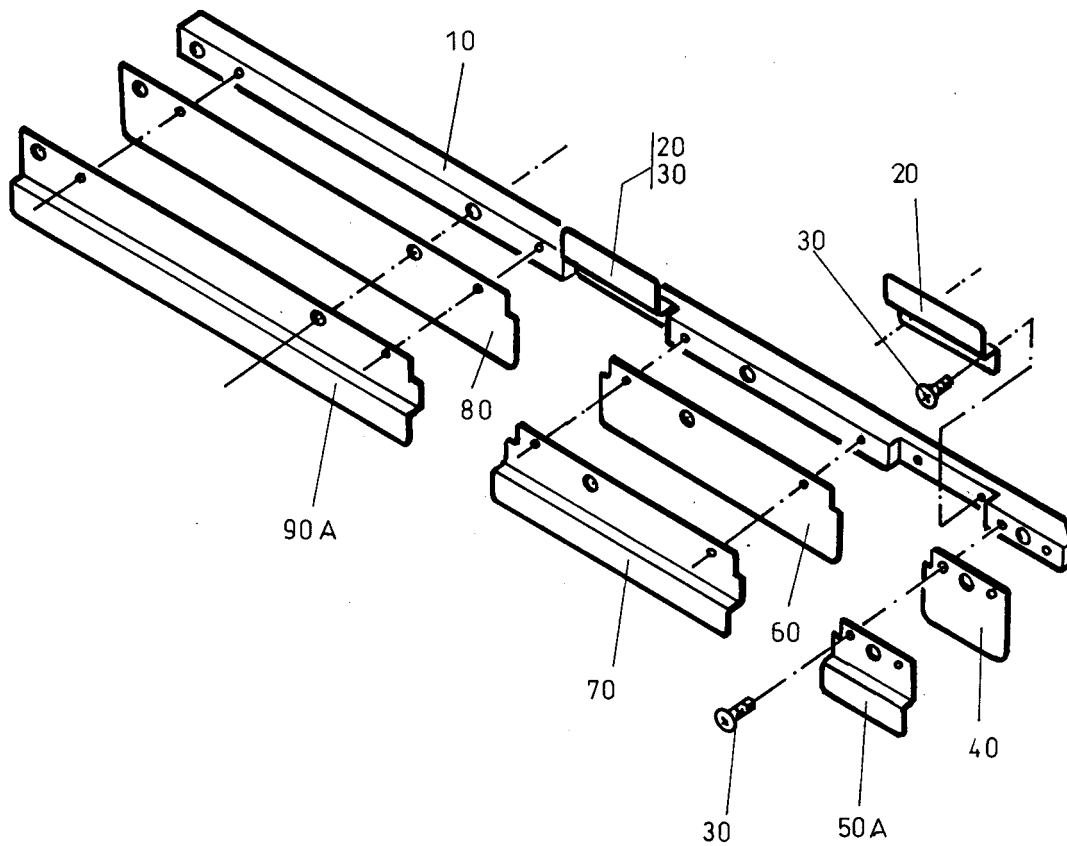

- A SHOWN
B NOT SHOWN OPPOSITE


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
WHEEL GUIDE ASSIES
FIGURE 17

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
17	-1A	106113-24		WHEEL GUIDE ASSY (SEE FIG. 1 FOR NHA)	A	RF
	-1B	106113-23		WHEEL GUIDE ASSY (SEE FIG. 1 FOR NHA)	B	RF
	10	106113-23-001		.GUIDE, WHEEL	A,B	1
	20	106113-23-008		.COVER	A,B	2
	30	NAS514P632-5P		.SCREW	A,B	10
	40	106113-23-002		.COVER	A,B	1
	50A	106113-24-003		.COVER	A	1
	50B	106113-23-003		.COVER	B	1
	60	106113-23-004		.COVER	A,B	1
	70	106113-23-005		.COVER	A,B	1
	80	106113-23-006		.COVER	A,B	1
	90A	106113-24-007		.COVER	A	1
	90B	106113-23-007		.COVER	B	1

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PANEL ASSY
FIGURE 18

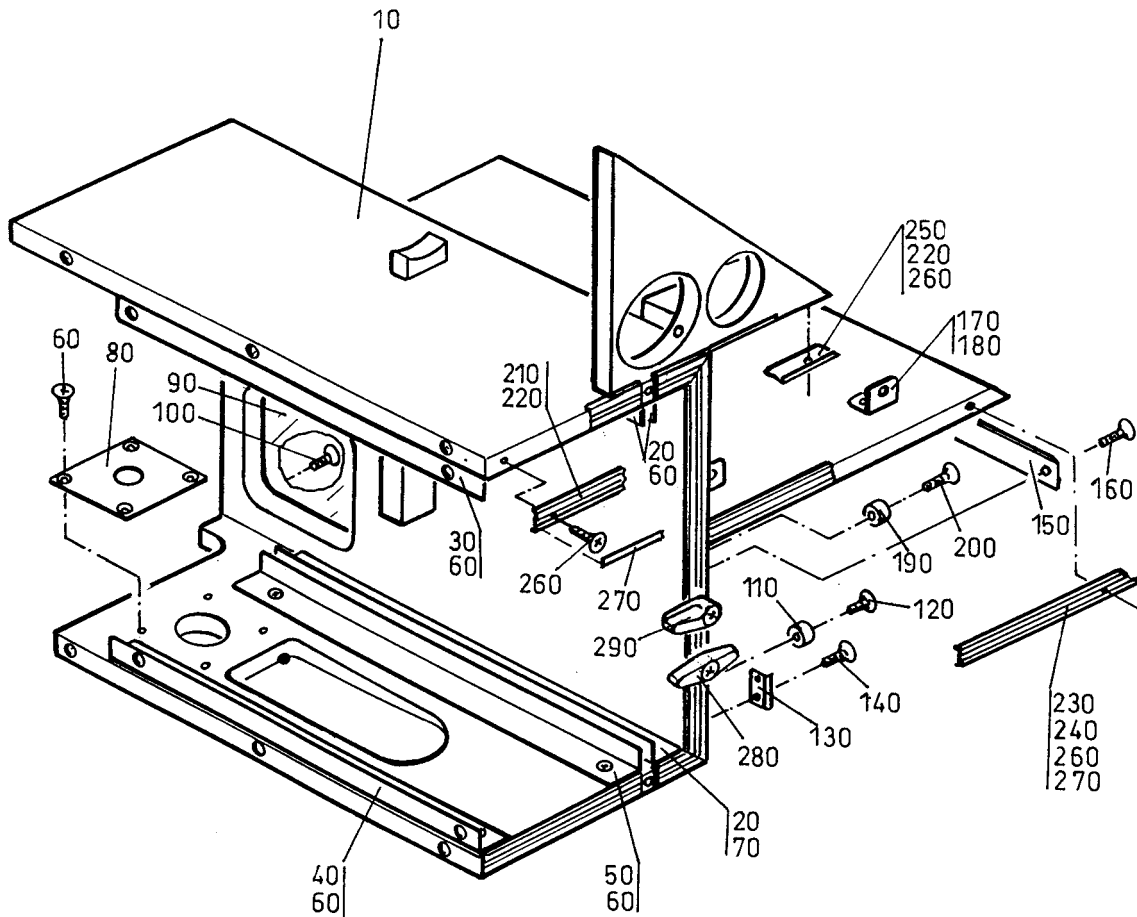


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PANEL ASSY
FIGURE 18

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
18	-1	106113-40		PANEL ASSY (SEE FIG. 4 FOR DET.)		RF
	10	106113-40-100		.CARCASS, PANEL		1
	20	111070-00-111		.PROFILE, L		3
	30	111070-00-110		.PROFILE, L		1
	40	111070-00-160		.PROFILE, L		1
	50	111070-00-162		.PROFILE, L		1
	60	NAS514P832-6P		.SCREW		16
	70	NAS514P832-6P		.SCREW		2
	80	111063-00-049		.SUPPORT		1
	90	106113-40-012		.PLATE		1
	100	NAS514P632-6P		.SCREW		4
	110	111094-01-096		.BUMPER		2
	120	NAS603-6P		.SCREW		2
	130	111042-04-066		.STRIKE		1
	140	NAS602-6P		.SCREW		2
	150	111070-00-161		.PROFILE, L		2
	160	NAS514P1032-6		.SCREW		6
	170	111028-11-056		.ANGLE		3
	180	NAS602-5P		.SCREW		6
	190	111029-00-077		.WASHER		1
	200	NAS601-8P		.SCREW		1
	210	114311-11-018		.PROFILE, EDGE		AR
	220	SCOTCH9473-19		.TAPE (VD2607)		AR
	230	114311-11-017		.PROFILE, EDGE		AR
	240	SCOTCH9473-14		.TAPE (VD2607)		AR
	250	114311-10-002		.PROFILE, EDGE		AR
	260	MS51862-15C		.SCREW		14
	270	114311-11-013		.INSERT, PROFILE		AR
	280	111091-67		.CATCH ASSY		1
	290	111091-64		.CATCH ASSY		1

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PANEL ASSY
FIGURE 19

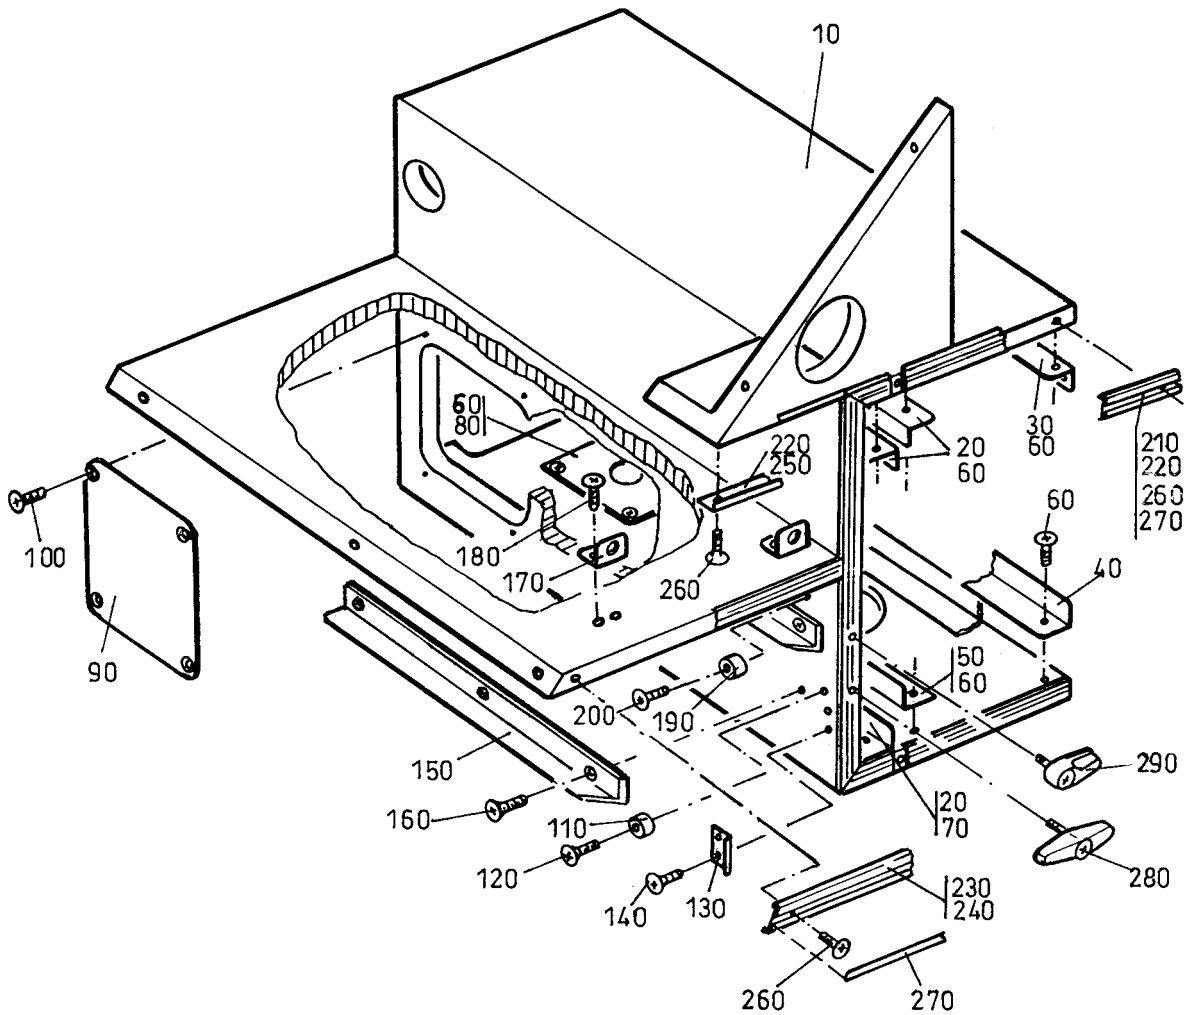


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PANEL ASSY
FIGURE 19

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
19	-1	106113-41		PANEL ASSY (SEE FIG. 4 FOR NHA)		RF
	10	106113-41-100		.CARCASS, PANEL		1
	20	111070-00-111		.PROFILE, L		3
	30	111070-00-110		.PROFILE, L		1
	40	111070-00-164		.PROFILE, L		1
	50	111070-00-165		.PROFILE, L		1
	60	NAS514P832-6P		.SCREW		16
	70	NAS514P832-6P		.SCREW, RED SCREWHEAD		2
	80	111063-00-049		.SUPPORT		1
	90	106113-40-012		.PLATE		1
	100	NAS514P632-6P		.SCREW		4
	110	111094-01-096		.BUMPER		2
	120	NAS603-6P		.SCREW		2
	130	111042-04-066		.STRIKE		1
	140	NAS602-6P		.SCREW		2
	150	111070-00-163		.PROFILE, L		2
	160	NAS514P1032-6		.SCREW		6
	170	111028-11-056		.ANGLE		3
	180	NAS602-5P		.SCREW		6
	190	111029-00-077		.WASHER		1
	200	NAS601-8P		.SCREW		1
	210	114311-11-018		.PROFILE, EDGE		AR
	220	SCOTCH9473-19		.TAPE (VD2607)		AR
	230	114311-11-017		.PROFILE, EDGE		AR
	240	SCOTCH9473-14		.TAPE (VD2607)		AR
	250	114311-10-002		.PROFILE, EDGE		AR
	260	MS51862-15C		.SCREW		14
	270	114311-11-013		.INSERT, PROFILE		AR
	280	111091-67		.CATCH ASSY		1
	290	111091-63		.CATCH ASSY		1

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PANEL ASSIES
FIGURE 20

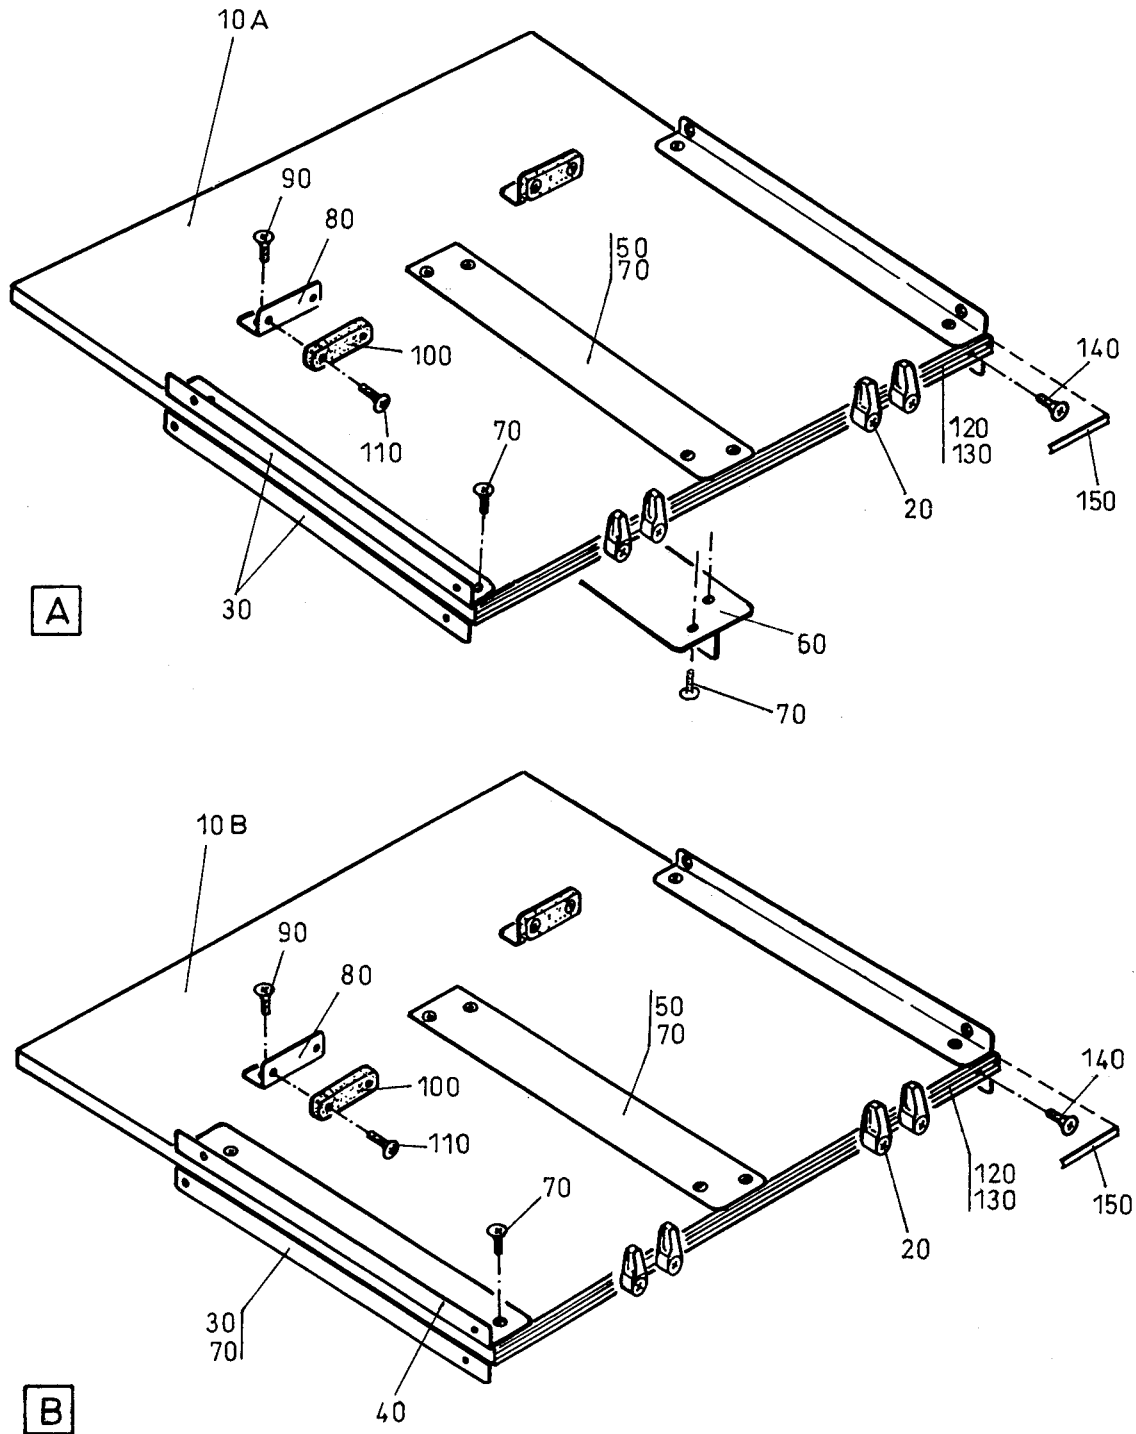

REV B

25-30-44

PAGE 1074
NOV05/99


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PANEL ASSIES
FIGURE 20

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
20	-1A	106113-35		PANEL ASSY (SEE FIG. 4 FOR NHA)	A	RF
	-1B	106113-36		PANEL ASSY (SEE FIG. 4 FOR NHA)	B	RF
	10A	106113-35-100		.CARCASS, PANEL	A	1
	10B	106113-36-100		.CARCASS, PANEL	B	1
	20	111091-63		.CATCH ASSY	A,B	4
	30A	111070-00-110		.PROFILE, L	A	4
	30B				B	3
	40	106113-36-003		.PROFILE, L	B	1
	50	106113-34-011		.PLATE	A,B	1
	60	111069-00-040		.PROFILE, T	A	1
	70A	NAS514P832-6P		.SCREW	A	16
	70B				B	12
	80	106113-26-006		.PROFILE, L	A,B	2
	90	NAS602-6P		.SCREW	A,B	4
	100	111094-01-105		.BUMPER	A,B	2
	110	NAS602-8P		.SCREW	A,B	4
	120	114311-11-017		.PROFILE, EDGE	A,B	AR
	130	SC0TCH9473-14		.TAPE (VD2607)	A,B	AR
	140	MS51862-15C		.SCREW	A,B	3
	150	114311-11-013		.INSERT, PROFILE	A,B	AR

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PLATE ASSIES
FIGURE 21

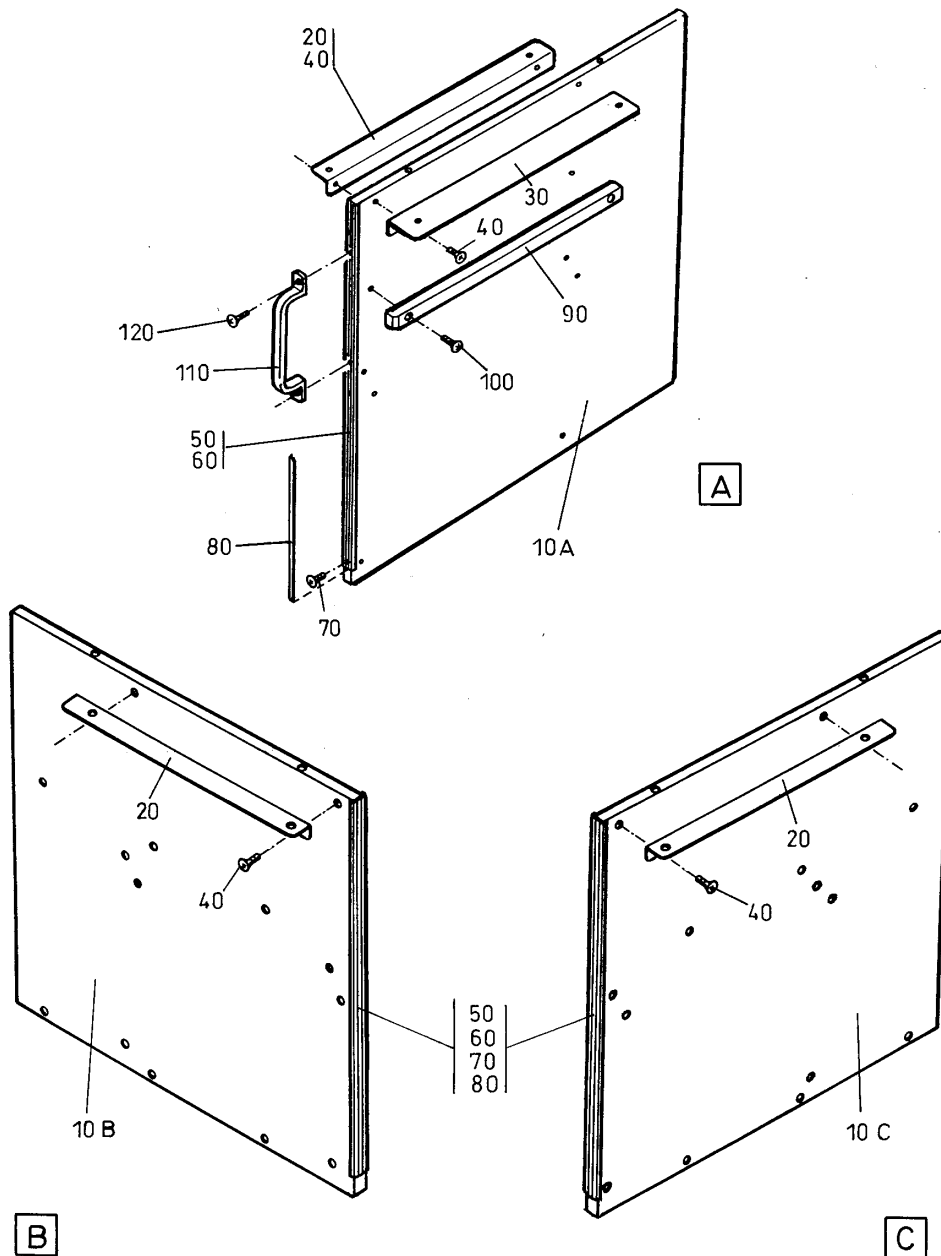

REV B

25-30-44

PAGE 1076
NOV05/99


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PLATE ASSIES
FIGURE 21

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
21	-1A	106113-37		PLATE ASSY (SEE FIG. 4 FOR NHA)	A	RF
	-1B	106113-38		PLATE ASSY (SEE FIG. 4 FOR NHA)	B	RF
	-1C	106113-39		PLATE ASSY (SEE FIG. 4 FOR NHA)	C	RF
	10A	106113-37-100		.CARCASS, PLATE	A	1
	10B	106113-38-100		.CARCASS, PLATE	B	1
	10C	106113-39-100		.CARCASS, PLATE	C	1
	20	111070-00-110		.PROFILE, L	A-C	1
	30	106113-36-003		.PROFILE, L	A-C	1
	40	NAS514P832-6P		.SCREW	A-C	4
	50	114311-11-017		.PROFILE, EDGE	A-C	AR
	60	SC0TCH9473-14		.TAPE (VD2607)	A-C	AR
	70	MS51862-15C		.SCREW	A-C	3
	80	114311-11-013		.INSERT, PROFILE	A-C	AR
	90	106113-37-002		.STRIP, SLIDING	A	1
	100	NAS602-6P		.SCREW	A	2
	110	111060-01-001		.HANDLE	A	1
	120	NAS604-8P		.SCREW	A	2

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PANEL ASSIES
FIGURE 22

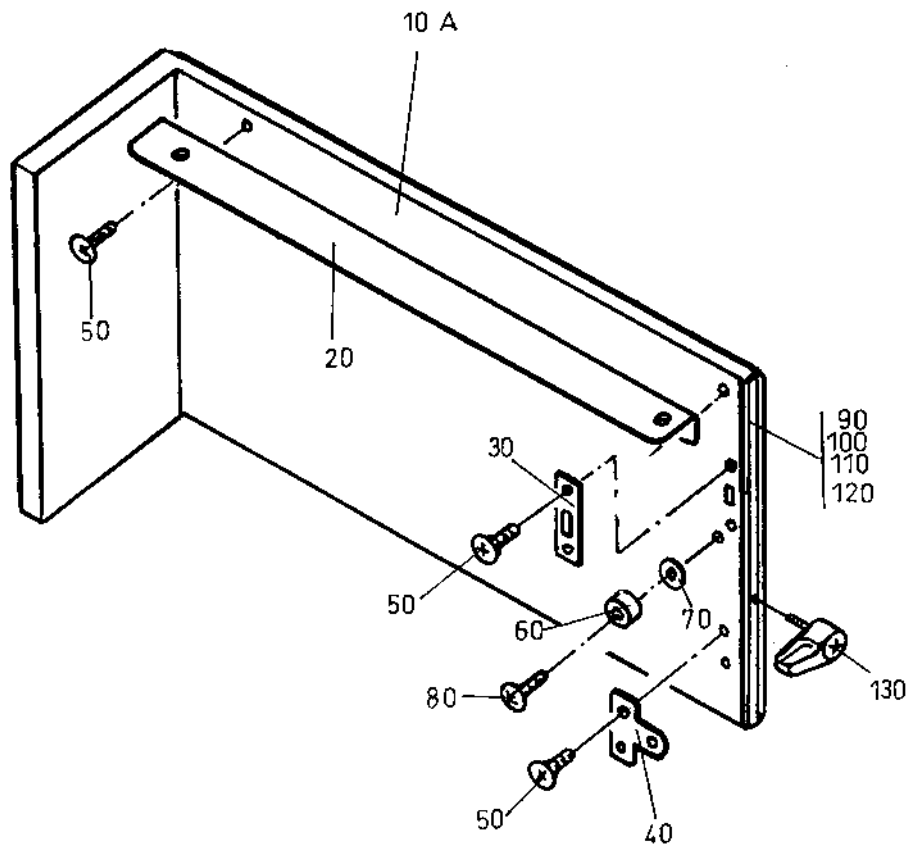

- | | |
|---|--------------------|
| A | SHOWN |
| B | NOT SHOWN OPPOSITE |


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PANEL ASSIES
FIGURE 22

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
22	-1A	106113-55		PANEL ASSY (SEE FIG. 4 FOR NHA)	A	RF
	-1B	106113-53		PANEL ASSY (SEE FIG. 4 FOR NHA)	B	RF
	10A	106113-55-100		.CARCASS, PANEL	A	1
	-10B	106113-53-100		.CARCASS, PANEL	B	1
	20	111070-00-110		.PROFILE, L	A,B	1
	30	111042-04-034		.STRIKE	A,B	1
	40	106113-55-013		.PLATE	A,B	1
	50	NAS514P832-6P		.SCREW	A,B	6
	60	111094-01-096		.BUMPER	A,B	1
	70	104057-01-016		.WASHER	A,B	1
	80	NAS603-6P		.SCREW	A,B	1
	90	114311-11-017		.PROFILE, EDGE	A,B	AR
	100	SC0TCH9473-10		.TAPE (VD2607)	A,B	AR
	110	MS51862-15C		.SCREW	A,B	2
	120	114311-11-013		.INSERT, PROFILE	A,B	AR
	130	111091-63		.CATCH ASSY	A,B	1

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
WORKING PLATE ASSY
FIGURE 23

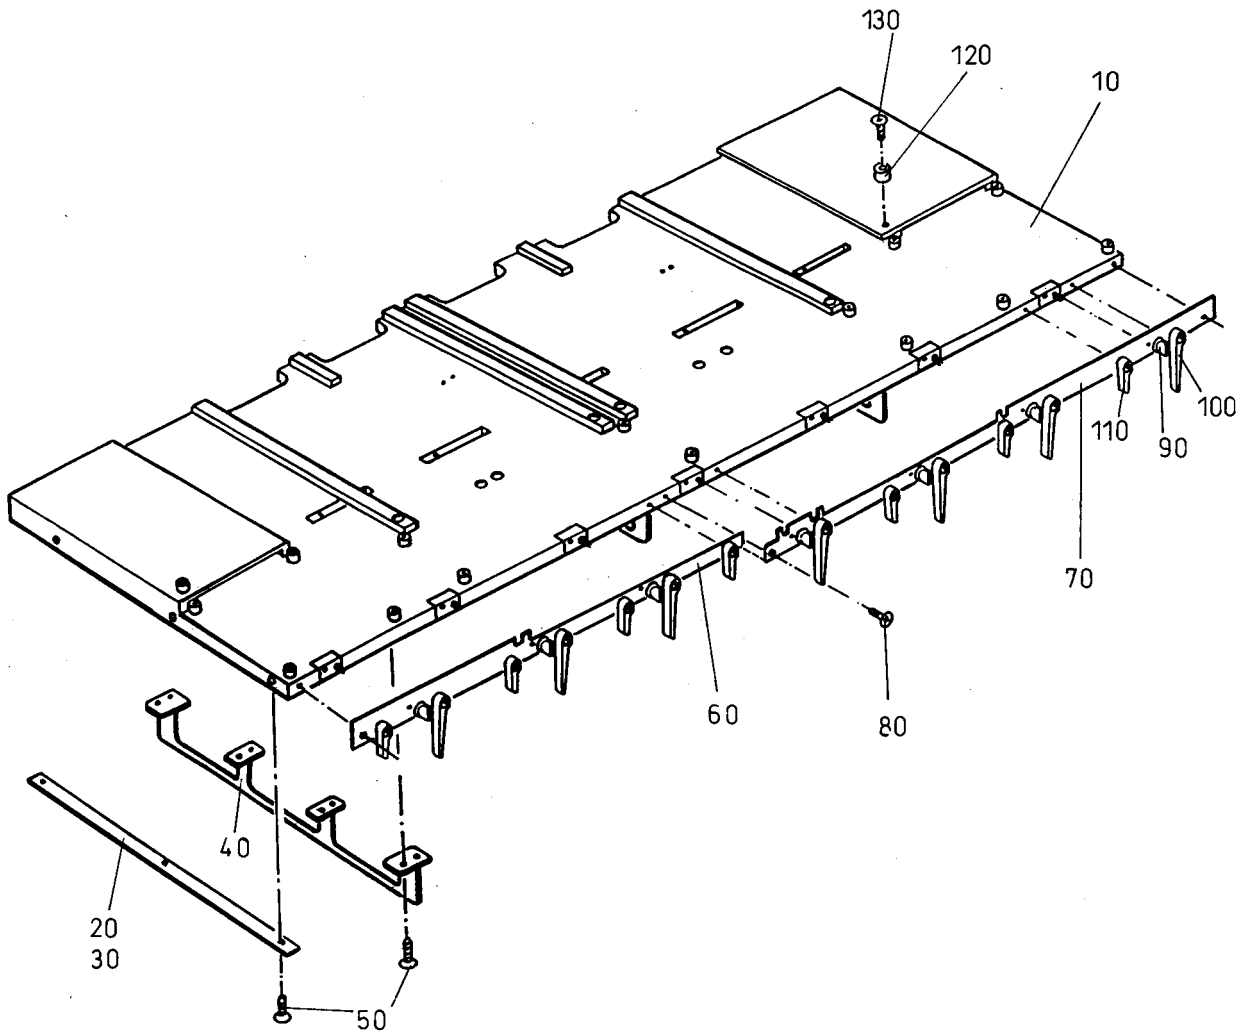

REV B

25-30-44

PAGE 1080
NOV05/99


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
WORKING PLATE ASSY
FIGURE 23

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
23	-1	106113-18		WORKING PLATE ASSY (SEE FIG. 3 FOR NHA)		RF
	10	106113-18-100		.CARCASS, WORKING PLATE		1
	20	106113-18-007		.STRIP, SLIDING		8
	30	SCOTCH9473-26		.TAPE (VD2607)		AR
	40	111069-00-039		.PROFILE, T		3
	50	NAS514P832-8P		.SCREW		48
	60	106113-18-011		.PROFILE, EDGE		1
	70	106113-18-010		.PROFILE, EDGE		1
	80	NAS514P1032-8		.SCREW		3
	90	111090-09		.LATCH, TANDEM		7
	100	111091-66		.CATCH ASSY		7
	110	111091-74		.CATCH ASSY		7
	120	111029-00-077		.WASHER		2
	130	NAS601-8P		.SCREW		2

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PLATE ASSY
FIGURE 24

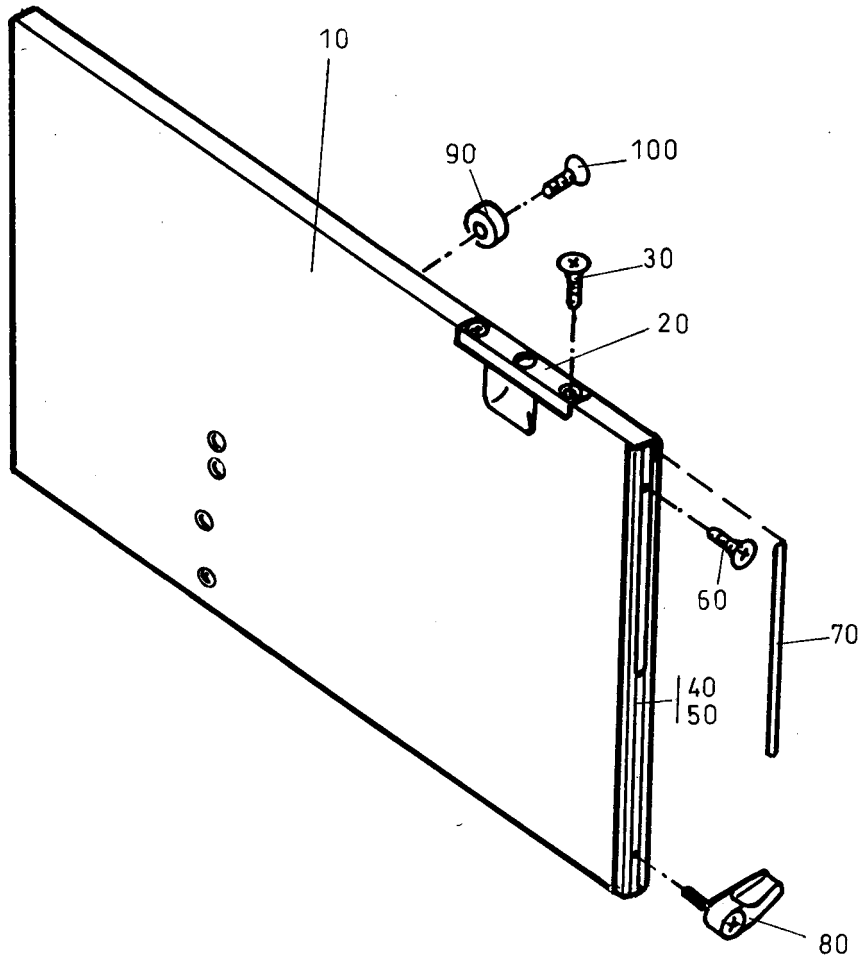

REV B

25-30-44

PAGE 1082
NOV05/99


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PLATE ASSY
FIGURE 24

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
24	-1	106113-25		PLATE ASSY (SEE FIG. 3 FOR NHA)		RF
	10	106113-25-100		.CARCASS, PLATE		1
	20	111008-00-225		.PLATE		1
	30	BACB30LU4-5		.BOLT		2
	40	114311-11-017		.PROFILE, EDGE		AR
	50	SC0TCH9473-14		.TAPE (VD2607)		AR
	60	MS51862-15C		.SCREW		1
	70	114311-11-013		.INSERT, PROFILE		AR
	80	111091-96		.CATCH ASSY		1
	90	111094-01-096		.BUMPER		1
	100	NAS603-6P		.SCREW		1

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PLATE ASSY
FIGURE 25

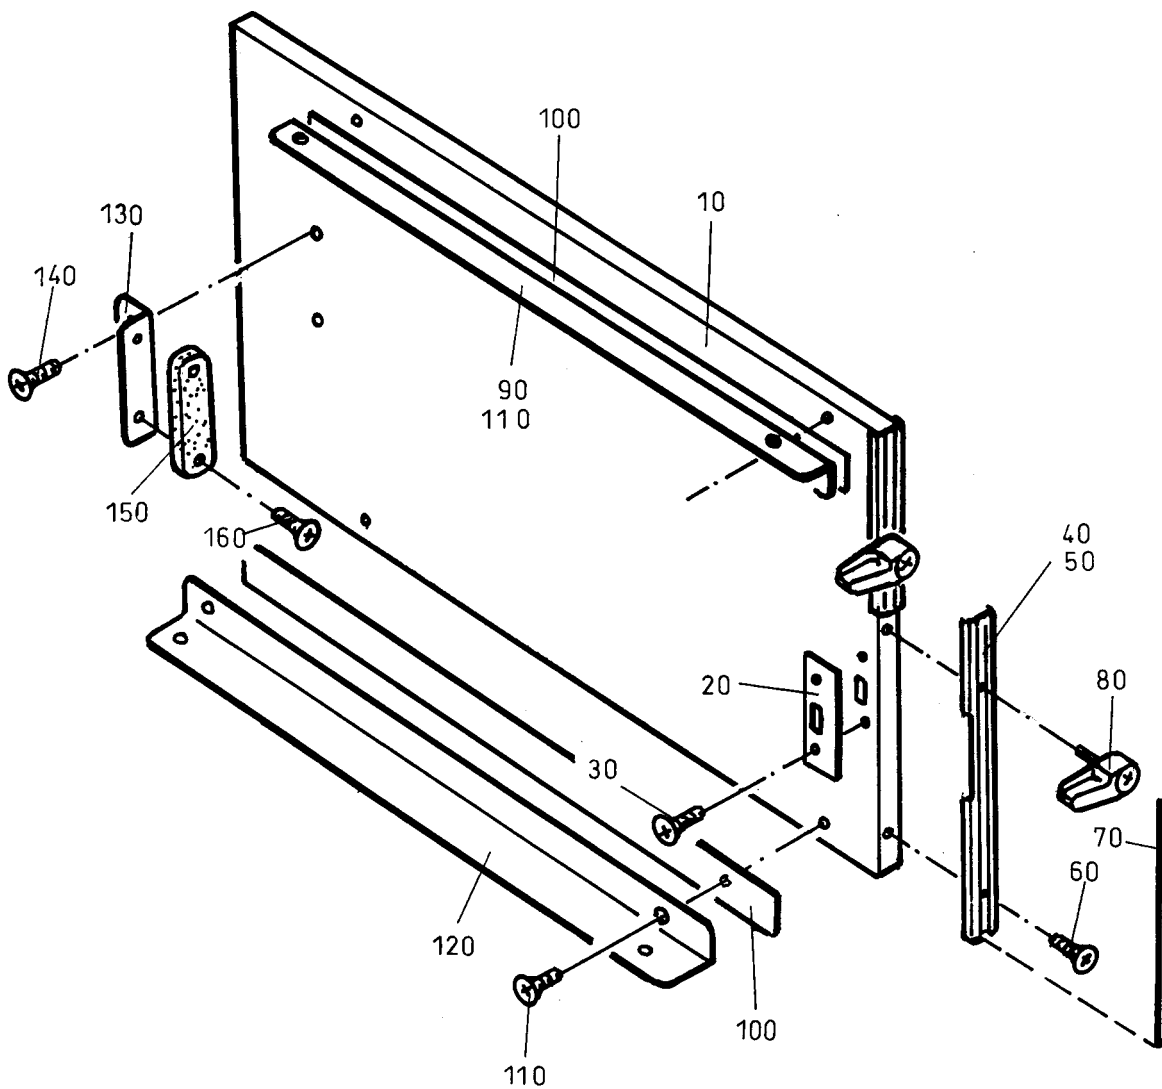

REV B

25-30-44

PAGE 1084
NOV05/99


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PLATE ASSY
FIGURE 25

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
25	-1	106113-26		PLATE ASSY (SEE FIG. 3 FOR NHA)		1
	10	106113-26-100		.CARCASS, PLATE		1
	20	111042-04-058		.STRIKE		1
	30	NAS514P832-6P		.SCREW		2
	40	114311-11-017		.PROFILE, EDGE		AR
	50	SC0TCH9473-14		.TAPE (VD2607)		AR
	60	MS51862-15C		.SCREW		2
	70	114311-11-013		.INSERT, PROFILE		AR
	80	111091-64		.CATCH ASSY		2
	90	111070-00-159		.PROFILE, L		1
	100	106113-02-017		.SPACER		2
	110	NAS514P832-8P		.SCREW		4
	120	111070-00-110		.PROFILE, L		1
	130	106113-26-006		.PROFILE, L		1
	140	NAS602-6P		.SCREW		2
	150	111094-01-105		.BUMPER		1
	160	NAS602-8P		.SCREW		2

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PLATE ASSY
FIGURE 26

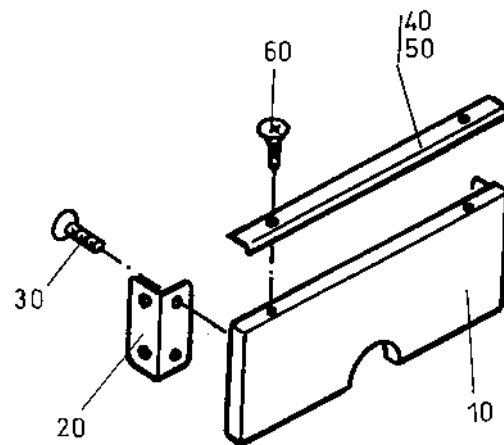


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PLATE ASSY
FIGURE 26

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
26	-1A	106113-27		PLATE ASSY (SEE FIG. 3 FOR NHA)	A	RF
	-1B	106113-28		PLATE ASSY (SEE FIG. 3 FOR NHA)	B	RF
	10A	106113-27-100		.CARCASS, PLATE	A	1
	10B	106113-28-100		.CARCASS, PLATE	B	
	20	106113-27-002		.PROFILE, L	A,B	2
	30	NAS602-6P		.SCREW	A,B	4
	40	114311-10-004		.PROFILE, EDGE	A,B	AR
	50	SCOTCH9473-10		.TAPE (VD2607)	A,B	AR
	60	MS51862-15C		.SCREW	A,B	2

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PLATE ASSY
FIGURE 27

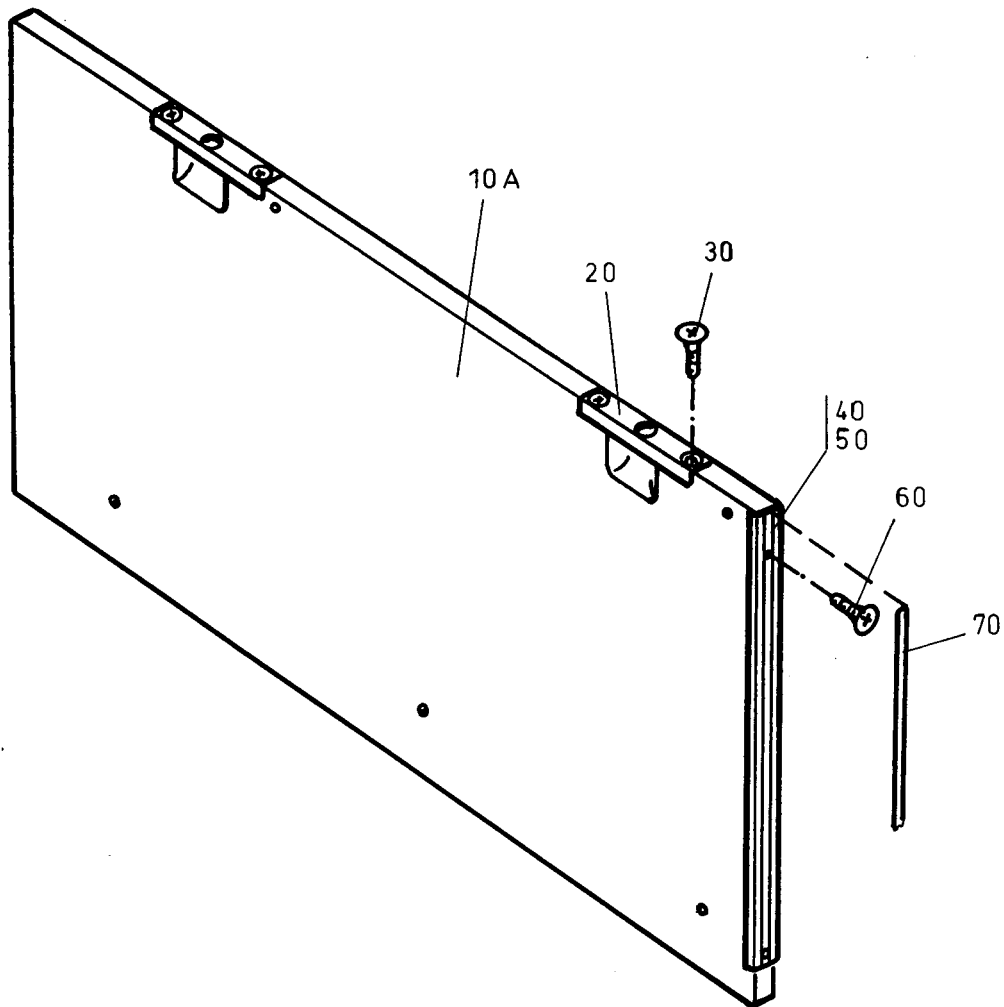


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PLATE ASSY
FIGURE 27

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
27	-1A	106113-29		PLATE ASSY (SEE FIG. 3 FOR NHA)	A	RF
	-1B	106113-30		PLATE ASSY (SEE FIG. 3 FOR NHA)	B	RF
	-1C	106113-31		PLATE ASSY (SEE FIG. 3 FOR NHA)	C	RF
	10A	106113-29-100		.CARCASS, PLATE	A	1
	-10B	106113-30-100		.CARCASS, PLATE	B	1
	-10C	106113-31-100		.CARCASS, PLATE	C	1
	20	111008-00-225		.PLATE	A-C	2
	30	BACB30LU4-5		.BOLT	A-C	4
	40	114311-11-017		.PROFILE, EDGE	A-C	AR
	50	SCOTCH9473-14		.TAPE (VD2607)	A-C	AR
	60	MS51862-15C		.SCREW	A-C	2
	70	114311-11-013		.INSERT, PROFILE	A-C	AR

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PULLOUT TABLE ASSY
FIGURE 28

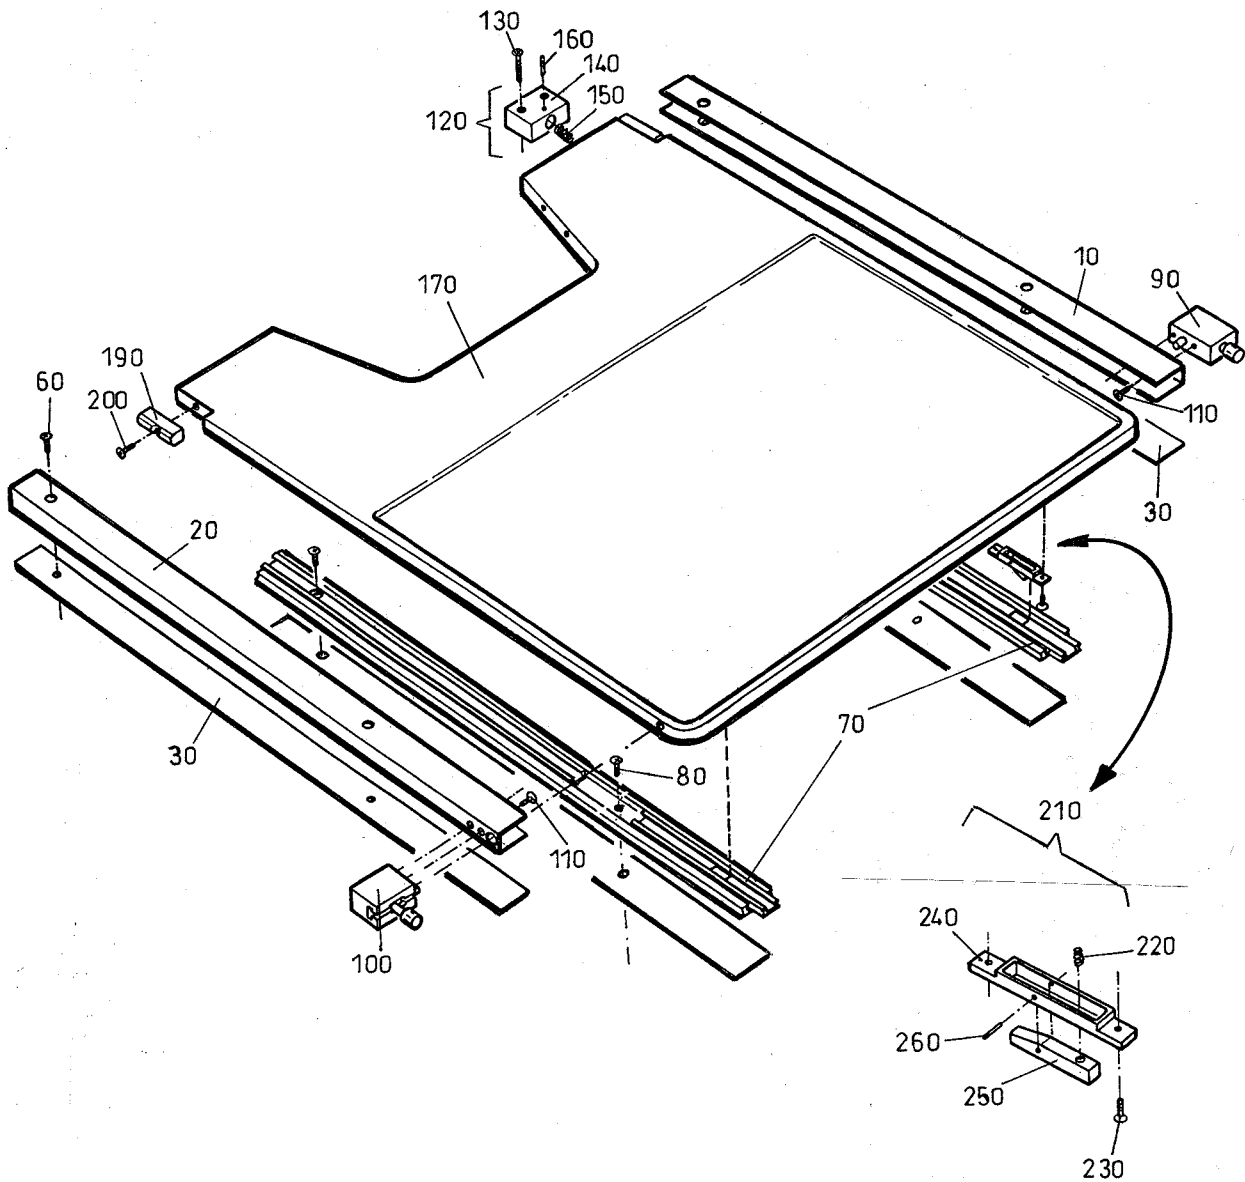

REV B

25-30-44

PAGE 1090
NOV05/99


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PULLOUT TABLE ASSY
FIGURE 28


FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
28	-1	108065		PULLOUT TABLE ASSY (SEE FIG. 3 FOR NHA)		RF
	10	108065-00-005		.PROFILE, U		1
	20	108065-00-006		.PROFILE, U		1
	30	108065-00-007		.SHIM		2
	-40	108065-00-013		.SHIM		2
	-50	108065-00-014		.SHIM		4
	60	NAS514P832-8P		.SCREW		4
	70	108065-03		..RAIL		2
	80	NAS514P832-6P		.SCREW		4
	90	108065-02		.LATCH ASSY		1
	100	108065-04		.LATCH ASSY		1
	110	NAS514P632-6P		.SCREW		4
	120	106090-88		.BLOCK		1
	130	NAS514P832-14P		.SCREW		2
	140	PA6-40X30		..POLYAMID		1
	150	111010-01-004		..SPRING		1
	160	DIN1481-2X14		..SLEEVE, CLAMPING		1
	170	108065-01		.TABLE, PULLOUT		1
	180	108065-01-001		..TABLE		1
	190	106100-31-003		..BLOCK		2
	200	NAS603-10P		..SCREW		2
	210	111061-12		..SNAP ASSY		2
	220	NAS514P440-4P		..SCREW		4
	230	111059-10-001		..SPRING		2
	240	111061-12-001		...BLOCK		1
	250	105135-10-002		...SNAP		1
	260	DIN1481-1-5X8		...SLEEVE, CLAMPING		1

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PANEL ASSIES
FIGURE 29

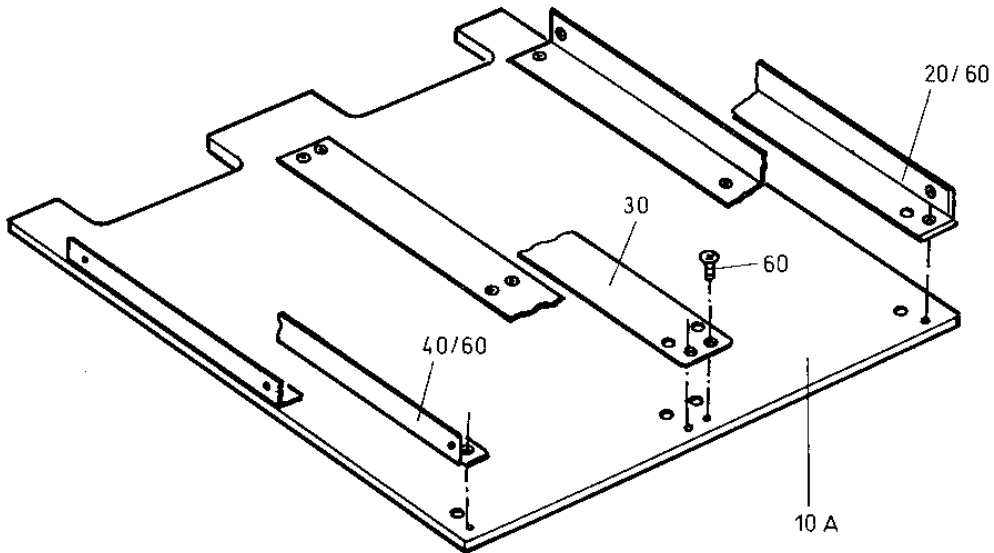

A PN 106113-16

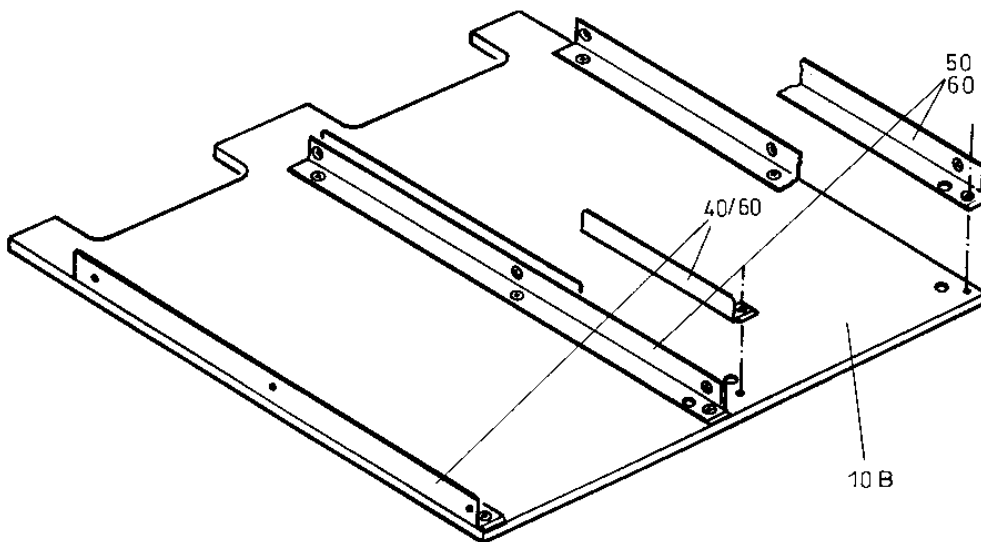

B PN 106113-17


ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PANEL ASSIES
FIGURE 29

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
29	-1A	106113-16		PLATE ASSY (SEE FIG. 3 FOR NHA)	A	RF
	-1B	106113-17		PLATE ASSY (SEE FIG. 3 FOR NHA)	B	RF
	10A	106113-16-100		.CARCASS, PLATE	A	1
	10B	106113-17-100		.CARCASS, PLATE	B	1
	20	106113-16-004		.PROFILE, L	A,B	1
	30	106113-16-002		.STRIP, SLIDING	A	1
	40	106113-16-003		.PROFILE, L	A	1
	40				B	2
	50	106113-17-003		.PROFILE, L	B	2
	60	NAS514P832-5P		.SCREW	A,B	12

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
EXHAUST AIR AND INDIVIDUAL FRESH AIR
FIGURE 30

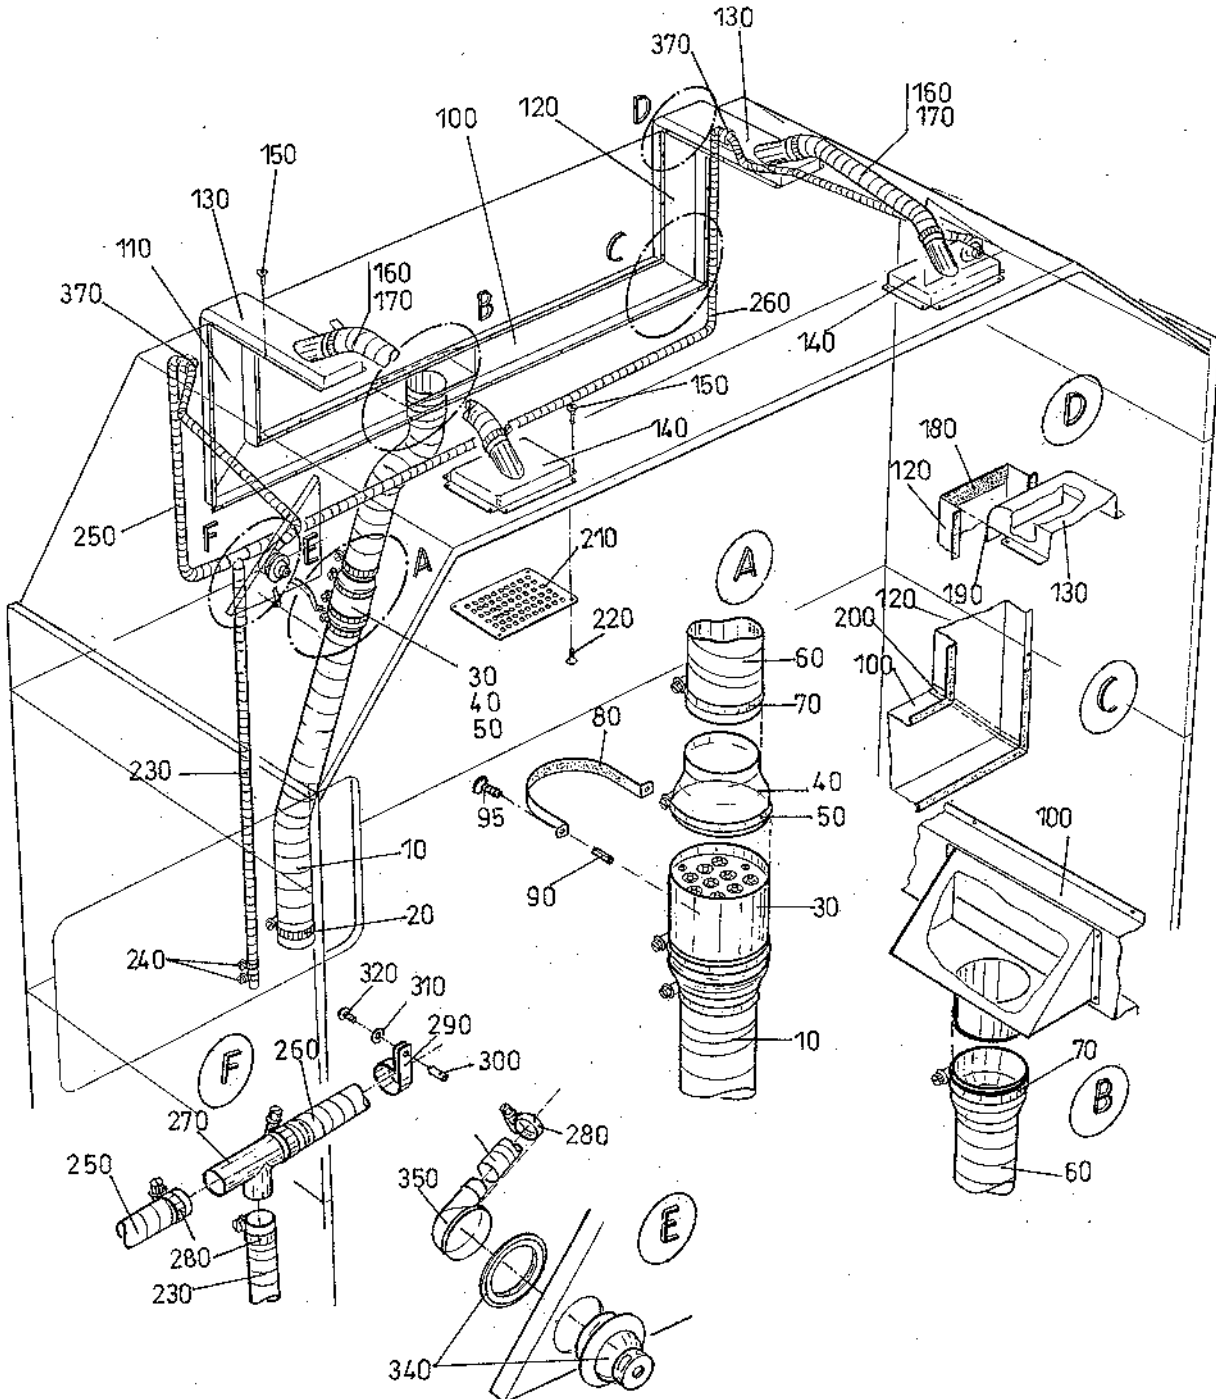

REV B

25-30-44

PAGE 1094
NOV05/99

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
EXHAUST AIR AND INDIVIDUAL FRESH AIR
FIGURE 30

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
30	-1A	106113-70		EXHAUST AIR ASSY (SEE FIG. 1 FOR NHA)	A	RF
	-1B	106113-71		INDIV. FRESH AIR ASSY (SEE FIG. 1 FOR NHA)	B	RF
	10	106113-70-001		.HOSE	A	1
	20	NSA5528-070		.CLAMP, SPIRAL THREADED	A	2
	30	QB0508		.CLEANER, AIR	A	1
	40	DLH351-0069		.REDUCER (VC1008)	A	2
	50	111108-00-014		.CLAMP, SPIRAL THREADED	A	2
	60	10613-70-005		.HOSE	A	1
	70	111108-00-013		.CLAMP SPIRAL THRAEDED	A	3
	80	11108-00-027		.BASE, MOUNTING	A	2
	90	NAS43DD3-24		.WASHER	A	8
	95	NAS602-8P		.SCREW	A	30
	100	106113-70-010		.CHANNEL, AIR	A	1
	110	106113-70-006		.CHANNEL, AIR	A	1
	120	106113-70-007		.CHANNEL, AIR	A	1
	130	106113-70-014		.CHANNEL, AIR	A	2
	140	106113-70-013		.COVER	A	2
	150	NAS602-8P		.SCREW	A	24
	160	106113-70-023		.HOSE	A	2
	170	111108-00-010		.CLAMP, SPIRAL THREADED	A	4
	180	SCOTCH3541		.SYSTEM, DUAL LOCK (VD2607)	A	AR
	190	SCOTCH3542		.SYSTEM, DUAL LOCK (VD2607)	A	AR
	200	111108-00-021		.TAPE (VD2607)	A	6
	210	106113-70-015		.COVER	A	2
	220	NAS514P632-5		.SCREW	A	8
	230	106113-71-001		.HOSE	B	1
	240	NSA5528-025		.CLAMP, SPIRAL THREADED	B	2
	250	106113-71-003		.HOSE	B	1
	260	106113-71-004		.HOSE	B	1
	270	111112-00-005		.ADAPTER	B	1
	280	111108-00-006		.CLAMP, SPIRAL THREADED	B	5
	290	BACC10DK18		.BASE, MOUNTING	B	12
	-300	111071-10-016		.WASHER	B	11
	310	AN960-10L		.WASHER	B	9



ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
30	320	NAS603-14P		.SCREW	B	4
	-330	NAS603-20P		.SCREW	B	3
	340	2966-01		.OUTLET, AIR	B	2
	350	A215703642000		.CAP	B	2
	-360	2000-24		.CLAMP	B	2
	370	111094-01-026		.BUMPER	B	2




COMPONENT MAINTENANCE MANUAL
106113 / 106113A

INTENTIONALLY LEFT BLANK

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

**DETAILED PARTS LIST(
 PLACARDING
 FIGURE 31**

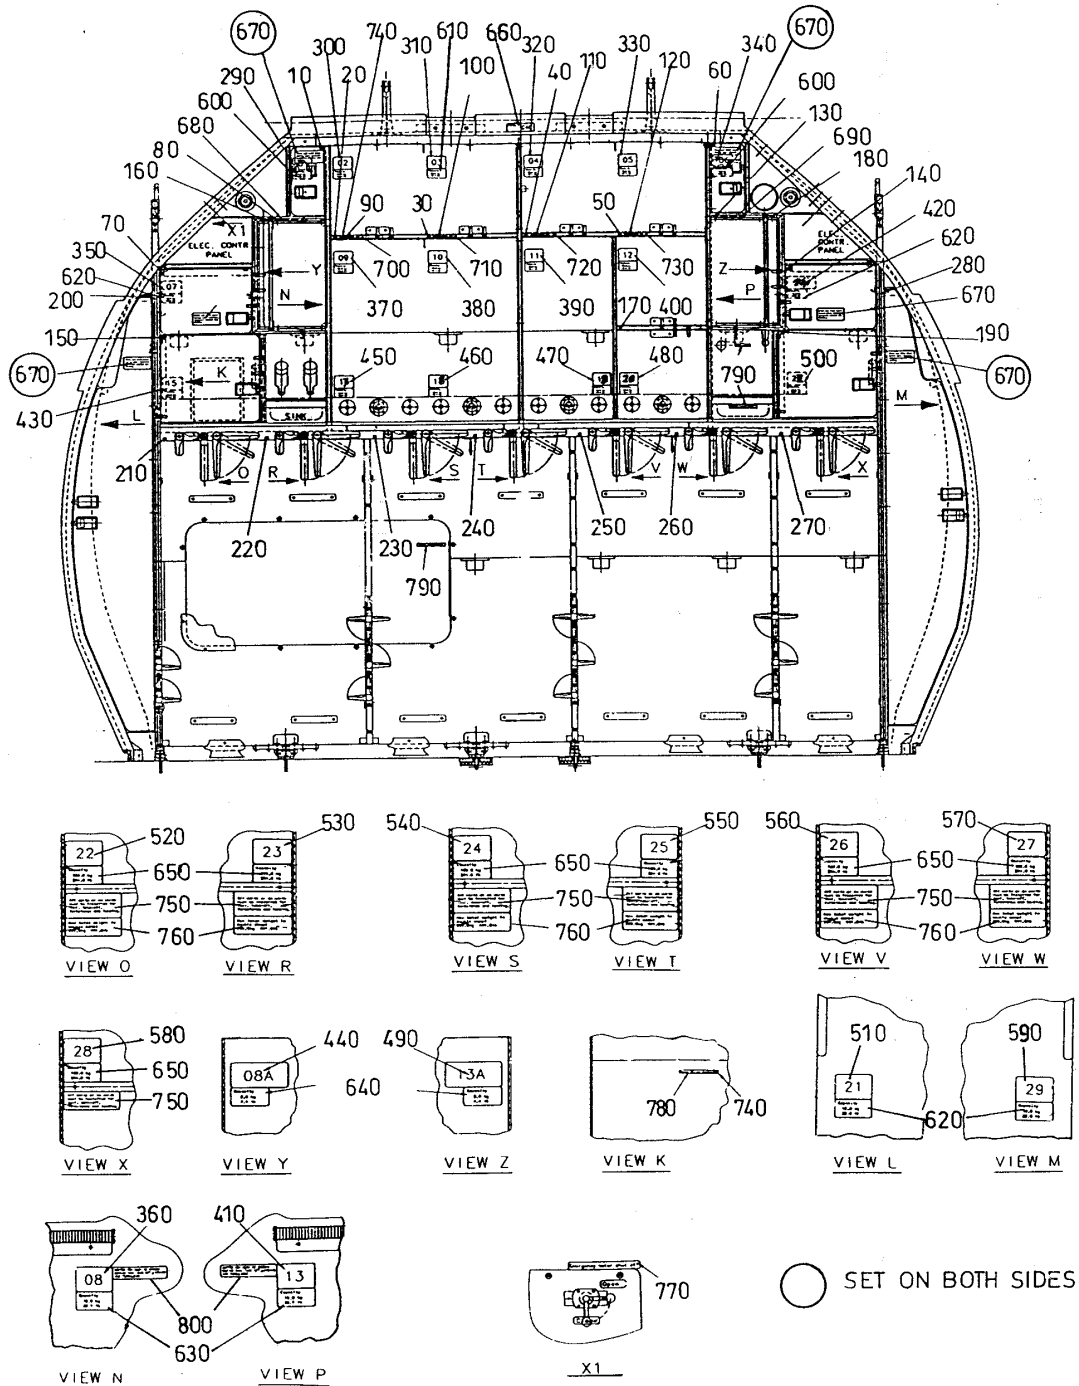

REV B

25-30-44

PAGE 1098
 NOV05/99

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PLACARDING
FIGURE 31

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
31	-1	106113-60		PLACARDING ASSY (SEE FIG 1 FOR NHA)		RF
	10	115505-00-001		.PLACARD		1
	20	115505-00-002		.PLACARD		1
	30	115505-00-003		.PLACARD		1
	40	115505-00-004		.PLACARD		1
	50	115505-00-005		.PLACARD		1
	60	115505-00-006		.PLACARD		1
	70	115505-00-007		.PLACARD		1
	80	115505-00-008		.PLACARD		1
	90	115505-00-009		.PLACARD		1
	100	115505-00-010		.PLACARD		1
	110	115505-00-011		.PLACARD		1
	120	115505-00-012		.PLACARD		1
	130	115505-00-013		.PLACARD		1
	140	115505-00-014		.PLACARD		1
	150	115505-00-015		.PLACARD		1
	160	115505-00-016		.PLACARD		1
	170	115505-00-020		.PLACARD		1
	180	115505-00-021		.PLACARD		1
	190	115505-00-022		.PLACARD		1
	200	115505-00-023		.PLACARD		1
	210	115505-00-024		.PLACARD		1
	220	115505-00-025		.PLACARD		1
	230	115505-00-026		.PLACARD		1
	240	115505-00-027		.PLACARD		1
	250	115505-00-028		.PLACARD		1
	260	115505-00-029		.PLACARD		1
	270	115505-00-030		.PLACARD		1
	280	115505-00-031		.PLACARD		1
	290	115072		.PLACARD		1
	300	115504-00-002		.PLACARD		1
	310	115504-00-003		.PLACARD		1
	320	115504-00-004		.PLACARD		1
	330	115504-00-005		.PLACARD		1
	340	115504-00-006		.PLACARD		1



ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
31	350	115504-00-007		.PLACARD		1
	360	115504-00-008		.PLACARD		1
	370	115504-00-009		.PLACARD		1
	380	115504-00-010		.PLACARD		1
	390	115504-00-011		.PLACARD		1
	400	115504-00-012		.PLACARD		1
	410	115504-00-013		.PLACARD		1
	420	115504-00-014		.PLACARD		1
	430	115504-00-015		.PLACARD		1
	440	115504-00-016		.PLACARD		1
	450	115504-00-017		.PLACARD		1
	460	115504-00-018		.PLACARD		1
	470	115504-00-019		.PLACARD		1
	480	115504-00-020		.PLACARD		1
	490	115504-00-021		.PLACARD		1
	500	115504-00-022		.PLACARD		1
	510	115504-00-023		.PLACARD		1
	520	115504-00-024		.PLACARD		1
	530	115504-00-025		.PLACARD		1
	540	115504-00-026		.PLACARD		1
	550	115504-00-027		.PLACARD		1
	560	115504-00-028		.PLACARD		1
	570	115504-00-029		.PLACARD		1
	580	115504-00-030		.PLACARD		1
	590	115504-00-031		.PLACARD		1
	600	115501-00-040		.PLACARD		2
	610	115501-00-200		.PLACARD		14
	620	115501-00-100		.PLACARD		4
	630	115501-00-150		.PLACARD		2
	640	115501-00-020		.PLACARD		2
	650	115501-01-200		.PLACARD		7
	660	IF511-9495		.PLACARD		1
	670	115500-00-039		.PLACARD		10
	680	115500-00-011		.PLACARD		1
	690	115500-00-012		.PLACARD		1
	700	115500-00-001		.PLACARD		1
	710	115500-00-002		.PLACARD		1
	720	115500-00-003		.PLACARD		1
	730	115500-00-004		.PLACARD		1
	740	115500-00-023		.PLACARD		5




ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
31	750	115500-00980-		.PLACARD		7
	760	115500-00-111		.PLACARD		6
	770	115500-00-009		.PLACARD		1
	780	115500-00-013		.PLACARD		1
	790	115500-00-014		.PLACARD		3
	800	115500-00-245		.PLACARD		2

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
POTABLE AND WASTE WATER SYSTEM
FIGURE 32

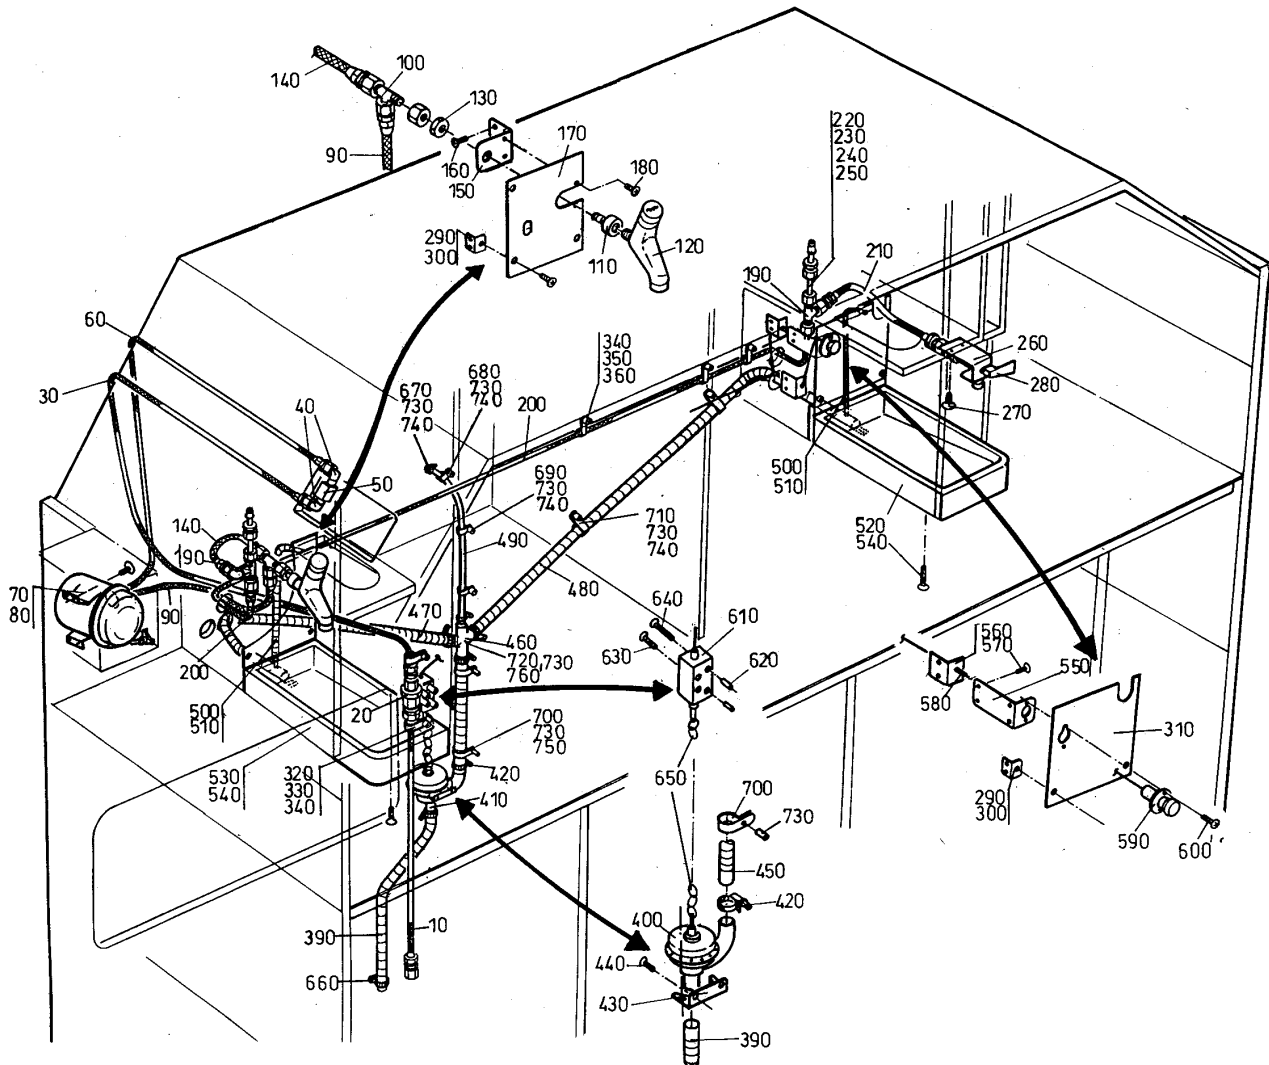

REV B

25-30-44

PAGE 1102
NOV05/99

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
POTABLE AND WASTE WATER SYSTEM
FIGURE 32

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
32	-1	106113-90		POTABLE WATER SYSTEM ASSY (SEE FIG 1 FOR NHA)		RF
	10	111190-40-071		.HOSE, POTABLE WATER		1
	20	MS21916J8-6		.REDUCER		1
	30	111190-23-205		.HOSE, POTABLE WATER		1
	40	MS20822-6J		.ELBOW		2
	50	111112-03-049		.VALVE, SHUTT OFF		1
	60	111190-29-160		.HOSE, POTABLE WATER		1
	70	AC21DRS		.FILTER, DRINKING WATER		1
	80	NAS602-6P		.SCREW		4
	90	111190-23-060		.HOSE, POTABLE WATER		1
	100	NAS1763J0606		.REDUCER		1
	110	106113-90-004		.ADAPTER		1
	120	2980082100100		.TAP, PILLAR		1
	130	AN924-6J		.NUT		1
	140	111190-29-020		.HOSE, POTABLE WATER		1
	150	111063-00-050		.SUPPORT		1
	160	NAS514P632-6P		.SCREW		2
	170	106113-90-006		.PLATE		1
	180	NAS603-6P		.SCREW		3
	190	MS21905J6		.TEE		2
	200	111190-20-185		.HOSE, POTABLE WATER		1
	210	111190-22-039		.HOSE, POTABLE WATER		1
	220	106113-90-106		.TUBE		2
	230	AN816-6J		.ADAPTER		2
	240	DIN471-20X1-2		.RING, RETAINING		2
	250	2-KL-C		.PLUG		2
	260	111063-00-055		.SUPPORT		1
	270	NAS603-4P		.SCREW		2
	280	3530-0018-03		.FAUCET		1
	290	111028-11-056		.ANGLE		4
	300	NAS602-6P		.SCREW		10
	310	106113-90-003		.PLATE		1
	320	AN910-2J		.COUPLING		1
	320	BACC10DK14		.BASE, MOUNTING		1
	330	111071-10-016		.WASHER		9



ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
32	340	NAS603-14P		.SCREW		9
	350	BACC10DK6		.BASE, MOUNTING		4
	360	AN960-10L		.WASHER		9
	-370	BACC10DK8		.BASE, MOUNTING		8
	-380	111094-01-026		.BUMPER	A,B	4
	390	106113-91-001		.HOSE		1
	400	ZCV173-3		.VALVE, DRAIN (V62701)		1
	410	190120-50-001		.VALVE, BACKFLOW		1
	420	111108-00-006		.CLAMP		7
	430	106074-90-203		.SUPPORT		1
	440	NAS514P1032-20P		.SCREW		4
	450	106108-90-201		.HOSE		1
	460	106113-91-005		.ADAPTER		1
	470	106113-91-003		.HOSE		1
	480	106113-91-004		.HOSE		1
	490	106113-91-006		.HOSE		1
	500	106113-91-007		.HOSE		2
	510	111108-00-005		.CLAMP		4
	520	106113-91-100		.SINK		1
	530	106113-91-200		.SINK		1
	540	NAS602-26P		.SCREW		8
	550	111108-00-031		.ANGLE		1
	560	106090-90-214		.PROFILE, L		1
	570	NAS602-8P		.SCREW		4
	580	111103-00-005		.SLEEVE		1
	590	106042-70-300		.DRAIN PULLING ASSY		1
	600	NAS601-6P		.SCREW		2
	610	106042-70-400		.DRAIN SERVICE ASSY		1
	620	NAS42DD6-64		.SPACER		4
	630	NAS603-22P		.SCREW		2
	640	NAS603-24P		.SCREW		2
	650	111022-00-008		.RING		6
	660	NSA5528-025		.CLAMP		1
	670	111108-00-006		.CLAMP		2
	680	BACC10DK10		.BASE, MOUNTING		2
	690	BACC10DK8		.BASE, MOUNTING		1
	700	BACC10DK18		.BASE, MOUNTING		2
	710	BACC10DK15		.BASE, MOUNTING		4
	720	BACC10DK18		.BASE, MOUNTING		1
	730	NAS42DD3-24		.WASHER		12




ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
32	740	NAS603-14P		.SCREW		7
	750	NAS603-20P		.SCREW		2
	760	NAS603-13P		.SCREW		1

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
WIRING
FIGURE 33

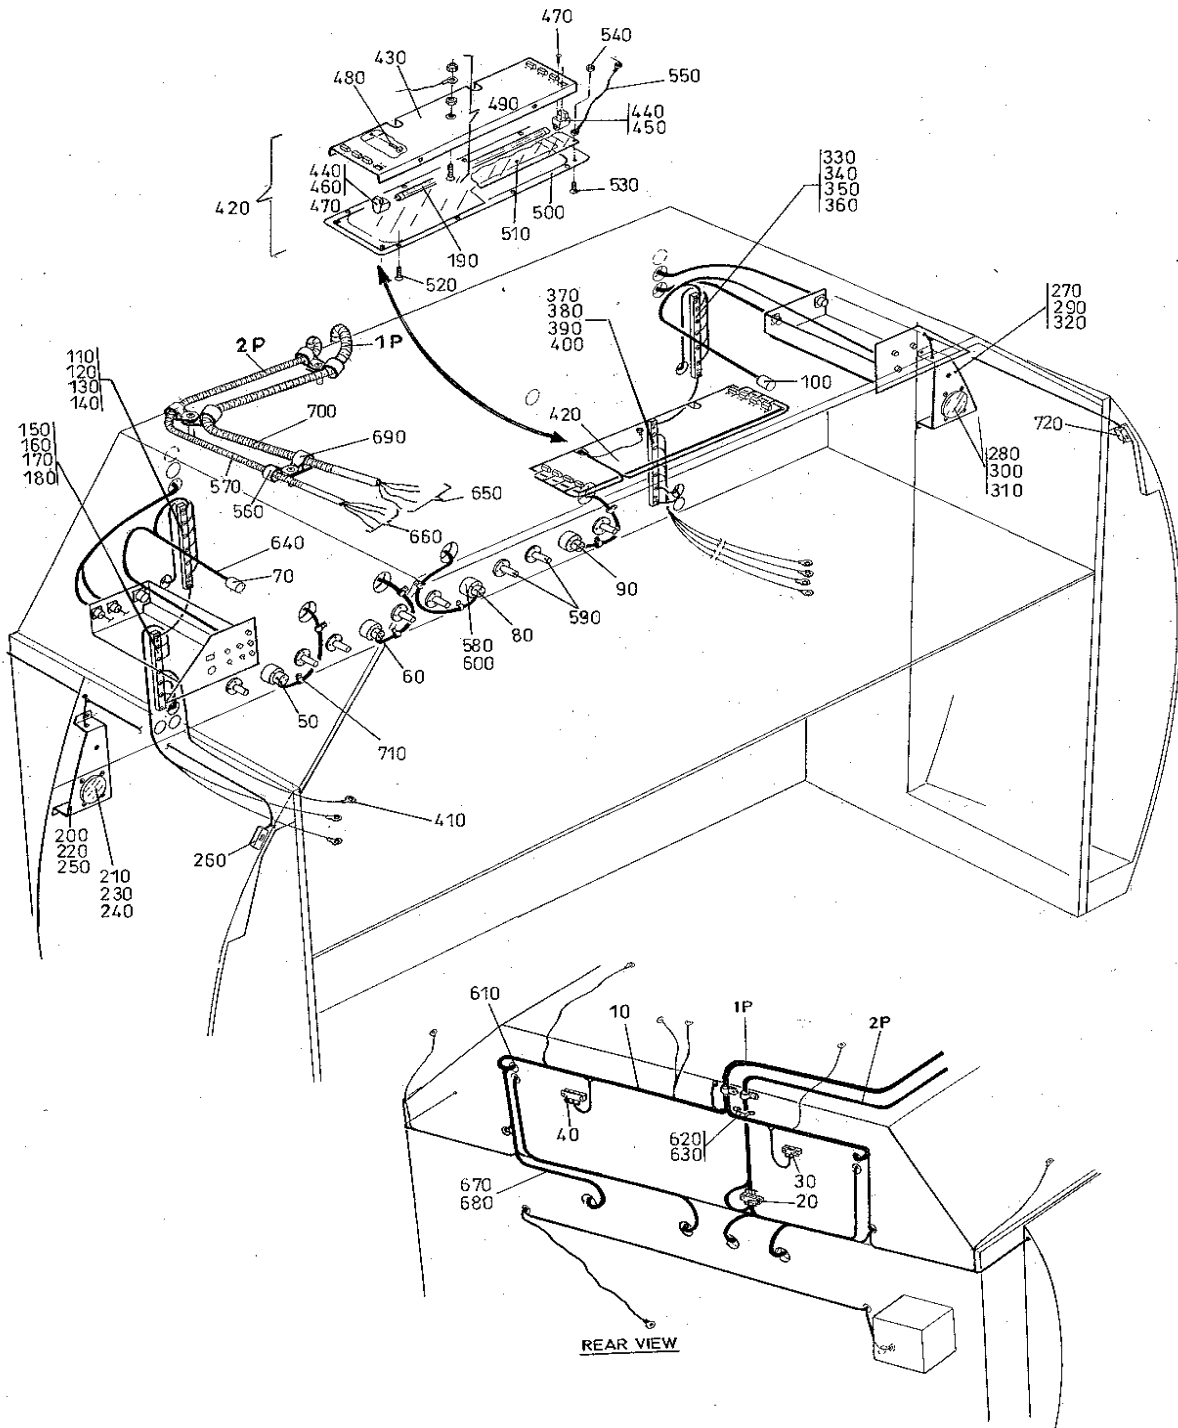

REV B

25-30-44

PAGE 1106
NOV05/99

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
WIRING
FIGURE 33

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
33	-1A	106113-80		WIRING ASSY (SEE FIG 1 FOR NHA)	A	RF
	-1B	106113A80		WIRING ASSY (SEE FIG 1 FOR NHA)	B	RF
	10	106113-80-101		..BUNDLE, WIRING		1
	-11	BMS13T1C1S-10		..WIRE		AR
	-12	BMS13T1C1S-14		..WIRE		AR
	-13	NSA935131DG8		..WIRE (VC1008)		AR
	-14	BMS13-31T1C1S		..WIRE		AR
	-15	BMS13T1C1S-20		..WIRE		AR
	-16	BMS13-31T1C1S		..WIRE		AR
	20	TB301		..STRIP, TERMINAL	A	1
	-21	MS27212-2-4		..STRIP, TERMINAL		1
	-22	MS18029-2S-4		..COVER, TERMINAL STRIP		1
	-23	MS25226-4-4		..BUS, TERMINAL STRIP		1
	-24	AN960-10L		..WASHER		1
	-25	MS20341-10A		..NUT		4
	-26	MS18029-22		..LOCK		2
	-27	AMP50845-2		..LUG, TERMINAL (VD8512)		12
	30	TB302		..STRIP, TERMINAL		1
	-31	MS27212-2-3		..STRIP, TERMINAL		1
	-32	MS18029-2S-3		..COVER, TERMINAL STRIP		1
	-33	MS25226-4-3		..BUS, TERMINAL STRIP		1
	-34	AN960-10L		..WASHER		3
	-35	BACN10JC3		..NUT, SELF LOCKING		3
	-36	MS20341-10A		..NUT		3
	-37	111111-00-022		..PLATE, EQUIPMENT NO.		4
	-38	MS18029-22		..LOCK		2
	40	TB303		..STRIP, TERMINAL		1
	-41	MS27212-2-4		..STRIP, TERMINAL		1
	-42	MS18029-2S-4		..COVER, STRIP		1
	-43	MS25226-4-4		..BUS, TERMINAL STRIP		1
	-44	AN960-10L		..WASHER		4
	-45	BACN10JC3		..NUT		4
	-46	MS20341-10A		..NUT		4
	-47	111111-00-022		..PLATE, EQUIPMENT NO.		5

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
33	-48	AMP50845-2		..LUG, TERMINAL (VD8512)		11
	-49	AMP132330-1		..LUG, TERMINAL (VD8512)		2
	50	D307J		..DISCONNECT		1
	-51	CBC-6-33-1		..CONNECTOR (V71771)		1
	-52	AMP50836-1		..LUG, TERMINAL (VD8512)		3
	-53	AMP50835		..LUG, TERMINAL (VD8512)		1
	-54	AMP50839-1		..LUG, TERMINAL (VD8512)		2
	-55	111111-00-022		..PLATE, EQUIPMENT NO.		1
	60	D308J		..DISCONNECT		1
	-61	CBC-6-33-1		..CONNECTOR (V71771)		1
	-62	AMP50839-1		..LUG, TERMINAL (VD8512)		3
	-63	AMP50835		..LUG, TERMINAL (VD8512)		1
	-64	AMP50839-1		..LUG, TERMINAL (VD8512)		2
	-65	111111-00-022		..PLATE, EQUIPMENT NO.		1
	70	D309P		..DISCONNECT		1
	-71	FE3406D16S		..PLUG (VS3845)		1
	-72	MS27488-16		..PLUG, SEALING		2
	-73	NSA937211-005		..HOSE		AR
	80	D3010J		..DISCONNECT		1
	-81	CBC-6-33-1		..CONNECTOR (V71771)		1
	-82	AMP50836-1		..LUG, TERMINAL (VD8512)		3
	-83	AMP50835		..LUG, TERMINAL (VD8512)		1
	-84	AMP50839-1		..LUG, TERMINAL (VD8512)		2
	-85	111111-00-022		..PLATE, EQUIPMENT NO.		1
	90	D3011J		..DISCONNECT		1
	-91	CBC-6-33-1		..CONNECTOR (V71771)		1
	-92	AMP50836-1		..LUG, TERMINAL (VD8512)		3
	-93	AMP50835		..LUG, TERMINAL (VD8512)		1
	-94	AMP50839-1		..LUG, TERMINAL (VD8512)		2
	-95	111111-00-022		..PLATE, EQUIPMENT NO.		1
	100	D3012P		..DISCONNECT		1
	-101	FE3406D16S-1S		..PLUG		1
	-102	MS27488-16		..PLUG, SEALING		2
	-103	NSA937211-005		..HOSE		AR
	110	TB307		..BUS, GROUND		1
	-111	111111-00-022		..PLATE, EQUIPMENT NO.		1
	-112	AMP132330-1		..LUG, TERMINAL (VD8512)		2
	-113	AMP50845-2		..LUG, TERMINAL (VD8512)		12
	120	106108-80-102		..BUS, GROUND		1
	130	NAS601-12P		..SCREW		2

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
33	140	NAS1096-3-5		..SCREW		6
	150	TB308		.BUS, GROUND		1
	160	106108-80-102		.BUS, GROUND		1
	170	NAS601-12P		..BUS, GROUND		2
	180	NAS1096-3-5		..SCREW		6
	190	L301		.LAMP ASSY		4
	200	L305		.LAMP ASSY		1
	210	2LA002692-02		.LAMP (VD8095)		1
	-211	1841-1-5620		..PIN (VD8518)		2
	-212	111111-00-022		..PLATE, EQUIPMENT NO		1
	220	106113-80-102		.COVER, LAMP		1
	230	NAS602-6P		.SCREW		4
	240	BACN10JC08		.NUT		4
	250	NAS602-4P		.SCREW		3
	260	S304		.SWITCH		1
	-261	704059		.SWITCH (VOD660)		1
	-262	AMP50831-1		..LUG, TERMINAL (VD8512)		2
	-263	111111-00-022		..PLATE, EQUIPMENT NO.		1
	-264	111111-00-088		..CASE		1
	-265	NAS602-4P		..SCREW		2
	-266	NAS600-10P		..SCREW		2
	-267	BACN10JC04		.NUT		2
	270	L306		.LAMP ASSY		1
	280	2LA002692-02		.LAMP (VD8095)		1
	-281	1841-1-5620		..PIN (VD8518)		5
	-282	111111-00-022		..PLATE, EQUIPMENT NO.		1
	290	106113-80-103		.LAMP COVER		1
	300	NAS602-6P		.SCREW		4
	310	BACN10JC08		.NUT		4
	320	NAS602-4P		.SCREW		3
	330	TB309		.BUS, GROUND		1
	-331	111111-00-022		.PLATE, EQUIPMENT NO.		1
	-332	AN960D10L		..WASHER		2
	-333	BACN10JC3		..NUT		1
	-334	AMP132330-1		..LUG, TERMINAL (VD8512)		2
	-335	AMP50845-2		..LUG, TERMINAL (VD8512)		1
	340	106108-80-102		.BUS, GROUND		1
	350	NAS602-4P		.SCREW		2
	360	NAS1096-3-5		.SCREW		6
	370	TB310		.BUS, GROUND		1



ALBERT MÜHLENBERG APPARATEBAU COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
33	-371	111111-00-022		..PLATE, EQUIPMENT NO.		1
	-372	AN960D10L		..WASHER		2
	-373	BACN10JC3		..NUT		1
	-374	AMP132330-1		..LUG, TERMINAL (VD8512)		2
	-375	AMP50845-2		..LUG, TERMINAL (VD8512)		1
	380	106108-80-102		.BUS, GROUND		1
	390	NAS602-4P		.SCREW		2
	400	NAS1096-3-5		.SCREW		6
	410	111111-00-043		.CLAMP, GROUND		2
	420	112007-16		.LAMP ASSY		1
	430	112007-16-001		.LAMP CARCASS		1
	440	BV5-01441		.CAP (V17023)		8
	450	BV5-01258		.BULBHOLDER (V17023)		4
	460	BV5-01261		.BULBHOLDER (V17023)		4
	470	NAS601-4P		.SCREW		16
	480	NAS602-4P		.SCREW		4
	490	111111-00-027		.STUD, GROUND		1
	-491	MS25036-108		..RING, NYLON PIDG.		1
	-492	NAS603-8P		..SCREW		1
	-493	BACN10JC3		..NUT		1
	-494	MS20341-10A		..NUT		1
	-495	MS35338-43		..WASHER		1
	-496	AN960D10L		..WASHER		2
	-497	AN960-10L		..WASHER		1
	-498	MS35489-1		..GROMMET		AR
	500	112007-16-002		.COVER, LAMP		1
	510	111012-07-004		.COVER, LAMP		1
	520	27S3-4F		.FASTENER (D0680)		8
	530	NAS514P632-6P		.SCREW		4
	540	BACN10JC06		.NUT		4
	550	111022-05		.LOOP ASSY		1
	560	NSA935807-20		.CLAMP		1
	570	NSA935805-20		.TUBE		AR
	580	111111-00-035		.SPACER		4
	590	111111-00-053		.BUSHING		8
	600	NAS514P632-24P		.SCREW		16
	610	111094-01-026		.BUMPER		AR
	620	111111-00-086		.BRIDGE, WIRE		1
	630	NAS602-6P		.SCREW		2
	640	NSA935805-12		.TUBE		AR




ALBERT MÜHLENBERG APPARATEBAU COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
33	650	AMP50845-2		.LUG, TERMINAL (VD8512)		8
	660	AMP50840-1		.LUG, TERMINAL (VD8512)		4
	670	NSA935401-03		.TIE, CABLE		AR
	680	MB3A		.BASE, MOUNTING (VOD660)		AR
	690	NSA935807-32		.CLAMP		1
	700	NSA935805-32		.TUBE		AR
	710	BACC10DKXX		.BASE, MOUNTING		AR
	720	S303		.SWITCH		1
	-721	704059		..SWITCH (VOD660)		1
	-722	111111-00-022		..PLATE, EQUIPMENT NO		1
	-723	111111-00-089		..CASE		1
	-724	NAS601-4P		..SCREW		2
	-725	NAS600-10P		..SCREW		2
	-726	BACN10JC04		..NUT		2

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
SWITCH BOX R/H
FIGURE 34

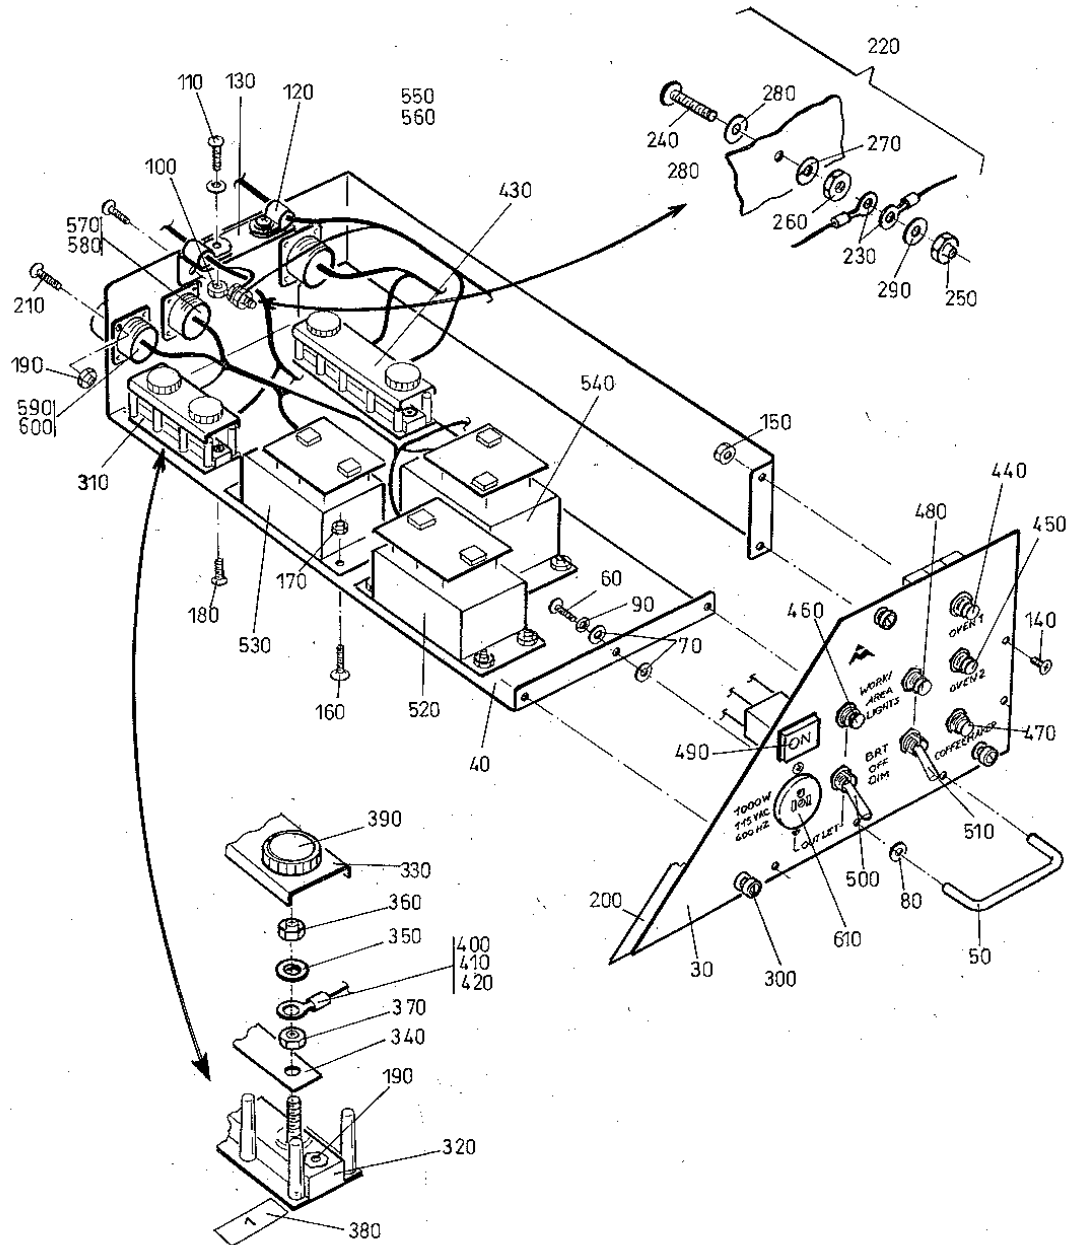

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
SWITCH BOX R/H
FIGURE 34

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
34	-1A	106113-80		WIRING ASSY (SEE FIG 1 FOR NHA)		RF
	-1B	106113A80		WIRING ASSY (SEE FIG 1 FOR NHA)		RF
	10	106113-80-101		.BUNDLE, WIRING		1
	-11	BMS13T1C1S-10		..WIRE		AR
	-12	BMS13T1C1S-14		..WIRE		AR
	-13	NSA935131DG8		..WIRE (VC1008)		AR
	-14	BMS13-31T1C1S		..WIRE		AR
	-15	BMS13T1C1S-20		..WIRE		AR
	-16	BMS13-31T1C1S		..WIRE		AR
	20	106113-80-200		.SWITCH BOX RH		1
	30	106113-80-201		.PANEL, CIRCUIT BREAKER		1
	40	106113-80-202		.BOX, CIRCUIT BREAKER		1
	50	106080-80-203		.HANDLE		1
	60	NAS601-6P		.SCREW		2
	70	AN960D6L		.WASHER		2
	80	AN960C6L		.WASHER		AR
	90	AN960-6L		.WASHER		2
	100	BACN10JC08		.NUT		4
	110	NAS602-10P		.SCREW		4
	120	BACC10DK8		.BASE, MOUNTING		2
	130	106090-80-105		.ANGLE		1
	140	NAS601-10P		.SCREW		3
	150	BACN10JC06		.NUT		3
	160	NAS514P632-8P		.SCREW		12
	170	BACN10JC06		.NUT		12
	180	NAS514P440-8P		.SCREW		4
	190	BACN10JC04		.NUT		16
	-200	ABS0306		.PROFILE (VD8515)		AR
	-210	NAS600-8P		.SCREW		12
	220	111111-00-027		.STUD, GROUND		1
	230	MS25036-108		.RING, NYLON PIDG		1
	240	NAS603-8P		.SCREW		1
	250	BACN10JC3		.NUT		1
	260	MS20341-10A		.NUT		1



ALBERT MÜHLENBERG APPARATEBAU COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
34	270	MS35338-43		.WASHER, LOCK		1
	280	AN960D10L		.WASHER		2
	290	AN960-10L		.WASHER		1
	300	28S11-4		.FASTENER (VD0680)		3
	310	TB304		.STRIP, TERMINAL		1
	320	MS27212-2-4		.STRIP, TERMINAL		1
	330	MS18029-2S-4		.COVER, TERMINAL STRIP		1
	340	MS265226-4-4		.BUS, TERMINAL STRIP		1
	350	AN960-10L		.WASHER		4
	360	BACN10JC3		.NUT		4
	370	MS20341-10A		.NUT		4
	380	111111-00-022		.PLATE, EQUIPMENT NO.		5
	390	MS18029-22		.LOCK		2
	400	AMP50845-2		.LUG, TERMINAL (VD8512)		1
	410	AMP50836-1		.LUG, TERMINAL (VD8512)		3
	420	AMP50832-1		.LUG, TERMINAL (VD8512)		1
	430	TB305		.STRIP, TERMINAL	A	1
	-431	MS27212-2-3		..STRIP, TERMINAL	A	1
	-432	MS18029-2S-3		..COVER, TERMINAL STRIP	A	1
	-433	MS25226-4-3		..BUS, TERMINAL STRIP	A	1
	-434	AN960-10L		..WASHER	A	1
	-435	MS20341-10A		..NUT	A	3
	-436	111111-00-022		..PLATE, EQUIPMENT NO.	A	4
	-437	MS18029-22		..LOCK	A	2
	-438	AMP50845-2		.LUG, TERMINAL (VD8512)		1
	-439	AMP50836-1		.LUG, TERMINAL (VD8512)		1
	440	C301		.CIRCUIT BREAKER		1
	-441	583-15A		..CIRCUIT BREAKER (V001E0)		1
	-442	AMP50845-1		..LUG, TERMINAL (VD8512)		1
	-443	AMP50836		..LUG, TERMINAL (VD8512)		1
	-444	111111-00-022		..PLATE, EQUIPMENT NO.		1
	450	C302		.CIRCUIT BREAKER		1
	-451	2TC6-10		..CIRCUIT BREAKER (VS3845)		1
	-452	AMP50845-1		..LUG, TERMINAL (VD8512)		1
	-453	AMP50836		..LUG, TERMINAL (VD8512)		1
	-454	111111-00-022		..PLATE, EQUIPMENT NO.		1
	460	C303		.CIRCUIT BREAKER		1
	-461	583-15A		..CIRCUIT BREAKER (V001E0)		1
	-462	AMP50845-1		..LUG, TERMINAL (VD8512)		1
	-463	AMP50836		..LUG, TERMINAL (VD8512)		1

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
34	-464	111111-00-022		..PLATE, EQUIPMENT NO.		1
	470	C304		..CIRCUIT BREAKER		1
	-471	583-15A		..CIRCUIT BREAKER (V001E0)		1
	-472	AMP50840		..LUG, TERMINAL (VD8512)		1
	-473	AMP50836		..LUG, TERMINAL (VD8512)		1
	-474	111111-00-022		..PLATE, EQUIPMENT NO.		1
	480	C305		..CIRCUIT BREAKER		1
	-481	2TC6-2		..CIRCUIT BREAKER (V5N982)		1
	-482	AMP50840		..LUG, TERMINAL (VD8512)		1
	-483	AMP50832		..LUG, TERMINAL (VD8512)		1
	-484	111111-00-022		..PLATE, EQUIPMENT NO.		1
	490	N301		..INDICATOR ASSY		1
	-491	90K8A1D3G2L1N		..INDICATOR (VS3845)		1
	-492	111111-00-022		..PLATE, EQUIPMENT NO.		1
	-493	90KJ1-A		..FILTER (VS3845)		1
	-494	OLN115-18K		..BULB (VS3845)		1
	500	S301		..SWITCH ASSY		1
	-501	MS35058-22		..SWITCH		1
	-502	AMP50835		..LUG, TERMINAL (VD8512)		1
	-503	111111-00-022		..PLATE, EQUIPMENT NO.		1
	510	S302		..SWITCH ASSY		1
	-511	MS35059-21		..SWITCH		1
	-512	AMP50831-1		..LUG, TERMINAL (VD8512)		1
	-513	111111-00-022		..PLATE, EQUIPMENT NO.		1
	520	M301		..BALLAST UNIT ASSY		1
	-521	62-11		..UNIT, BALLAST (V82255)		1
	-522	AMP50831-1		..LUG, TERMINAL (VD8512)		1
	-523	111111-00-022		..PLATE, EQUIPMENT NO.		1
	530	M302		..BALLAST UNIT ASSY		1
	-531	62-11		..UNIT, BALLAST (V82255)		1
	-532	AMP50831-1		..LUG, TERMINAL (VD8512)		1
	-533	111111-00-022		..PLATE, EQUIPMENT NO.		1
	540	T301		..TRANSFORMER ASSY		1
	-541	81-30		..TRANSFORMER (V82255)		1
	-542	AMP50831-1		..LUG, TERMINAL (VD8512)		1
	-543	111111-00-022		..PLATE, EQUIPMENT NO.		1
	550	D301J		..DISCONNECT		1
	-551	48-10R16-10S		..RECEPTACLE (VS3845)		1
	-552	111111-00-022		..PLATE, EQUIPMENT NO.		1



ALBERT MÜHLENBERG APPARATEBAU COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
34	560	D301P		.DISCONNECT		1
	-561	48-16R16-10P		..PLUG (VS3845)		1
	-562	MS27291-4		..CABLE SUPPORT ASSY		1
	-563	NSA937211-005		..HOSE, IDENTIFICATION		1
	570	D302J		.DISCONNECT		1
	-571	48-10R14-7S		..RECEPTACLE (VS3845)		1
	-572	111111-00-022		..PLATE, EQUIPMENT NO.		1
	590	D303J		.DISCONNECT		1
	-591	48-10R14-15S		..RECEPTACLE (VS3845)		1
	-592	111111-00-022		..PLATE, EQUIPMENT NO.		1
	580	D302P		.DISCONNECT		1
	-581	48-16R14-7P		..PLUG (VS3845)		1
	-582	MS27291-3		..CABLE SUPPORT ASSY		1
	-583	NSA937211-005		..HOSE, IDENTIFICATION		1
	600	D303P		.DISCONNECT		1
	-601	48-16R14-15P		..PLUG (VS3845)		1
	-602	MS27291-3		..CABLE SUPPORT ASSY		1
	-603	NSA937211-005		..HOSE, IDENTIFICATION		1
	610	D306J		.DISCONNECT		1
	-611	5258-1		..RECEPTACLE (V178H2)		1
	-612	AMP50831-1		..LUG, TERMINAL (VD8512)		1
	-613	111111-00-022		..PLATE, EQUIPMENT NO.		1




COMPONENT MAINTENANCE MANUAL
106113 / 106113A

INTENTIONALLY LEFT BLANK

 COMPONENT MAINTENANCE MANUAL
 106113 / 106113A

DETAILED PARTS LIST
 SWITCH BOX L/H
 FIGURE 35

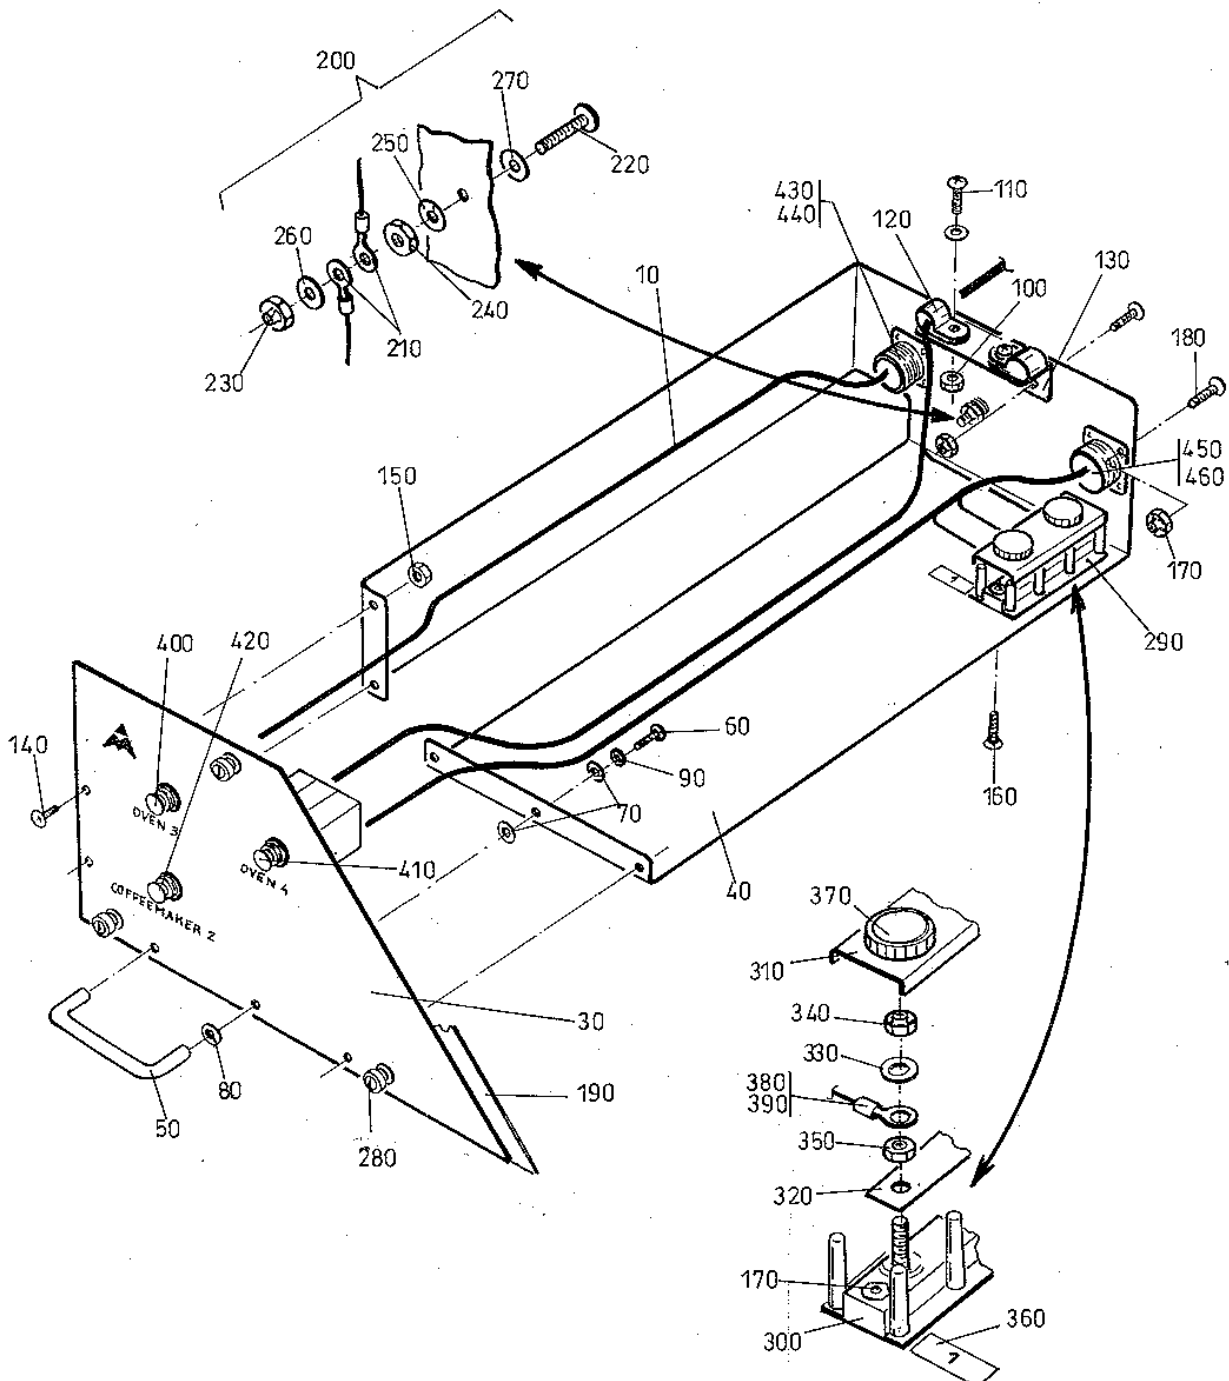

REV B

25-30-44

PAGE 1118
NOV05/99

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
SWITCH BOX L/H
FIGURE 35

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
35	-1A	106113-80		WIRING ASSY (SEE FIG 1 FOR NHA)		RF
	-1B	106113A80		WIRING ASSY (SEE FIG 1 FOR NHA)		RF
	10	106113-80-101		.WIRING BUNDLE		1
	-11	BMS13T1C1S-10		..WIRE		AR
	-12	BMS13T1C1S-14		..WIRE		AR
	-13	NSA935131DG8		..WIRE (VC1008)		AR
	-14	BMS13-31T1C1S		..WIRE		AR
	-15	BMS13T1C1S-20		..WIRE		AR
	-16	BMS13-31T1C1S		..WIRE		AR
	20	106113-80-300		.BOX, SWITCH		1
	30	106113-80-301		.PANEL, CIRCUIT BREAKER		1
	40	106113-80-302		.BOX, CIRCUIT BREAKER		1
	50	106080-80-203		.HANDLE		1
	60	NAS601-6P		.SCREW		2
	70	AN960D6L		.WASHER		2
	80	AN960C6L		.WASHER		AR
	90	AN960-6L		.WASHER		2
	100	BACN10JC08		.NUT		4
	110	NAS602-10P		.SCREW		4
	120	BACC10DK8		.BASE, MOUNTING		2
	130	106090-80-105		.ANGLE		1
	140	NAS601-10P		.SCREW		3
	150	BACN10JC06		.NUT		3
	160	NAS514P632-8P		.SCREW		12
	170	BACN10JC04		.NUT		12
	180	NAS600-8P		.SCREW		4
	190	ABS0306		.PROFILE		AR
	200	111111-00-027		.STUD, GROUND		1
	210	MS25036-108		.RING, NYLON PIDG		1
	220	NAS603-8P		.SCREW		1
	230	BACN10JC3		.NUT		1
	240	MS20341-10A		.NUT		1
	250	MS35338-43		.WASHER, LOCK		1
	260	AN960D10L		.WASHER		2



ALBERT MÜHLENBERG APPARATEBAU COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
35	270	AN960-10L		.WASHER		1
	280	28S11-4		.FASTENER (VD0680)		3
	290	TB306		.STRIP, TERMINAL		1
	300	MS27212-2-3		..STRIP, TERMINAL		1
	310	MS18029-2S-3		..COVER, TERMINAL STRIP		1
	320	MS25226-4-3		..BUS, TERMINAL STRIP		1
	330	AN960-10L		..WASHER		3
	340	BACN10JC3		..NUT		3
	350	MS20341-10A		..NUT		3
	360	111111-00-022		..PLATE, EQUIPMENT NO.		4
	370	MS18029-22		..LOCK		2
	380	AMP50845-2		.LUG, TERMINAL (VD8512)		1
	390	AMP50836-1		.LUG, TERMINAL (VD8512)		1
	400	C308		.CIRCUIT BREAKER		1
	-401	583-15A		..CIRCUIT BREAKER		1
	-402	AMP50845-1		..LUG, TERMINAL (VD8512)		1
	-403	AMP50836		..LUG, TERMINAL (VD8512)		1
	-404	111111-00-022		..PLATE, EQUIPMENT NO.		1
	410	C309		.BREAKER, CIRCUIT		1
	-411	583-15A		..BREAKER, CIRCUIT		1
	-412	AMP50845-1		..LUG, TERMINAL (VD8512)		1
	-413	AMP50836		..LUG, TERMINAL (VD8512)		1
	-414	111111-00-022		..PLATE, EQUIPMENT NO.		1
	420	C310		.BREAKER, CIRCUIT		1
	-421	583-15A		..BREAKER, CIRCUIT		1
	-422	AMP50845-1		..LUG, TERMINAL (VD8512)		1
	-423	AMP50836		..LUG, TERMINAL (VD8512)		1
	-424	111111-00-022		..PLATE, EQUIPMENT NO.		1
	430	D304J		.DISCONNECT		1
	-431	48-10R14-7S		..RECEPTACLE		1
	-432	111111-00-022		..PLATE, EQUIPMENT NO.		1
	440	D304P		.DISCONNECT		1
	-441	48-16R14-7P		..PLUG		1
	-442	MS27291-3		..CABLE SUPPORT ASSY		1
	-443	NSA937211-005		..HOSE, IDENTIFICATION		1
	450	D305J		.DISCONNECT		1
	-451	48-10R16-10S		..RECEPTACLE		1
	-452	111111-00-022		..PLATE, EQUIPMENT NO.		1
	460	D305P		.DISCONNECT		1
	-461	48-16R16-10P		..PLUG		1





ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
35	-462	MS27291-4		..CABLE SUPPORT ASSY		1
	-463	NSA937211-005		..HOSE, IDENTIFICATION		1

COMPONENT MAINTENANCE MANUAL
106113 / 106113A

DETAILED PARTS LIST
PLACARDING
FIGURE 36

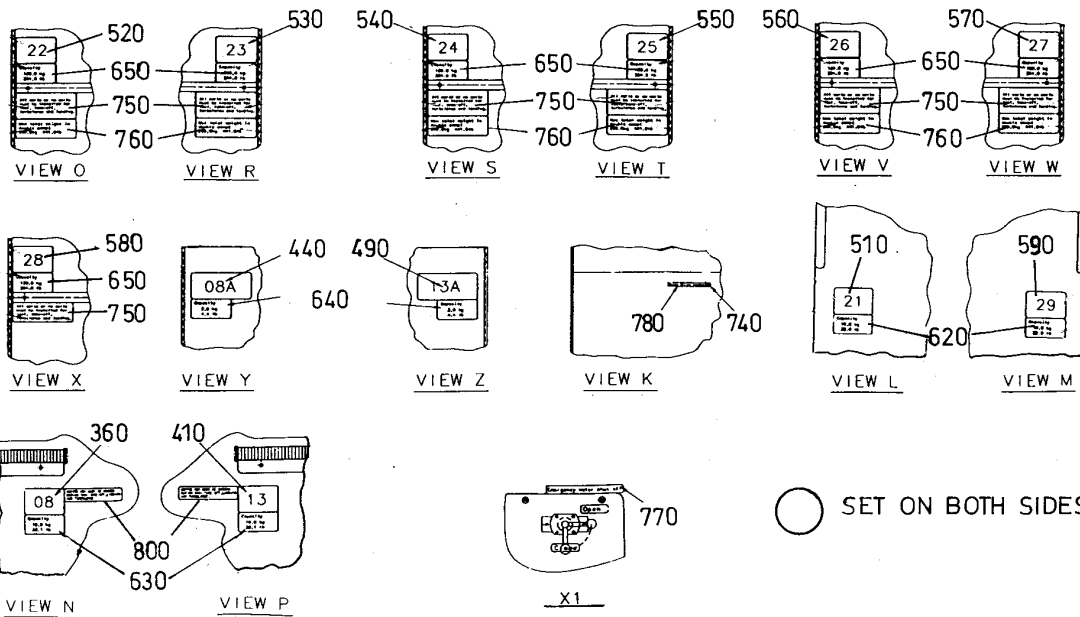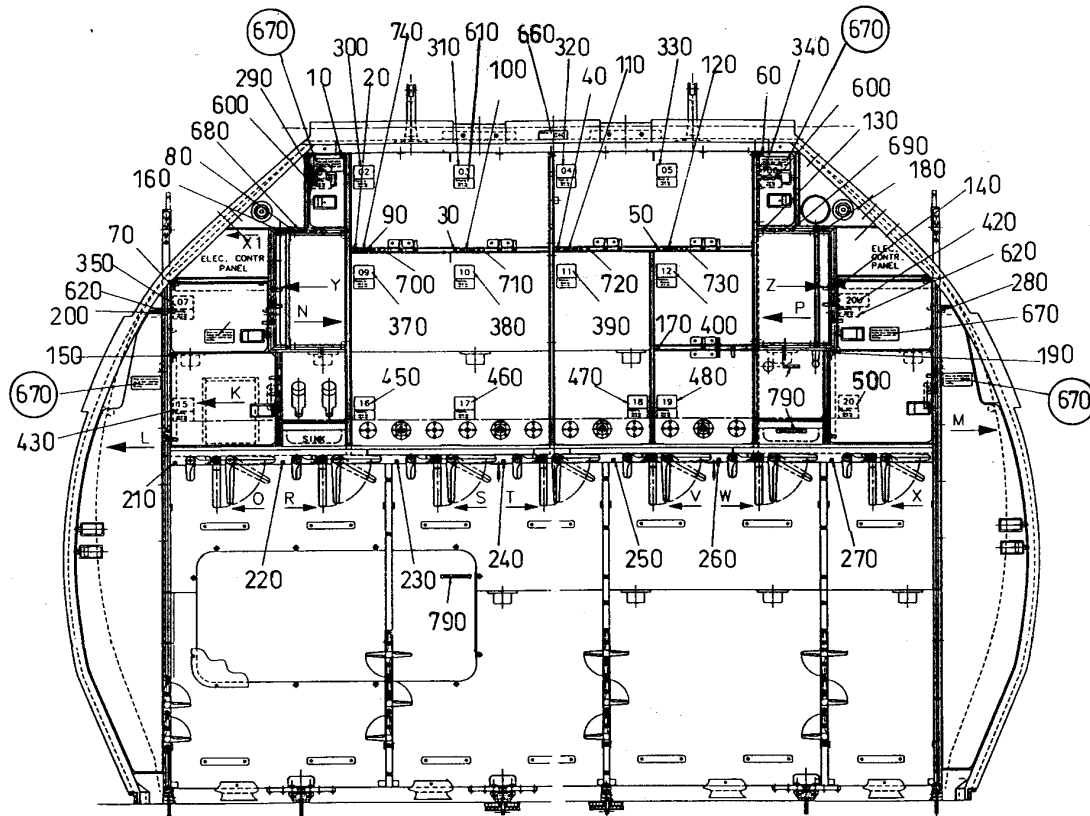

REV B

25-30-44

PAGE 1122
NOV05/99

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

DETAILED PARTS LIST
PLACARDING
FIGURE 36

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
36	-1	106113A60		PLACARDING ASSY (SEE FIG 1 FOR NHA)		RF
	10	115505-00-001		.PLACARD		1
	20	115505-00-002		.PLACARD		1
	30	115505-00-003		.PLACARD		1
	40	115505-00-004		.PLACARD		1
	50	115505-00-005		.PLACARD		1
	60	115505-00-006		.PLACARD		1
	70	115505-00-007		.PLACARD		1
	80	115505-00-008		.PLACARD		1
	90	115505-00-009		.PLACARD		1
	100	115505-00-010		.PLACARD		1
	110	115505-00-011		.PLACARD		1
	120	115505-00-012		.PLACARD		1
	130	115505-00-013		.PLACARD		1
	140	115505-00-237		.PLACARD		1
	150	115505-00-015		.PLACARD		1
	160	115505-00-238		.PLACARD		1
	170	115505-00-019		.PLACARD		1
	180	115505-00-239		.PLACARD		1
	190	115505-00-020		.PLACARD		1
	200	115505-00-021		.PLACARD		1
	210	115505-00-022		.PLACARD		1
	220	115505-00-023		.PLACARD		1
	230	115505-00-024		.PLACARD		1
	240	115505-00-025		.PLACARD		1
	250	115505-00-026		.PLACARD		1
	260	115505-00-027		.PLACARD		1
	270	115505-00-028		.PLACARD		1
	280	115505-00-029		.PLACARD		1
	290	115504-00-001		.PLACARD		1
	300	115504-00-002		.PLACARD		1
	310	115504-00-003		.PLACARD		1
	320	115504-00-004		.PLACARD		1
	330	115504-00-005		.PLACARD		1
	340	115504-00-006		.PLACARD		1

ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
36	350	115504-00-007		.PLACARD		1
	360	115504-00-008		.PLACARD		1
	370	115504-00-009		.PLACARD		1
	380	115504-00-010		.PLACARD		1
	390	115504-00-011		.PLACARD		1
	400	115504-00-012		.PLACARD		1
	410	115504-00-013		.PLACARD		1
	420	115504-00-233		.PLACARD		1
	430	115504-00-015		.PLACARD		1
	440	115504-00-234		.PLACARD		1
	450	115504-00-016		.PLACARD		1
	460	115504-00-017		.PLACARD		1
	470	115504-00-018		.PLACARD		1
	480	115504-00-019		.PLACARD		1
	490	115504-00-235		.PLACARD		1
	500	115504-00-020		.PLACARD		1
	510	115504-00-021		.PLACARD		1
	520	115504-00-022		.PLACARD		1
	530	115504-00-023		.PLACARD		1
	540	115504-00-024		.PLACARD		1
	550	115504-00-025		.PLACARD		1
	560	115504-00-026		.PLACARD		1
	570	115504-00-027		.PLACARD		1
	580	115504-00-028		.PLACARD		1
	590	115504-00-029		.PLACARD		1
	600	115501-00-040		.PLACARD		2
	610	115501-00-200		.PLACARD		14
	620	115501-00-100		.PLACARD		4
	630	115501-00-150		.PLACARD		2
	640	115501-00-020		.PLACARD		2
	650	115501-01-200		.PLACARD		7
	660	IF511-9546		.PLACARD		1
	670	115500-00-039		.PLACARD		10
	680	115500-00-011		.PLACARD		1
	690	115500-00-012		.PLACARD		1
	700	115500-00-001		.PLACARD		1
	710	115500-00-002		.PLACARD		1
	720	115500-00-003		.PLACARD		1
	730	115500-00-004		.PLACARD		1
	740	115500-00-023		.PLACARD		1



ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

FIG	ITEM	PART NUMBER	AIRLINE PART NO.	NOMENCLATURE	EFF CODE	UNITS PER ASSY
36	750	115500-00-139		.PLACARD		1
	760	115500-00-111		.PLACARD		1
	770	115500-00-009		.PLACARD		1
	780	115500-00-013		.PLACARD		1
	790	115500-00-014		.PLACARD		1
	800	115500-00-245		.PLACARD		2



ALBERT MÜHLENBERG APPARATEBAU
COMPONENT MAINTENANCE MANUAL

INTENTIONALLY LEFT BLANK